

VERSALOUPE™

10x LED Lighted Focusing Loupe

Instructions for Use



 
Installing the Battery

Turn loupe over and locate the battery cover inside acrylic base. Unscrew cover and remove as shown below. Install one CR2032 coin cell battery with the correct polarity. Reattach battery door and secure with screw.

REMOVING BATTERY DOOR



REPLACING BATTERY DOOR

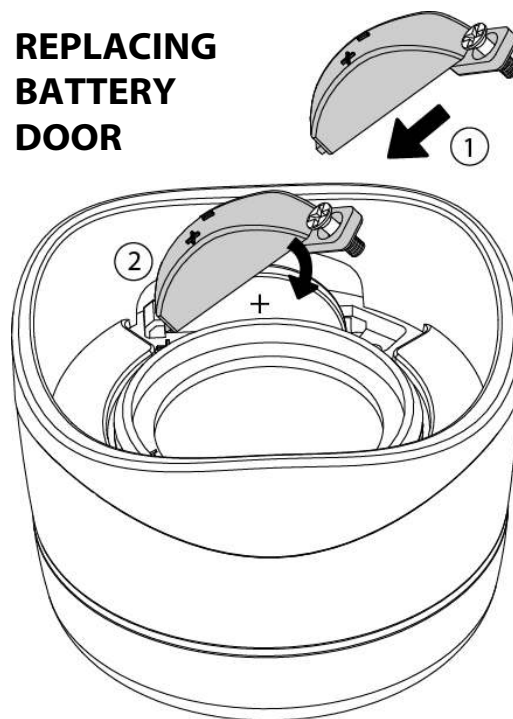


NOTE: Battery may be difficult to remove by hand. Needle nose pliers are recommended.

WARNING: Lithium Coin Cell Batteries: Mixing old and new, different brands or types within brands may cause batteries to leak, overheat or explode. Keep away from fire or excessive heat. Inspect batteries for corrosion or leakage. Insert in direction indicated. Discard button cell batteries carefully. Keep button cell batteries away from children.


Activating LED Light

 Slide switch to turn on/off LED.

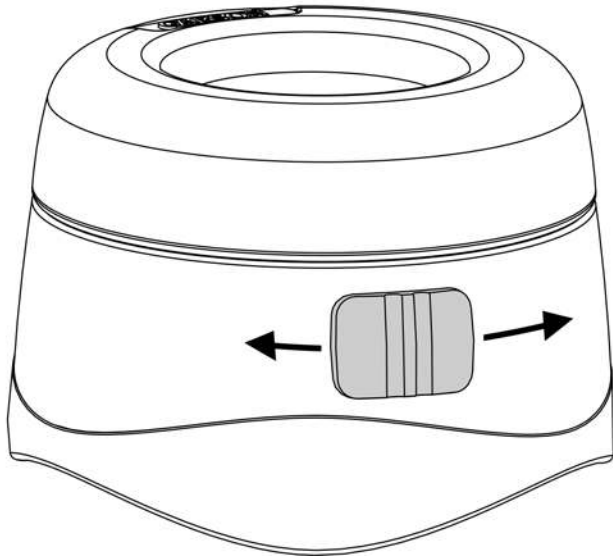

Focusing Loupe

 Place loupe over viewing subject and turn focusing ring until image is sharp.

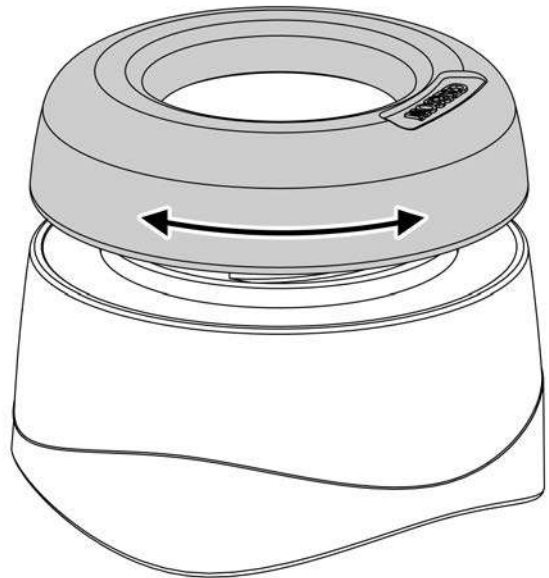

Cleaning Your Magnifier

Clean lens with a soft, clean microfiber cloth by rubbing gently in a circular motion. Moisten the lens cloth with water if necessary. Do not use harsh chemicals, solvents or abrasives as they may damage the lens.

FIRE HAZARD: KEEP MAGNIFIER AWAY FROM DIRECT SUNLIGHT TO PREVENT ACCIDENTAL FIRE.

CAUTION: VIEWING THE SUN CAN CAUSE PERMANENT EYE DAMAGE. DO NOT VIEW THE SUN WITH THIS ITEM. DO NOT PLACE THE LED LIGHTS DIRECTLY ON YOUR EYE AS THIS MAY CAUSE DAMAGE AS WELL.

Customer Service:

If you experience any difficulties, please contact us and we will be happy to help you.

In the U.S.A.

Phone: 1-631-963-5000

Email: info@carson.com

In the E.U.

Phone: +44 (0) 1938 557440

Email: eusupport@carson.com

In the U.K.

Phone: +44 (0) 1938 557440

Email: uksupport@carson.com

For warranty information, visit www.carson.com/warranty