

ENGLISH

Introduction	3
Product content	4
Getting started	4
Switching on and off the device	5
Wearing the earbuds	5
Bluetooth® pairing	6
Playback control	6
Using the Voice Assistant feature	6
Charging the battery	7
Restoring default settings	8
Care and maintenance	8
Warning	8
Hearing protection	8
Safety	8
Technical specifications	9
Audio	9
Connectivity	9
Microphone	9
Battery	9
Warranty	9

ENERGY♥SYSTEM




Manual de usuario / User manual
Manual de l'utilisateur / Manual do usuário

Introduction


Thank you for trusting our company and buying the new *True Wireless Urban Earphones*. We hope you enjoy the product.

Product content

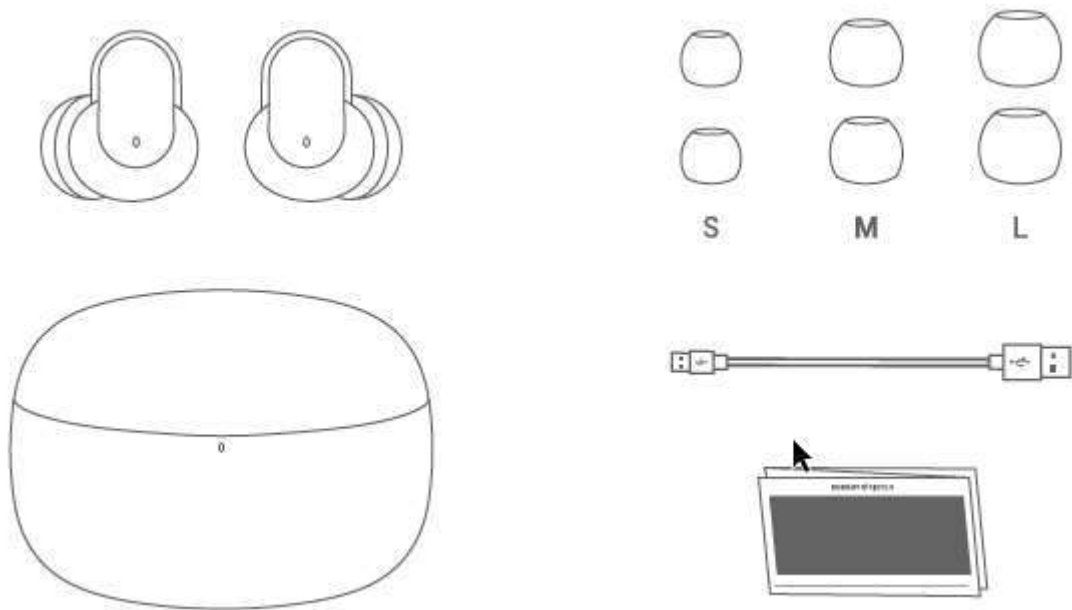


Getting started


When using your earphones for the first time, remove the blue sticker from the charging pins on each earphone. Place the earphones back in the case to start charging.

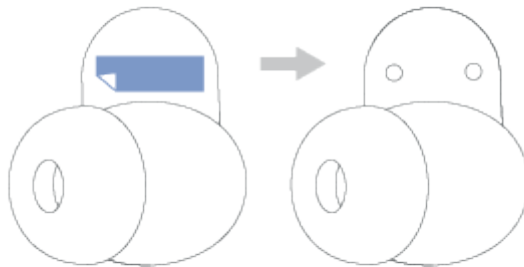

Switching on and off the device

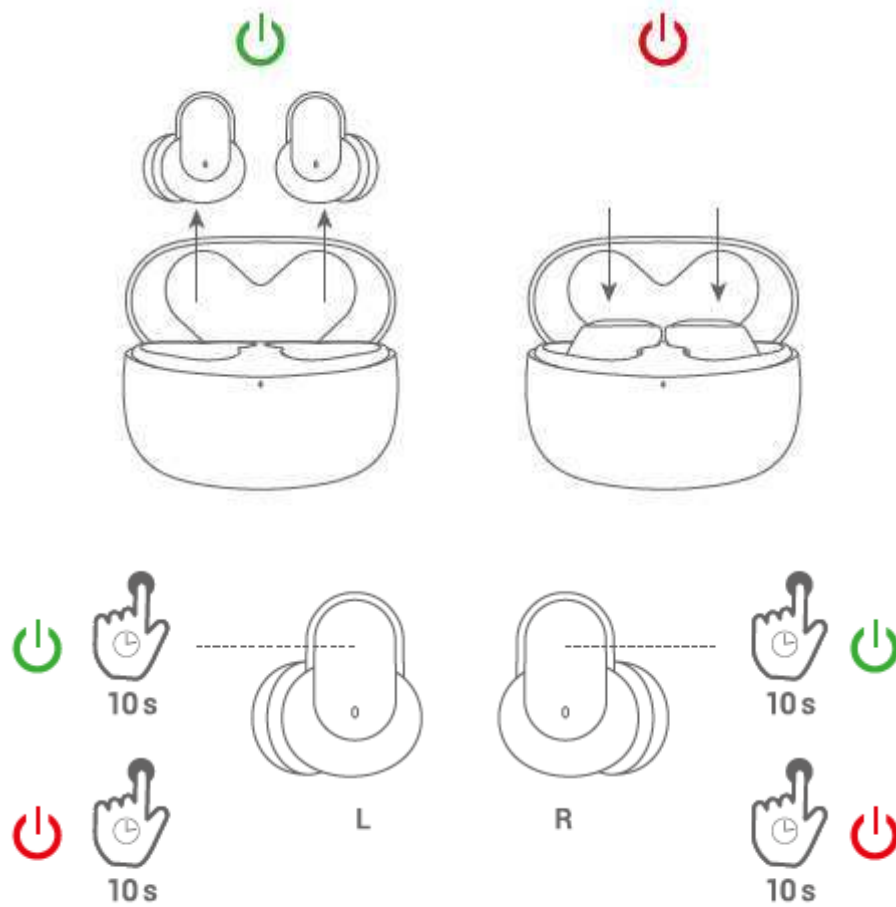


Wearing the earbuds

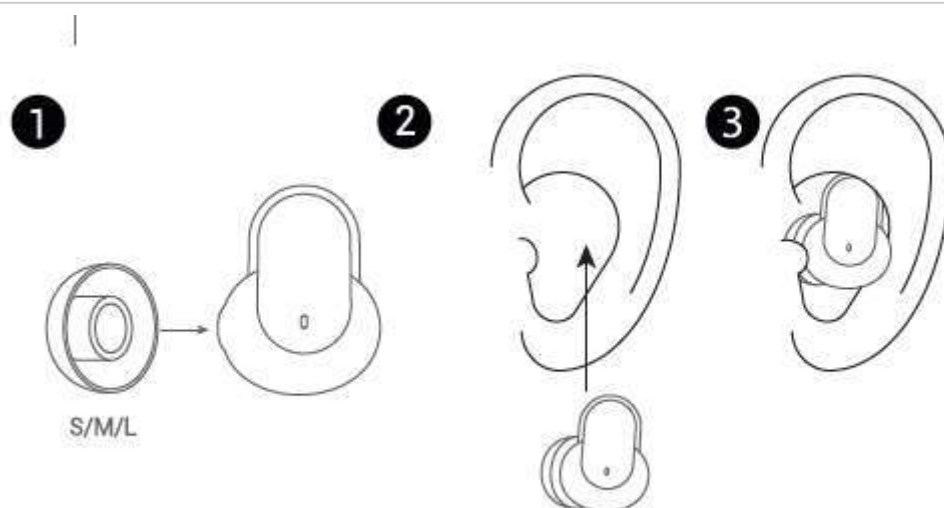

Bluetooth® pairing


1

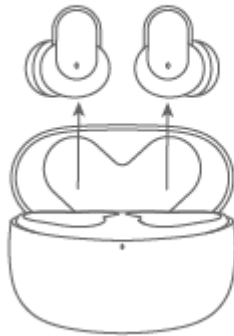

2



Playback control

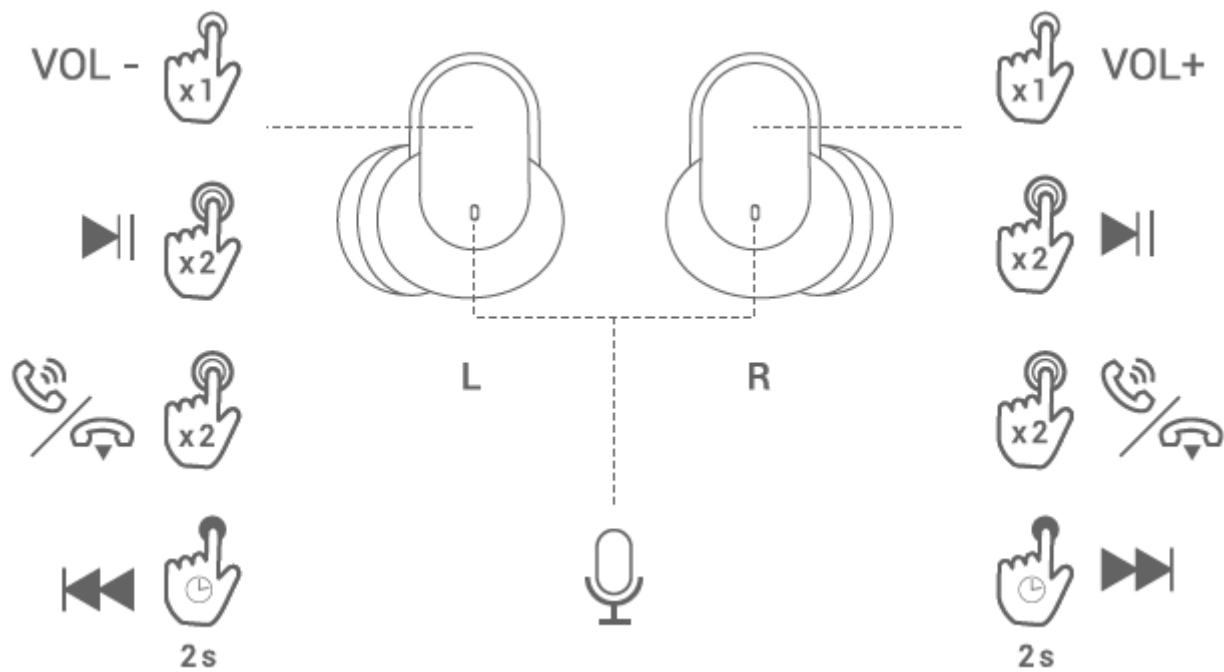

Using the Voice Assistant feature

1



2




3




Charging the battery

Earphones

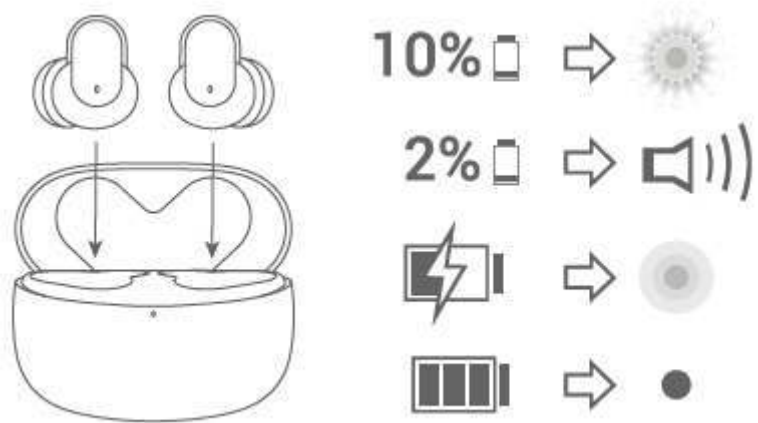

Charging case

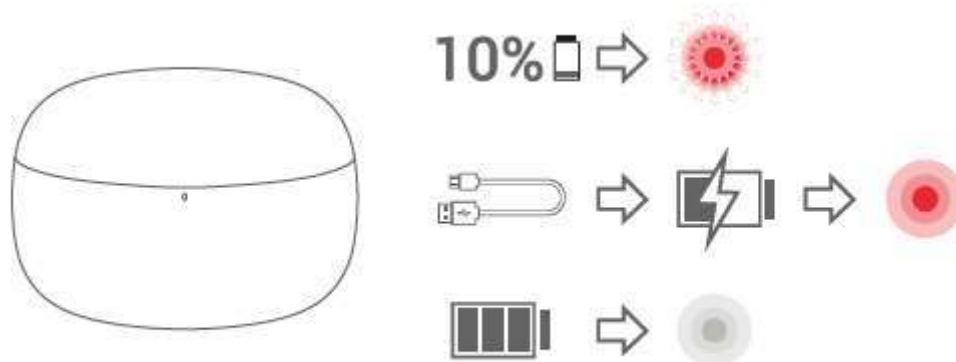


Note: We recommend not leaving your product unused for long periods of time with an empty battery. We recommend charging the battery at least once a month.

Caution: Do not charge your product with fast charging adapters or dedicated laptop chargers, as their output voltage exceeds 5 V and the device may become unusable.

Restoring default settings

To reset the device to factory defaults, with both earphones out of the charging case, press the touch control on the right or left earphone 10 times.

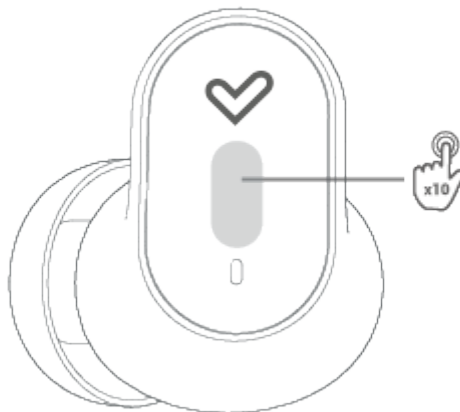

Care and maintenance

- Do not expose your *True Wireless Urban Earphones* to impacts, dust, humidity or high temperatures.
- Use neither corrosive nor abrasive cleaning products.
- Do not disassemble the device. All repair works should be carried out exclusively by qualified staff of Energy Sistem Technology, S.A.
- Make sure your *True Wireless Urban Earphones* are off when you are not using them. Do not store them with an empty battery for long periods of time.
- You can clean the earbuds' external surface and charging connectors with a clean cloth and hand sanitiser. Do not use these products to clean the ear tips or the internal mesh of the earphones. Avoid getting the charging ports and connectors wet.

Note: After every workout session, we recommend thoroughly drying the earphones before putting them back in the case.

Warning

Hearing protection

Listening to loud music can cause irreversible hearing loss. To avoid hearing damage, we recommend the following guidelines:

- Do not listen to loud music for long periods of time.
- Turn the volume down on the source device before using the earphones, then gradually increase the volume to a safe volume level.

Safety

For safety reasons and to avoid possible accidents, we recommend the following safety measures:

- Do not use the earphones while driving or carrying out any other activity that requires special attention.
- Keep the product, packaging and accessories out of the reach of children and pets to avoid accidents and choking hazard.

Technical specifications

Audio

- Frequency response: 20 Hz ~ 20 kHz
- Driver diameter: 10 mm
- Design: in-ear
- Type: dynamic
- THD: < 1%

Connectivity

- Bluetooth® 5.3 (class 2) wireless technology.
- Frequency range: 2.4 GHz
- Maximum output power: < 20.00 dBm
- Compatible Bluetooth profiles: HSP / HFP / A2DP / AVRCP
- Compatible with SBC / AAC codecs
- Up to 20 m distance range
- True Wireless function with auto-pairing
- Hands-free function
- Voice assistant compatible with Google/Siri

Microphone

- Type: built-in microphone
- Sensitivity: -42 dB ± 3 dB (@1 kHz)
- Frequency response: 100 Hz ~ 10 kHz

Battery

Earbuds:

- Capacity: 35 mAh (each earbud)
 - Type: lithium-polymer battery
 - Battery life at medium volume: 5 hours*
 - Charging time: 1 hour
 - Charging method: charging case
- This value is approximate. The battery life depends on the selected volume and type of music.

Charging case:

- Capacity: 300 mAh
- Type: lithium-polymer battery
- Extra battery life: 17 hours*
- Charging time: 1.5 hours
- Charging method: USB Type-C

Warranty

Find the full warranty terms and conditions at:

<https://www.energysistem.com/terms-warranty>