



Philips Egg Cooker 3000 Series Perfectly cooked eggs, every day

HD9137/90

- Different cooking levels
- Family size
- 400 W power
- Poached accessory
- Ready signal

Perfectly cooked eggs, every day

3 sets of plates for paninis, sandwiches, waffles

- Precise results measuring cup with water level markings
- 400 W of cooking power
- 'Ready' signal tone
- Family sized with six-egg capacity
- Poached egg tray additional accessory for up to 3 eggs
- Egg piercer and beaker accessory for expert results
- The compact, easy-to-store design means all accessories fit inside
- 'On' light
- Easy to clean
- Save up to 70% energy with the egg cooker

Highlights

Precise results measuring cup



Cooking the perfect egg is a precise balance of water, power and time. Depending on the type of egg you're preparing, you'll need to add a different amount of water. This measuring cup specifies the different water level markings for best results.

400 W power



The egg cooker's high 400 W power ensures perfect results, every time, for all types of eggs.

'Ready' signal



The 'ready' signal tone gives a short bleep to indicate that cooking is finished and your eggs are ready.

Family sized



Serve the whole family by cooking up to six boiled eggs or three poached eggs at a time.

Poached egg tray accessory



The egg cooker comes with a poached egg accessory tray. Easy to use and clean, simply slot on the tray to cook up to 3 delicious poached eggs at the same time.

Egg piercer accessory



Boiled eggs need to be pierced before cooking to ensure they don't burst. The egg cooker includes an egg piercer. It's housed inside a hand beaker for ease of use and to capture any spills.

Compact, easy-to-store design



Designed to minimise clutter and make sure that you don't lose accessories, the egg cooker is small, compact and able to store all accessories (measuring cup, poaching tray, egg piercer and beaker) within it.

'On' light



It's all in the details. The elegant 'on' light shows when the egg cooker is switched on.

Easy to clean



No fuss or mess eggs. The egg tray and poached egg tray accessory are both removable, easy to clean and can be cleaned in the dishwasher for ultimate ease.

Specifications

General Specification

Interface: Rotary knob
Non-stick coating: No
Product Type: Egg cooker
Recipe book: Online DFU
Primary Material: PP
Non-slip feet: Yes, 4 pcs
Cord storage: No
EU declaration of conformity: Yes
Cord length: External length 70-75 cm
Dishwasher-safe parts: Egg tray, egg poacher
Warranty: 2 years

Technical Specifications

Voltage: 220-240 V
Battery Product: No
Power: 400 W
Frequency: 50-60 Hz

Safety

Automatic shut-off: No

Weight and Dimensions

Product Length: 20.6 cm
Product Width: 14 cm
Product Height: 13.5 cm
Product Weight: 560 g
Package Length: 23 cm
Package Width: 13.6 cm
Package Height: 15.4 cm
Package Weight: 800 g

Country of Origin

Produced In: China

