

A line drawing of the A4TECH BH220 headphones, showing the headband, ear cups, and a flexible boom microphone. To the right of the drawing, the model number 'BH220' is printed vertically. To the left, the text 'QUICK START GUIDE' is displayed in large, bold, sans-serif capital letters. At the bottom left is the Bluetooth v5.3 logo. At the bottom right is the 'FSTYLER COLLECTION' logo, which includes a stylized 'F' icon.

This section contains three white line-art icons on a dark blue background. On the left is a Bluetooth headset with a circular earpiece and a flexible boom with two microphones. In the center is a USB Type-C rechargeable cable, shown with a Type-C connector on one end and a standard USB-A connector on the other. On the right is a user manual, represented by three overlapping document pages.

Diagram illustrating the 3-Ways Foldable feature of the headphones, showing three states of the headband and ear cups:

- Fully Open (Left): Standard listening position.
- Partially Folded (Middle): Headband and ear cups folded inward.
- Fully Folded (Right): Headband and ear cups folded flat against each other.

Short Press: Volume +
Long Press: Next Track

Music Playback: Play/Pause (Short Press)
Incoming Call: Answer/Hang-up (Short Press)


Short Press: Volume -
Long Press: Previous Track

Power Switch
ON: Enter pairing mode, the indicator light
flashes in red and blue alternately.
OFF: Power Off

(For The First Time Use)

- ① Power Switch "ON" , the indicator light flashes in Red and Blue alternately when pairing.
- ② Choose "A4TECH BH220" from your Bluetooth device.
- ③ The indicator flashes in Blue slowly after the headset is connected.

(For The Second Time Use)

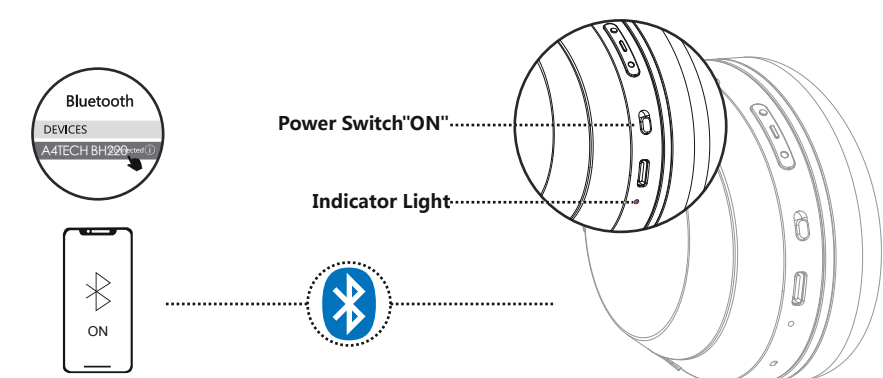

The device you connected last time will be remembered.
Automatically connect back to the last device after power on.

Warm Tips:

Make sure the Bluetooth devices is turned on.

The diagram illustrates the charging process and battery status indicators for the device. It shows a laptop connected to a USB-A port, which is connected to a USB-C cable. The cable is plugged into the device's USB-C port. A callout shows a close-up of the device's top edge, highlighting the USB-C port and the battery status indicator (a small red light). A legend indicates that a solid red light means 'Charging' and a light-off state means 'Fully Charged'. Below the main diagram, a sequence of icons shows a battery level indicator, a charging symbol, and a clock icon, indicating a '1.5H Charging Time'. A note at the bottom states: 'Flashing red light indicates when the battery is below 25%'.

Speaker Unit:	40mm Hybrid Diaphragm
Frequency:	20Hz - 20KHz
Impedance:	32 ohm
Sensitivity:	100 dB
Mic. Type:	ENC Omni-Directional
Mic. Frequency:	100Hz - 10KHz
Mic. Sensitivity:	-42 dB
Wireless Mode:	Bluetooth v5.3
Operation Distance:	Up to 10 m (32 feet)
Battery Type:	400mAh Lithium Battery
Charging Time:	1.5H
Playback Time:	40 Hours (50% volume)
USB Type-C Charging Cable:	50 cm
Weight:	198g

1. To avoid hearing damage, do not use headphones at a high volume for a long time.
2. Never disassemble or modify your headphones for any reason. Otherwise, it may cause the headphones to malfunction, which is not covered by the warranty.
3. Do not get the device wet with liquids, otherwise will cause serious damage to the device.
Damage caused by water entering the device will not be covered by the manufacturer's warranty.
4. Please do not place the product in an environment where the temperature is too high or too low (above 45°C or below -20°C).
5. Not suitable for children under 3 years old.
6. Do not use the device during a thunderstorm.

THE FOLLOWING ACTIONS MAY DAMAGE THE PRODUCT.

1. To disassemble, bump, crush, or throw into the fire is forbidden for lithium batteries.
2. Do not expose under the strong sunlight.
3. The discard of the battery should obey the local law, if possible please recycle it.
Do not dispose of it as household garbage, because it may cause an explosion.
4. Do not continue to use if severe swelling occurs.
5. Please try to avoid charging in an environment below 0°C.
6. The user is not allowed to remove or replace the batteries unless specified statement in the user manual.



The Bluetooth word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by A4TECH is under license. Other trademarks and trade names are those of their respective owners.



www.a4tech.com



Scan for E-Manual