



CRD-515

08/24



FR

Cet appareil, ses
cordons, ses accessoires
et ses batteries sont
recyclables

À DÉPOSER
EN MAGASIN



ou

À DÉPOSER
EN DÉCHÈTERIE



Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

 
Safety information

Please read the safety instructions carefully before using the product for the first


time and keep the instructions for future reference.

1. This product is not a toy. Keep it out of reach of children.
2. Keep product out of the reach of children and pets to avoid chewing and swallowing.
3. Never use old and new batteries or different types of batteries together. Remove the batteries when you are not using the system for a longer period of time. Check the polarity (+/-) of the batteries when inserting them in the product. Wrong positioning can cause an explosion. Batteries are not included.
4. Product operating and storage temperature is from 0 degree Celsius to 40 degree Celsius. Under and over this temperature might affect the function.
5. Never open the product. Touching the inside electrics can cause electric shock. Repairs or service should only be performed by qualified personnel.
6. Do not expose to heat, water, moisture, direct sunlight!
7. Please protect your ears against loud volume. Loud volume can damage your ears and risk in hearing loss.
8. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
9. Do not use non original accessories together with the product as this can make the product functionality abnormal.

Overview of the radio

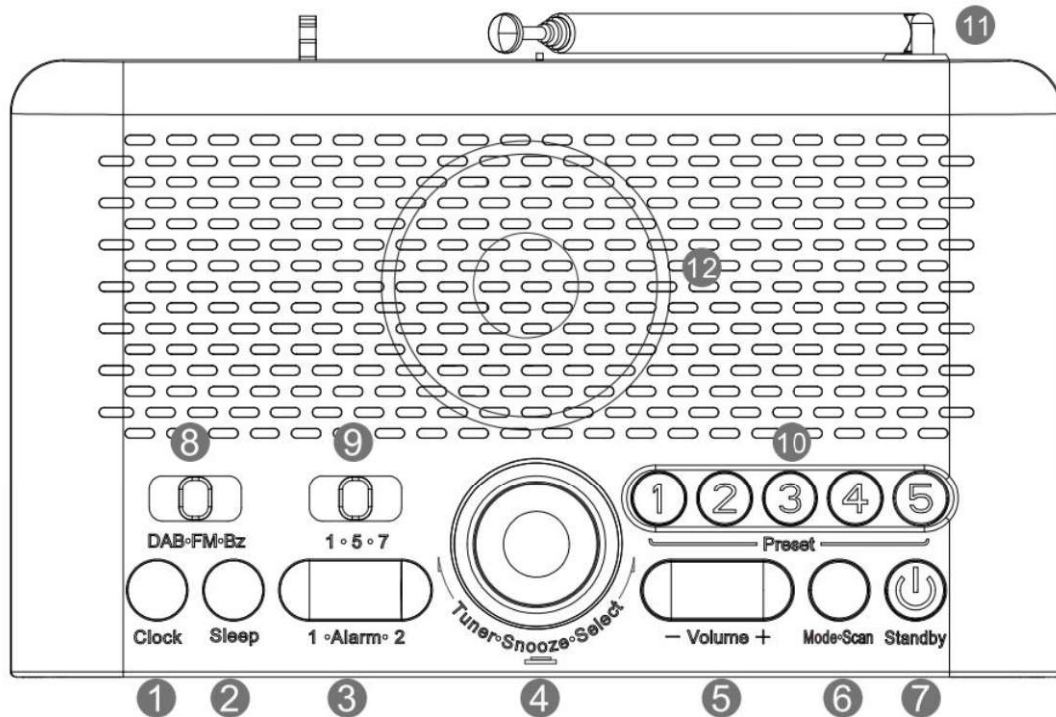

- 1:Clock -set clock manually
- 2:Sleep -set automatic shutdown time
- 3:Alarm1/2 -alarm check/setting/of
- 4:Tuning knob -change stations/select/snooze
- 5:Volume -volume down/up
- 6:Mode/scan-DAB/FM/BT mode switch, auto scan
- 7:Standby -turn off radio, turn off power
- 8:DAB/FM/Bz- alarm sound select
- 9:1/5/7- alarm schedule
- 10:Number(1-5)-preset stations address
- 11:360 telescopic antenna
- 12:Speaker and woofer unit

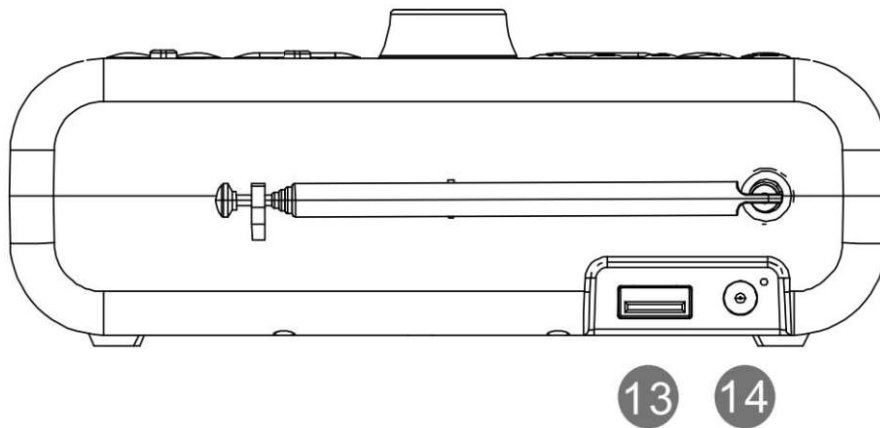 

13:USB 5V output for other device

14:DC 5V input

Product specification

- Dab radio tuning range:170-240MHz(5A-13F)
- FM radio tuning range:87.5-108MHz
- Bluetooth version:5.0
- Bluetooth name:DAB clock
- 5 DAB preset stations and 5 FM preset stations setting
- Clock setting:auto synchronization by DAB date or setting manually
- Alarm timer:dual alarm
- Alarm sound source:DAB/FM/Buzzer
- Alarm schedule:once/weekdays/every day
- Sleep timer:set the automatic shutdown time of the radio
- Screen size:3.5 inch led digital screen
- Speaker:2 inch 3 W speaker and woofer unit
- Power supply:DC-in 5V2A
- Power output:USB out power to other device
- Operation power:2W
- Antenna:telescopic antenna
- Standby power:<0.5w(clock display)

How to use clock and alarm

1.Connect power

Please use any USB main power adapter supply power to the radio(can supply 5V>1A USB out put)

Use the USB-DC cable in box connect the radio.

 
2.Power indicator

When the power supply is connected, the power indicator will light up (as shown in the figure below)



3.Supply power to phone or other device

When the unit is power by AC adapter,it can power to phone or other device by USB port on the back of the radio.

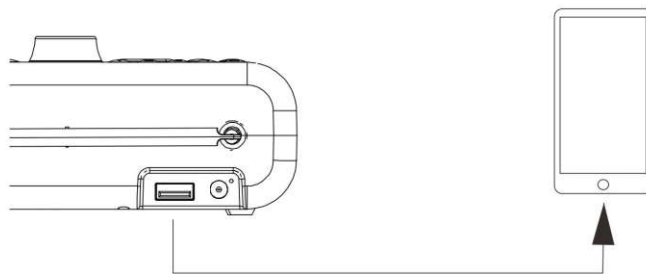

4.Power ON/OFF

Press<standby>enter standby mode or turn on radio, when you don't use this unit for a long time,press and hold <standby>for 3s cut down the power.

5.Clock setting

-In any mode,press<clock>the hour digital begin to flash, turn knob to adjust hours,then press<clock>the minutes digital begin to flash,turn knob to adjust minutes,then press knob to save the setting.

-Time will be automatically synchronized from DAB signal when DAB radio is working.

-In radio or bluetooth playing mode,screen will show clock after a few seconds without any operation.



6. Alarm setting

-Check alarm timer:

 
In any mode,press<alarm1/2>to check the alarm timer, the alarm time is flash,press knob to stop flash

-Set alarm on/off:

Press<alarm1/2>repeat to active or deactivate the alarm timer,if the alarm is active<🕒1/🕒2>is displayed,if the alarm is deactivated <🕒1/🕒2>is disappears.press knob to save.


-Set alarm timer

Press and hold<alarm1/2>for 3 seconds,alarm timer hour begin to flash,turn knob to change hour,press<alarm1/2> save hour,and minutes begin to flash the same time.the same way tochange minutes.then press knob to save the alarm timer.

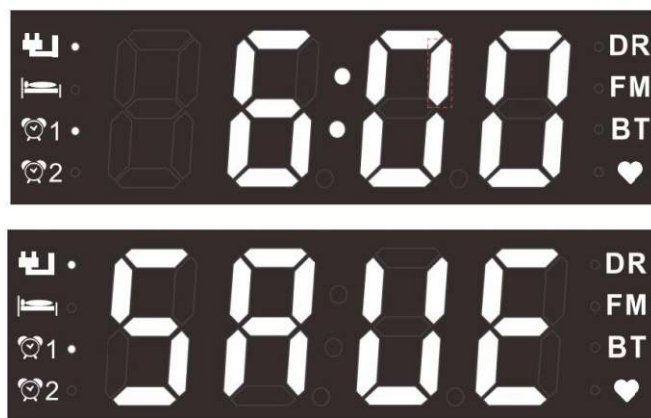

-Threw switch to set alarm sound source,three kinds of sound can be selected:DAB/FM/Buzzer

 -Threw switch to set alarm schedule,three mode can be set: <1/5/7>is mean once/weekdays/every day

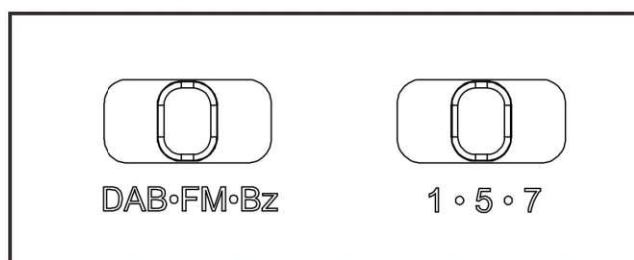

7. Sleep timer

In radio /bluetooth work mode,press<sleep>to set auto turn off timer,turn knob to select 15/30/60/90/OFF minutes sleep,press knob to confirm. 《⏰》 is displayed.



8.Snooze

When alarm ring,press knob 1-4 times to snooze 5/10/15/30 minutes.turn knob or press any button to turn off alarm.



9.Dimmer

In standby mode,press knob to adjust screen brightness, there are high/medium/low/off 4 levels of brightness adjustable.

How to use radio and bluetooth

1.DAB radio

- Press<mode>enter DAB mode,<DR>is display
- Press and hold<scan>for 3s to search all DAB stations
- Turn knob select the DAB stations
- Press and hold<1-5>preset number for 3s,store the playing station as a preset station in this address number
- Press<1-5>play the preset stations stored in this number
- When the playing station is preset station,<●>is display
- When no stations found,screen will show<NO-C>.
- When the playing station signal is weak,screen will show <NO-S>.



No channels found



The palying channel has poor or no signal

2.FM radio

- Press<mode>enter FM radio,<FM>is display.
- Turn knob manual search FM station by 0.1MHz step, press knob auto search.
- Press and hold<1-5>preset number for 3s,store the playing station as a preset station in this address number.
- Press<1-5>to play the preset stations stored in this number
- When the playing station is preset station,<♥> is display



3. Bluetooth streaming play

- Press <mode> enter Bluetooth mode, <BT> is display, bluetooth ready to connect, <BLUE> begin to flash.
- Use phone bluetooth search the radio name <DAB clock> and pair. <BLUE> stop flash
- Turn knob to previous/next music, press knob to play or pause.
- Press and hold knob for 3s to disconnect bluetooth



Troubleshooting

Charging LED is not light

- Check charging cable or the power adaptor

No sound

- Adjust the volume

Poor DAB or FM radio reception

- Make sure local DAB radio signal is strong enough
- Adjust the length and direction of antenna to get better receptions.

There is buzzing sound in speaker when volume is maximum

- Volume is too loud overload the speaker's maximum power, please turn down the volume.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



denver.eu



Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type CRD-515 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: denver.eu and then click the search ICON on topline of website. Write model number: CRD-515. Now enter product page, and RED directive is found under downloads/other downloads.

DAB Operating Frequency Range:170-240MHz(5A-13F)

Radio Operating Frequency Range:87.5-108MHz

Max Output Power:2W

DENVER A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

www.facebook.com/denver.eu

Contact

Main contact point: contact.hq@denver.eu

Nordics

Headquarter
Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

Phone: **+45 86 22 61 00**
(Push "1" for support)

E-Mail
For technical questions, please write to:
support.hq@denver.eu

For all other questions please write to:
contact.hq@denver.eu

Benelux

DENVER BENELUX B.V.
Barwoutswaarder 13C+D
3449 HE Woerden
The Netherlands

Phone: **0900-3437623**
E-Mail: **support.nl@denver.eu**

Spain/Portugal

DENVER SPAIN S.A
Ronda Augustes y Louis Lumiere, nº 23 – nave
16
Parque Tecnológico
46980 PATERNA
Valencia (Spain)

Spain
Phone: **+34 960 046 883**
Mail: **support.es@denver.eu**

Portugal:
Phone: **+35 1255 240 294**
E-Mail: **denver.service@satfiel.com**

Germany

Denver Germany GmbH Service
Max-Emanuel-Str. 4
94036 Passau

Phone: **+49 851 379 369 40**

E-Mail
support.de@denver.eu

Fairfixx GmbH
Repair and service
Rudolf-Diesel-Str. 3 TOR 2
53859 Niederkassel

(for TV, E-Mobility/Hoverboards/Balanceboards,
Smartphones & Tablets)

Phone: **+49 851 379 369 69**
E-Mail: **denver@fairfixx.de**

Austria

Lurf Premium Service GmbH
Deutschstrasse 1
1230 Wien

Phone: **+43 1 904 3085**
E-Mail: **denver@lurfservice.at**

Poland

LetMeRepair Poland sp. z o.o.

ul. Częstochowska 140
62-800 Kalisz

Phone: **62 75 38 092**
E-Mail: **denver-service@letmerepair.pl**

Godziny pracy: 8 – 18 (poniedziałek – piątek)

If your country is not listed above,
please write an email to
support@denver.eu



Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

denver.eu
facebook.com/denver.eu

