



BLAST PORTABLE BLENDER BC151UK Series | Owner's Guide



IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS BEFORE USE • FOR HOUSEHOLD USE ONLY

	Read and review instructions for operation and use.
	Indicates the presence of a hazard that can cause personal injury, death, or substantial property damage if the warning included with this symbol is ignored.
	For household use only.
	Indicates location to attach USB-C cord for charging unit.
When using electrical appliances, basic safety precautions should always be followed, including the following:	

⚠WARNING: To reduce the risk of injury, fire, electrical shock or property damage, basic safety precautions must always be followed, including the following numbered warnings and subsequent instructions. Do not use appliance for other than intended use.

⚠WARNING: Handle the BlastBlade Assembly with care, as the blades are sharp.

⚠WARNING: Remove utensils prior to processing. Failure to remove may cause the blending vessel to be damaged or to shatter, which may cause personal injury.

⚠WARNING: DO NOT put your hands inside the vessel or anywhere near the BlastBlade Assembly. Blades can still activate when the sip lid is removed.

⚠WARNING: DO NOT blend hot, effervescent, or carbonated liquids. Doing so may cause excessive pressure buildup, resulting in risk of laceration and/or the user being burned.

- 1 Read all instructions prior to using the appliance and its accessories.
- 2 Carefully observe and follow all warnings and instructions. This unit contains electrical connections and moving parts that potentially present risk to the user.
- 3 **ALWAYS** exercise care when handling the BlastBlade Assembly. The blades are sharp, handle carefully. **ONLY** grasp the BlastBlade Assembly by the motor base. Failure to use care when handling the BlastBlade Assembly will result in a risk of laceration.
- 4 Take your time and exercise care during unpacking and appliance setup. This appliance contains sharp, loose blades that can cause injury if mishandled.
- 5 Take inventory of all contents to ensure you have all parts needed to properly and safely operate your appliance.
- 6 **DO NOT** blend hot liquids or carbonated liquids, as doing so may cause pressure buildup, resulting in risk of burns, lacerations, or other injuries to the user.
- 7 **DO NOT** fill the blending vessel past the MAX FILL line.
- 8 Blades are sharp. Handle carefully Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
- 9 Before use, wash all parts that may contact food. Follow washing instructions covered in this instruction manual.

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS BEFORE USE • FOR HOUSEHOLD USE ONLY

- 10** To protect against the risk of fire from battery damage, **DO NOT** submerge the motor base in any form of liquid.
- 11** **DO NOT** store outdoors or allow the product to get submerged in liquid.
- 12** **DO NOT** allow children to operate this appliance or use as a toy. Close supervision is necessary when any appliance is used near children.
- 13** This appliance is **NOT** intended to be used by people with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 14** Before each use, inspect BlastBlade Assembly for damage. If a blade is bent or damage is suspected, contact SharkNinja to arrange for replacement.
- 15** **DO NOT** attempt to sharpen blades.
- 16** **DO NOT** allow any part of the unit to contact hot surfaces, including hobs and other heating appliances.
- 17** **ALWAYS** use the appliance on a dry and level surface.
- 18** Keep hands, hair, and clothing out of the vessel when loading and operating.
- 19** **ONLY** use attachments and accessories that are provided with the product or are recommended by SharkNinja. The use of attachments not recommended or sold by SharkNinja may cause fire, electric shock, or injury.
- 20** During operation and handling of the appliance, avoid contact with moving parts.
- 21** **DO NOT** operate the appliance with an empty container.
- 22** **DO NOT** microwave any containers or accessories provided with the appliance.
- 23** **DO NOT** perform grinding operations.
- 24** Before operation, ensure all utensils are removed from containers. Failure to remove utensils can cause the vessel to shatter and potentially result in personal injury and property damage.
- 25** **DO NOT** attempt to defeat the interlock mechanism. Ensure the vessel and sip lid are properly installed before operation.
- 26** **DO NOT** expose the containers and accessories to extreme temperature changes. They may experience damage.
- 27** **NEVER** leave the appliance unattended while in use.
- 28** If you find unmixed ingredients sticking to the sides of the cup, turn off the appliance using the Power Button, and use a scraper to dislodge ingredients.
- 29** **DO NOT** attempt to remove the vessel and/or sip lid from the motor base while the BlastBlade Assembly is still spinning. Allow the appliance to come to a complete stop before removing lid and/or vessel.
- 30** **DO NOT** store ingredients for extended amounts of time before or after blending them. Some foods may contain active ingredients or release gases that will expand if left in a sealed container, resulting in excessive pressure buildup that can pose a risk of injury.

- 31** If the appliance overheats, a thermal switch will activate and temporarily disable the motor. To reset, turn **OFF** the Ninja Blast Portable Blender using the Power Button and allow it to cool for 15 minutes before using again.
- 32** **DO NOT** process dry ingredients without adding liquid to the blending vessel. Unit is not intended for dry blending.
- 33** Operate **ONLY** with the sip lid on.
- 34** **DO NOT** refrigerate or freeze blender.
- 35** Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- 36** Do not misuse the appliance to avoid potential injury.

BATTERY USE

- 1** The battery is the power source for the Ninja Blast Portable Blender. Carefully read and follow all charging instructions.
- 2** **DO NOT** incinerate this appliance even if it is severely damaged. The lithium-ion batteries can explode in a fire. Always properly recycle products powered by lithium-ion batteries.
- 3** Since there is no power cord, prevent accidental blade activation by ensuring the blender is turned **OFF** when not in use or when drinking from the spout lid.
- 4** Keep the battery away from all metal objects such as paper clips, coins, keys, nails, or screws. Shorting the battery terminals together increases the risk of fire or burns.
- 5** Under abusive conditions, liquid may be ejected from the battery. Avoid contact with this liquid, as it may cause irritation or burns. If contact occurs, flush with water. If liquid contacts eyes, seek medical help.
- 6** This appliance contains batteries that are only replaceable by skilled persons.
- 7** This appliance contains batteries that are non-replaceable.

SAVE THESE INSTRUCTIONS

PARTS

 
- A Sip Lid
- B Carry Handle
- C Blending Vessel*
- D Vessel Cap*
- E Blade Cover*
- F Motor base with BlastBlade Assembly
- G USB-C Charging Cord
- H Charging Port

*Blending vessel sizes and quantity, and accessories vary by model.

CHARGING:

Charge the unit for at least 2 hours for a full battery. LEDs will illuminate GREEN when fully charged.

Charging port is located at the back of the motor base. Use provided USB-C charging cord with a 5V 3A Power Supply.

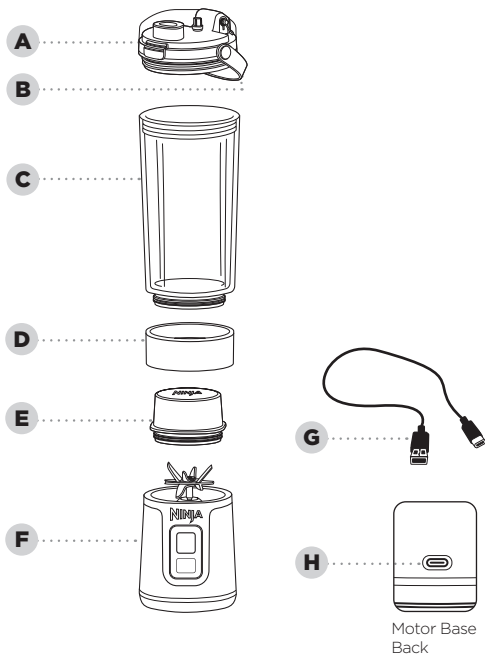

BEFORE FIRST USE

IMPORTANT: Review all warnings at the beginning of this Owner's Guide before proceeding.

- NOTES:**
- Handle the BlastBlade Assembly by grasping around the motor base.
 - All attachments are BPA free. All attachments **EXCEPT** the motor base are top-rack dishwasher safe. **DO NOT** use a Heavy cycle. Ensure lid and vessel are removed from motor base before placing in the dishwasher. Exercise care when handling BlastBlade Assembly.

- 1 Remove all packaging materials from the unit. Exercise care when unpacking blade assembly, as the blades are sharp.
- 2 Wash vessel, lid, and blade assembly in warm, soapy water using a dishwashing utensil with a handle to avoid direct contact with the blades. **DO NOT** submerge the motor base in water when cleaning. Exercise care when handling blade assembly, as the blades are sharp.
- 3 Thoroughly rinse and air-dry all parts.

USING THE CONTROL PANEL





- PROGRAMS:**
- START/STOP BUTTON**
Press Start/Stop button once to activate the 30-second blend cycle.
- POWER BUTTON**
Press Power button to turn unit **ON** and **OFF**.

ERROR STATES	LED Shows	Solutions
Vessel and Base are Not Aligned	Flashing WHITE	Ensure vessel and motor base are aligned using the arrows on the back of motor base and vessel.
Blades are Blocked	Flashing ORANGE	Move lodged ingredients from blade & re-start blend program.
Requires Charge	Solid RED	Charge unit.
Abnormal charger	Flashing RED and BLUE	Defective charger, unplug & find correct 5V 3A charger
Unit Cool Down Time Out	Clockwise Moving ORANGE LEDs	Let unit sit at room temp for 15 minutes before using again.
While Charging	Flashing WHITE and RED	Call Customer Service.
While Blending	Flashing RED in bottom left and top right	Call Customer Service

USING THE BLENDING VESSEL


IMPORTANT: Review all warnings at the beginning of this Owner's Guide before proceeding.

  - 1 Ensure the motor base is fully charged and the vessel is properly installed by aligning vessel arrow with motor base arrow located on the back of the motor base.

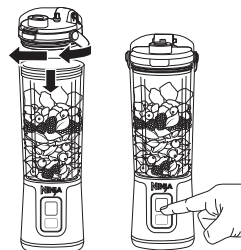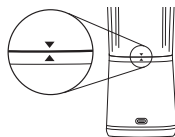

- 2 Turn unit **ON** by pressing the  button until Start/Stop button lights illuminate.
- 3 Add ingredients, starting with liquids to the **MIN LIQUID** line then solid ingredients. If using ice, always add last. **DO NOT** fill ingredients past the **MAX FILL** line. Secure lid onto the vessel, twisting clockwise to tighten.
- 4 Blend for a 30-second blend cycle by pressing the Start/Stop button.

 - 5 Open the sip lid to sip, or remove the lid to pour out blender outputs into another container. **DO NOT** remove vessel from motor base when filled. Empty vessel prior to removing from motor base.
- 6 After blending, power **OFF** the unit by pressing the  button. Motor base should be turned **OFF** when drinking from the sip lid and when blender is no longer in use.
- 7 Refer to the Care & Maintenance section for cleaning and storage instructions.

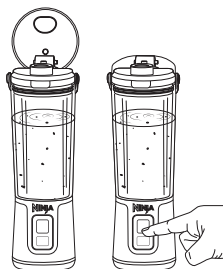

INSTALLING VESSEL CAP AND BLADE COVER

After blending is complete, ensure the lid is on tight and turn the blender upside down. Twist anti clockwise to remove the motor base from the vessel. Install the flat lid on the bottom of the vessel and turn clockwise.

Install the blade cover on the motor base to cover the exposed blades by twisting anti clockwise.

CARE & MAINTENANCE

CLEANING

Blades can still operate when the lid is removed. Always turn the unit OFF when cleaning without the lid on or when the BlastBlade Assembly is exposed.

Hand-Washing

Wash vessel, lid, and BlastBlade Assembly in warm, soapy water. Use a dishwashing utensil or cloth to clean the BlastBlade Assembly on the motor base. Exercise care when handling the BlastBlade Assembly on the motor base as the blades are sharp. Wipe the motor base with a clean, damp cloth. **DO NOT** submerge the motor base in a water. Thoroughly rinse and air-dry all appropriate parts.

Motor Base

The USB-C port is water resistant, which means the motor base can get rinsed in the sink; **HOWEVER DO NOT** put the motor base in the dishwasher or submerge it in water. Ensure the USB-C charger is not inserted before cleaning.

DEEPER CLEAN

Dishwasher

Vessel and sip lid are top-rack dishwasher safe. **DO NOT** use a heavy cycle. Ensure the vessel and sip lid are removed from the motor base before being placed in the dishwasher.

STORING

Store the unit upright and with the vessel attached to the blade assembly.

DO NOT store blended or unblended ingredients in the vessel with the BlastBlade Assembly for prolonged periods of time.

DO NOT stack items on top of the vessel. Store any remaining attachments alongside the unit or in a cabinet where they will not be damaged or create a hazard.

If your unit needs servicing, call Customer Service at 0800 862 0453. So we may better assist you, please register your product online at www.ninjakitchen.co.uk/register-guarantee and have the product on hand when you call.

ORDERING REPLACEMENT PARTS

To order additional parts and attachments, visit ninjakitchen.co.uk

TROUBLESHOOTING GUIDE

⚠ WARNING: To reduce the risk of shock and unintended operation, unplug unit before troubleshooting.

Ensure the unit is not charging when troubleshooting. Ensure the unit is fully charged and vessel is properly aligned.

Control panel doesn't turn off.

- Press and hold the  Button to turn the cordless blender **ON** and **OFF**.

Doesn't mix well; ingredients get stuck.

- When filling the vessel, start with liquid to the **MIN LIQUID** line, then fresh fruit or veggies, followed by leafy greens or herbs. Add your seeds, powders, or nut butters. Finish with ice or frozen ingredients.
- If ingredients are routinely getting stuck, adding some liquid will usually help. Ensure you have filled the vessel to or above the **MIN LIQUID** line. You can also shake the blender while blending or turn the blender upside down, start a blend cycle, and turn it right side up to move ingredients while blending.

Sip lid is hard to assemble on the vessel.

- Set the assembled motor base and vessel on a level surface. Carefully place the sip lid on the top of the vessel and align the threads so the sip lid sits flat. Turn clockwise until you have a tight seal.

Vessel is hard to assemble on the motor base.

- Set the motor base on a level surface. Place the vessel on the top of the motor base and align the threads so the vessel sits flat. Turn clockwise until you have a tight seal. The LEDs on the display will be solid purple when the vessel is properly installed.

PRODUCT REGISTRATION

Please visit www.ninjakitchen.co.uk/register-guarantee to register your new Ninja® product within twenty eight (28) days of purchase. You will be asked to provide the store name, date of purchase, and model number along with your name and address.

The registration will enable us to contact you in the unlikely event of a product safety notification.

Shark | NINJA

ONE (1) YEAR LIMITED WARRANTY

When a consumer buys a product in the UK, they get the benefit of legal rights relating to the quality of the product (your "statutory rights"). You can enforce these rights against your retailer. However, at Ninja we are so confident about the quality of our products that we give the owner a manufacturer's guarantee of 1 year. These terms and conditions relate to our manufacturer's guarantee only – your statutory rights are unaffected. The conditions below describe the prerequisites and scope of our guarantee. They do not affect your statutory rights or the obligations of your retailer and your contract with them.

Ninja Guarantees

A household appliance like a Ninja Blast constitutes a sizeable investment. Your new machine needs to work properly for as long as possible. The guarantee it comes with is an important consideration – and reflects how much confidence the manufacturer has in its product and manufacturing quality. Every Ninja machine comes with a free parts and labour guarantee. Our customer service helpline (0800 862 0453) is open from 9.00am to 6.00pm Monday – Friday. It's free to call, and you'll be put straight through to a Ninja representative. You'll also find online support at www.ninjakitchen.co.uk.

How do I register my extended Ninja guarantee?

If you have purchased your Ninja Blast directly from ninjakitchen.co.uk your extended guarantee is registered automatically. You can also register your guarantee online within 28 days of purchase.

- To register online, please visit www.ninjakitchen.co.uk/register-guarantee.
- Keep a note of the date you purchased the machine.

IMPORTANT

- The 1 year standard guarantee will only cover your product from the date of purchase.
- Please always keep your receipt. Should you need to use your extended guarantee we will need your receipt to verify the information you have supplied to us is correct. The inability to produce a valid receipt may invalidate your guarantee.

What are the benefits of registering my free Ninja guarantee?

When you register your guarantee, we'll have your details to hand if we ever need to get in touch. If you further agree to receive communications from us, you can also receive tips and advice on how to get the best out of your Ninja Blast and hear the latest news about new Ninja technology and launches. If you register your guarantee online, you'll get instant confirmation that we've received your details.

How long are new Ninja machines guaranteed for?

Our confidence in our design and quality control means that your new Ninja Blast is guaranteed for a total of 1 year.

What is covered by the free Ninja guarantee?

Repair or replacement of your Ninja machine (at Ninja's discretion), including all parts and labour. A Ninja guarantee is in addition to your legal rights as a consumer.

What is not covered by the free Ninja guarantee?

- Normal wear and tear.
- Accidental damage or faults caused by negligent use or care, misuse, neglect, careless operation or handling of the Ninja Blast which is not in accordance with the Ninja Operating Manual supplied with your machine.
- Use of the Ninja Blast for anything other than normal domestic household purposes.
- Use of parts not assembled or installed in accordance with the operating instructions.
- Use of parts and accessories which are not Ninja Genuine Components
- Faulty installation (except where installed by Ninja).
- Repairs or alterations carried out by parties other than Ninja or its agents.

Where can I buy genuine Ninja spares and accessories?

Ninja spares and accessories are developed by the same engineers who developed your Ninja Blast. You'll find a full range of Ninja spares, replacement parts and accessories for all Ninja machines at www.ninjakitchen.co.uk.

Please remember that damage caused by the use of non-Ninja spares may not be covered under your guarantee.

NOTES

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

NOTES

[illegible]



REGISTER YOUR PURCHASE



www.ninjakitchen.co.uk/register-guarantee



Scan QR code using mobile device

RECORD THIS INFORMATION

Model Number: _____

Serial Number: _____

Date of Purchase: _____
(Keep receipt)

Store of Purchase: _____

TECHNICAL SPECIFICATIONS

Voltage: 5V  0.5-3A

**SharkNinja Europe Limited,
3150 Century Way,
Thorpe Park, Leeds,
LS15 8ZB, UK**

+44 (0) 800 862 0453

**SharkNinja Germany GmbH,
Rotfeder-Ring 9,
60327 Frankfurt am Main,
Germany**

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

NINJA is a registered trademark in the United Kingdom of SharkNinja Operating LLC.

NINJA BLAST is a pending trademark application in the United Kingdom of SharkNinja Operating LLC.

BLASTBLADE is an unregistered trademark in the United Kingdom of SharkNinja LLC.

© 2023 SharkNinja Operating LLC

BC151UK_Series_IB_VersionA_MP_230418_MV2



@ninjakitchenUK