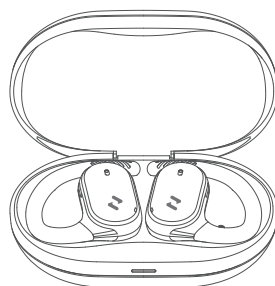 
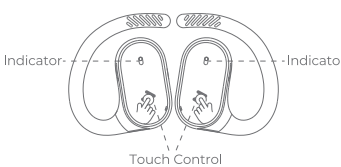 
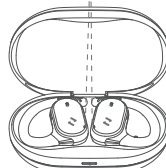 
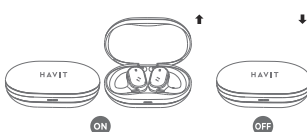 
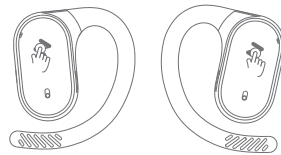 
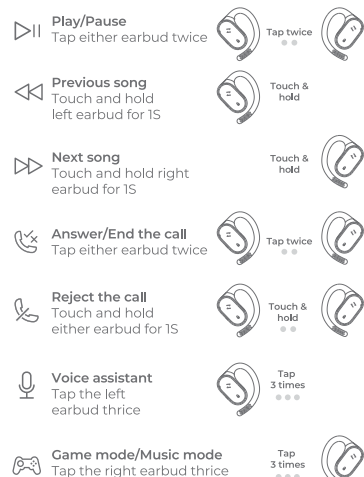 
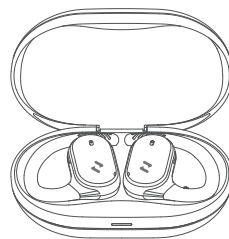 
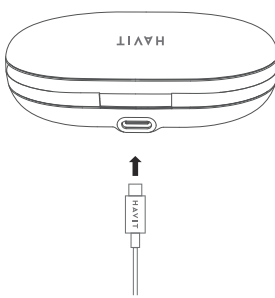 
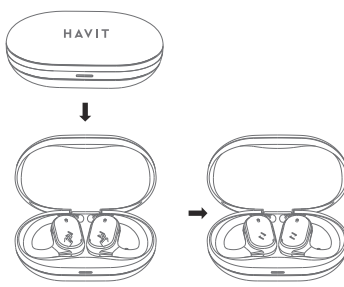 


HAVIT  OWSFIT 02A OPEN-EAR WIRELESS HEADPHONES USER MANUAL	Package Content  Earbud*2  Charging Case * 1  Type C Charging Cable  User Manual * 1  Warranty Card * 1	Product Overview  Indicator Touch Control  Type-C Charging Port  Indicator	Wearing Take out the earphone and place it above the ear then rotate the earphone backward along the auricle to the proper position.  Power on / off  Manual operation *Power on: Touch and hold both earbuds for 3S until white&orange indicator flashes. *Power off: Touch and hold either earbud for 3S until orange indicator is off.	Pairing *Please remove protective film of earbuds and keep the case is full charged when you first time use the product. • Turn on Bluetooth of your device. • Open the case and earbuds are in pairing mode while white&orange indicator is breathing. • Select HAVIT OWSFIT 02A on the list. • HAVIT OWSFIT 02A now is paired with your device. Note The earbuds will be automatically connected to the last paired device as soon as you open the case. 	Dual Device Pairing • Turn on Bluetooth of two devices. • Follow Pairing instruction to pair HAVIT OWSFIT 02A with device A. • Disconnect HAVIT OWSFIT 02A with device A and keep HAVIT OWSFIT 02A on Bluetooth list. • Follow Pairing instruction to pair HAVIT OWSFIT 02A with device B. • Reconnect HAVIT OWSFIT 02A with device A. Now HAVIT OWSFIT 02A are paired with dual device A and B. Touch Control  Left Right	 Play/Pause Tap either earbud twice Previous song Touch and hold left earbud for 1S Next song Touch and hold right earbud for 1S Answer/End the call Tap either earbud twice Reject the call Touch and hold either earbud for 1S Voice assistant Tap the left earbud thrice Game mode/Music mode Tap the right earbud thrice
Earbuds Charging Put the earbuds into case and close the case. The earbuds are charging.  Case Charging Charge the case with type C charging cable, preferably from any PC or laptop as compared to a USB charger.  Orange indicator is breathing. Charging Indicator stay solid orange. Fully charged	 Orange indicator is breathing. Charging Indicator stay solid orange. Fully charged	Reset • Open the case, tap both the L&R earbuds four times simultaneously. The earbuds' orange indicator flashes 4 times. Reset is done. • Turn on Bluetooth of your device and connect HAVIT OWSFIT 02A again.  Tap both the L&R earbuds four times simultaneously. The earbuds' orange indicator flashes 4 times	Safety Tips - Don't expose the earbuds to liquids, moisture or humidity as they have electronics and battery inside. - Don't disassemble your earbuds. There are no userserviceable parts inside it. - Don't drop the earbuds and keep them away from sharp objects such as keys in your pockets. - Clean earbuds tips, metal contact surface of earbuds and case with alcohol cloth regularly to ensure there is no dust accumulation and keep good quality sound experience. - Charge your earbuds below 5V/1A charger. - Don't expose the earbuds to extremely high or low temperature as this may damage the battery orevn deform the plastic parts. - Listen to the music at high volume is harmful to your ears. - Don't throw the earbuds in a fire to dispose it otherwise inside battery may explore.	FCC ID: 2AIG1-OWS915 FCC Warning FCC STATEMENT 1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. 2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communica-tions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to	radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. Batteries: A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the light. 1) Replacement of a battery with an incorrect type that can defeat a safeguard; 2) Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion; 3) Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable	liquid or gas; 4) A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.  www.havitsmart.com
7	8	9	10	11	12	13