



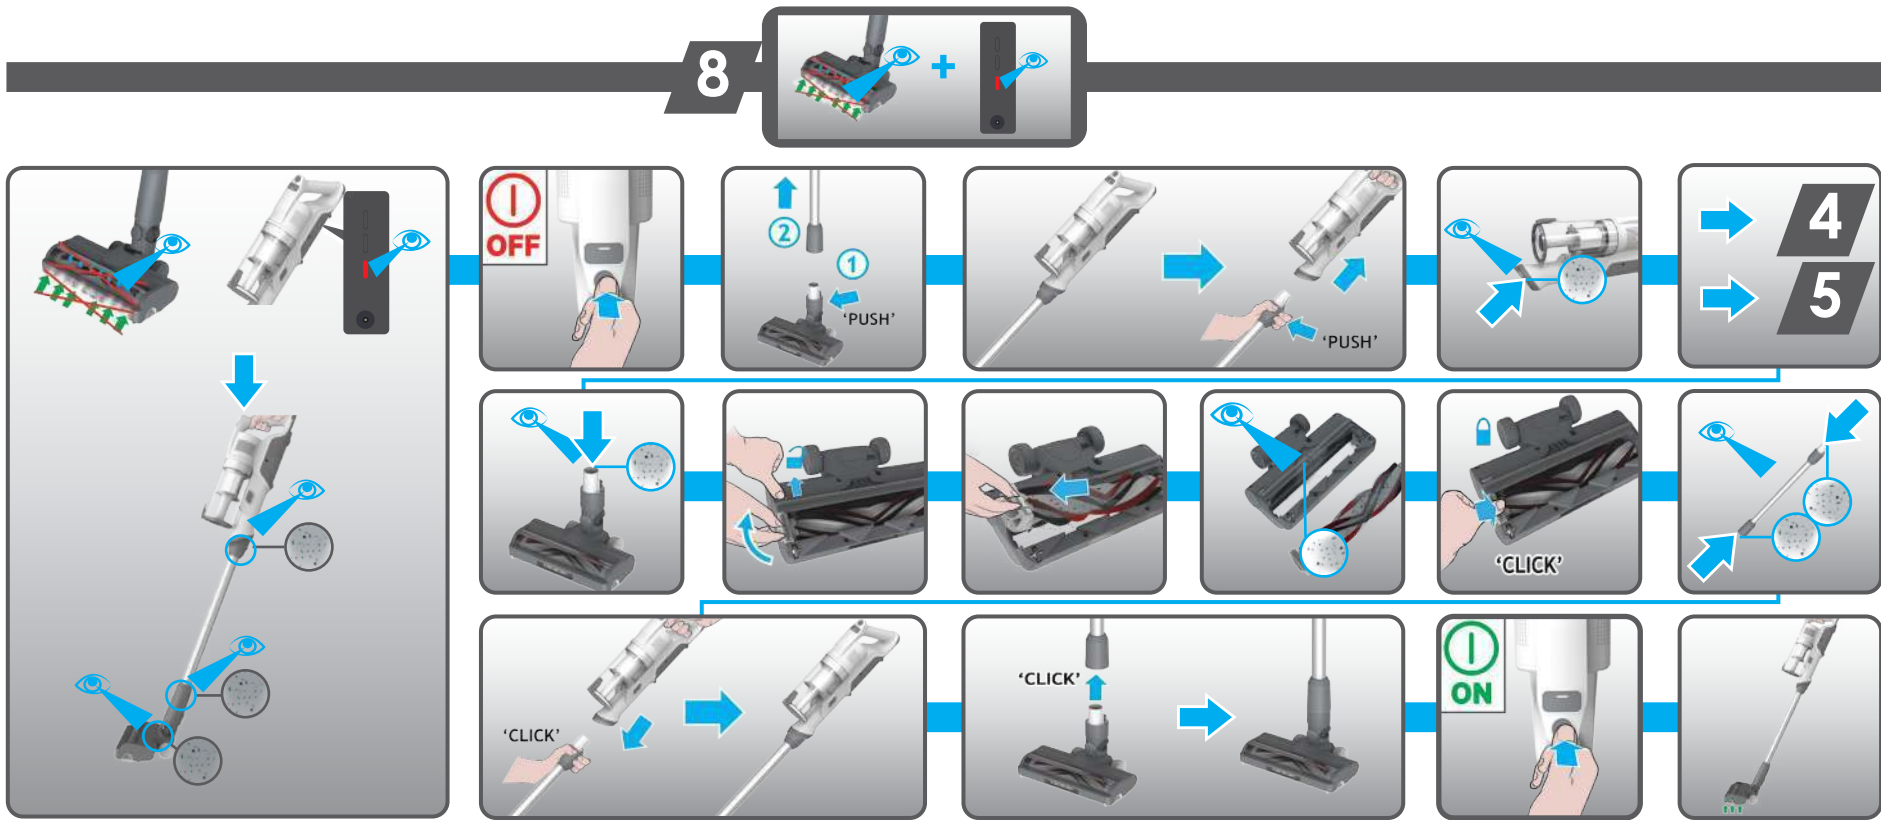

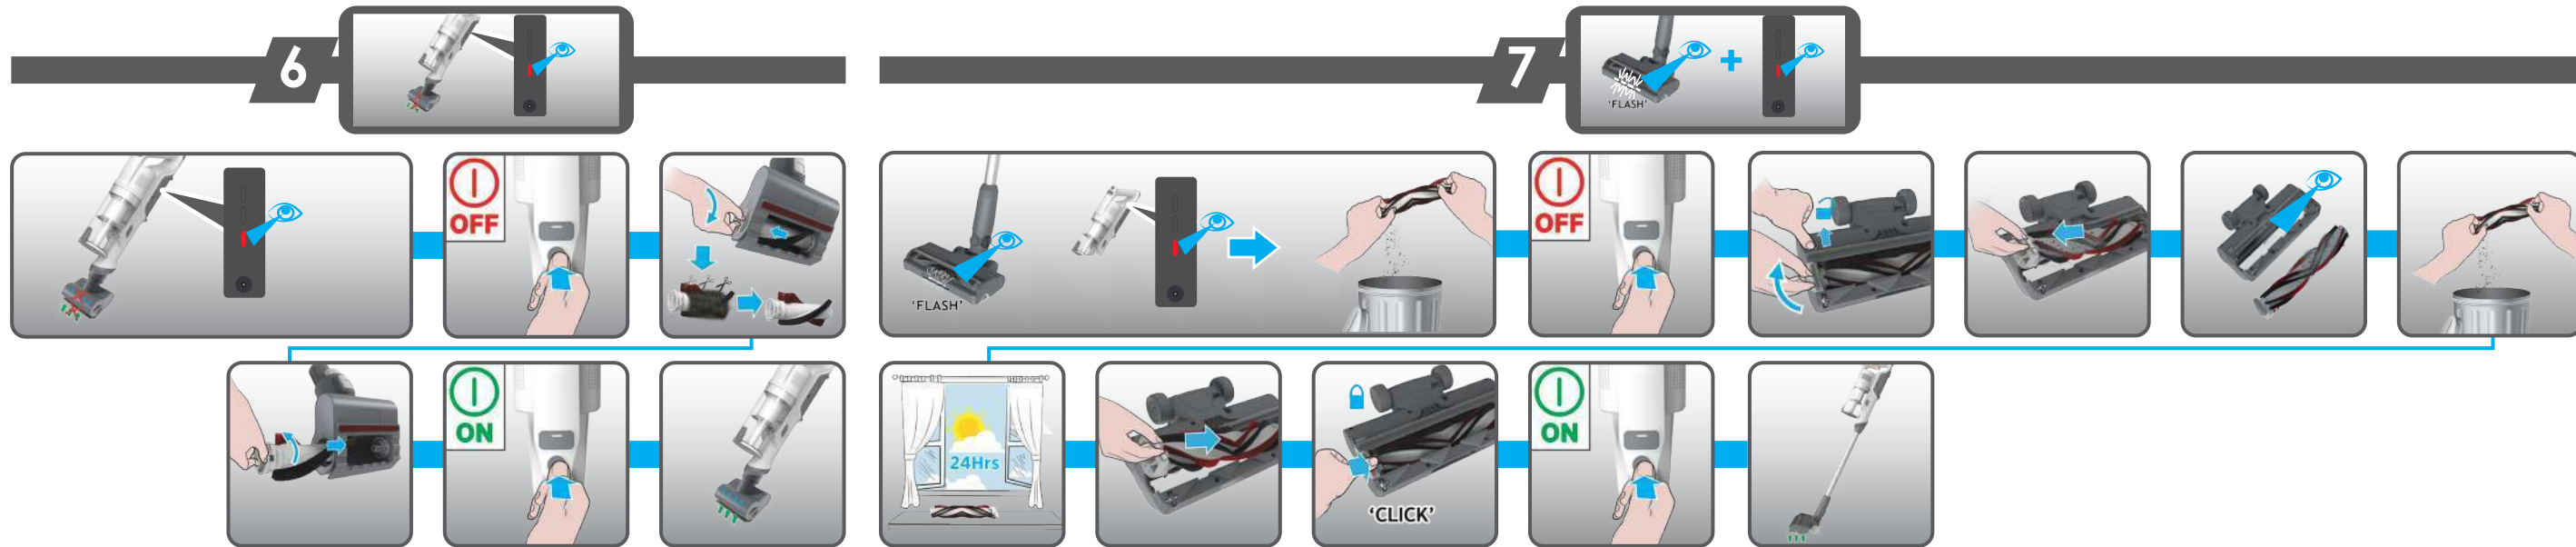

<https://www.hoover-home.com/>

GB User Manual

FR Guide de l'utilisateur

DE Bedienungsanleitung

IT Manuale d'uso

NL Gebruikershandleiding

PT Manual de Instruções

ES Guía del usuario

DK Brugervejledning

NO Bruksanvisning

SE Instruktionsmanual

FI Käyttöohje

GR Οδηγίες Χρήσεως

RU Руководство пользователя

PL Instrukcja Obsługi

CZ Návod k obsluze

SI Navodila Za Uporabo

TR Kullanım Kılavuzu


AR كتيب المستخدم



APPLY MANUAL LABEL HERE

GB - Please read the 'Instructions for Safe Use and Fittings' booklet before using your product. FR - Veuillez lire le paragraphe « Instructions De Sécurité D'utilisation Et De Raccordement » avant d'utiliser votre produit. DE - Bitte lesen Sie vor dem Gebrauch des Geräts aufmerksam die „Bedienungsanleitung zur sicheren Benutzung“. IT - Leggere con attenzione il libretto “Istruzioni Per Un Uso Sicuro E Per Il Montaggio Degli Accessori Opzionali” prima di utilizzare il prodotto. NL - Lees ‘Instructies Voor Veilig Gebruik En Aansluitingen’ voor u het produkt in gebruik neemt. PT - Por favor leia o manual “Instruções Para Utilização E Instalação Seguras” antes de começar a usar o produto. ES - Por favor lea las “instrucciones Para Un Uso Seguro Y Para El Montaje” antes de utilizar el producto. DK - Læs venligst vejledningen “instruktioner For Sikker Brug Og Samling”, inden du tager produktet i brug. NO - Vennligst les veiledningen “instruksjoner For Sikker Bruk Og Monteringer” før du bruker produktet. SE - Var vänlig läs “Instruktioner för säker användning” innan ni använder denna produkt. FI - Tutustu ennen tuotteen käyttöä “Isävarusteiden Turvallisen Käytön Ja Asennuksen Ohjeet” ohjeeseen. GR - Παρακαλώ διαβάστε την ενότητα ‘Οδηγίες Ασφαλούς Χρήσεως Και Εξαρτημάτων’ στο Βιβλίο οδηγιών, πριν χρησιμοποιήσετε το προϊόν. RU - Перед использованием прибора необходимо ознакомиться с «Инструкция По Безопасному Использованию И Применению». PL - Przed użyciem produktu, proszę zapoznać się z Instrukcją Bezpiecznego Użytkowania I Akcesoriów. CZ - Před použitím výrobku si důkladně přečtěte a dodržujte pokyny v brožurě “návod K Bezpečnému Použití A Upevnění”. SI - Prosim Preberite Navodila Za Varno Uporabo In Sestavo Dodatnih Pripomočkov. TR - Lütfen ürünü kullanmadan önce kullanma kılavuzundaki ‘güvenli Kullanım Ve Donanım’ bölümünü okuyunuz. AR - يُرجى قراءة كتيب “تعليمات الاستخدام الآمن والتجهيزات” قبل استخدام المنتج.

* GB - Content may vary according to your model. FR - Le contenu peut varier en fonction de votre modèle. DE - der inhalt kann je nach modell variieren. IT - I contenuti possono variare secondo il modello. NL - inhoud kan variëren volgens uw model. PT - o conteúdo pode variar de acordo com o modelo. ES - el contenido puede variar en base a su modelo. DK - indholdet kan variere i henhold til modellen. NO - innholdet kan variere avhengig av modellen. SE - innehåll kan variera beroende på modell. FI - sisältö saattaa vaihdella mallista riippuen. GR - το περιεχόμενο ενδέχεται να διαφέρει ανάλογα με το μοντέλο. RU - содержимое может меняться в зависимости от модели. PL - zawartość może być inna w zależności od modelu. CZ - obsah semůže lišit v závislosti na vašem modelu. SI - obsah sa može lišiti v závislosti od modelu. TR - içerik modelinize göre farklılık gösterebilir. AR - قد يختلف المحتوى وفقاً لطرازك

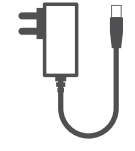	EC 2019/1782	
	Manufacturer Name	Dongguan YinLi Electronics Co., Ltd.
	Manufacturer Address	Jiaren Industrial Zone Shuinan, Shijie Town, Dongguan, 523290 Guangdong, P. R. China
	Model	YLJXA-E170050/ YLJXA-U170050
	Input Voltage	100-240 V~
	Input AC Frequency	50/60 Hz

Output Voltage	17.0 V DC
Output Current	0.5 A
Output Power	8.5 W
Average Active Efficiency	81.1%
Efficiency at load 10%	71.0%
No-Load Power Consumption	0.10 W

PRINTED IN P.R.C. Part No. :48701566/01

1



Assembly and unboxing instructions for the cordless stick vacuum cleaner.

Assembly:

- Remove the dust container from the box.
- Insert the dust container into the main body of the vacuum cleaner.
- Attach the motor unit to the dust container.
- Attach the extension tube to the motor unit.
- Attach the floor head to the extension tube.

Unboxing:

- Remove the floor head from the box.
- Remove the extension tube from the box.
- Remove the motor unit from the box.
- Remove the dust container from the box.


Accessories:

- Remove the floor head from the box.
- Remove the extension tube from the box.
- Remove the motor unit from the box.
- Remove the dust container from the box.

Clicking sounds:

- When attaching the dust container, you will hear a 'CLICK' sound.
- When attaching the motor unit, you will hear a 'CLICK' sound.
- When attaching the extension tube, you will hear a 'CLICK' sound.
- When attaching the floor head, you will hear a 'CLICK' sound.

2

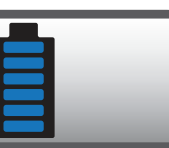

Charging and battery level indicators.

Charging:

- Plug the charging cable into the power outlet.
- Plug the charging cable into the bottom of the vacuum cleaner.
- Charge for 5 hours.

Battery Level Indicators:

- <5%: Red light flashes.
- <33%: Red light.
- 66%: Green light.
- 100%: Blue light.

Power Button:

- Press the power button to turn the vacuum cleaner on.
- Press the power button to turn the vacuum cleaner off.

3



Cleaning instructions and modes.

Power Modes:

- ON:** Press the power button to turn the vacuum cleaner on.
- TURBO MODE:** Press the turbo button to activate turbo mode.
- STANDARD MODE:** Press the standard button to activate standard mode.
- OFF:** Press the power button to turn the vacuum cleaner off.

Cleaning Techniques:

- Use the vacuum cleaner on hard floors, carpets, and stairs.
- Use the turbo mode for deep cleaning.
- Use the standard mode for regular cleaning.


Accessories:

- Use the motor unit for cleaning.
- Use the extension tube for cleaning.
- Use the floor head for cleaning.

Clicking sounds:

- When attaching the dust container, you will hear a 'CLICK' sound.
- When attaching the motor unit, you will hear a 'CLICK' sound.
- When attaching the extension tube, you will hear a 'CLICK' sound.
- When attaching the floor head, you will hear a 'CLICK' sound.

4

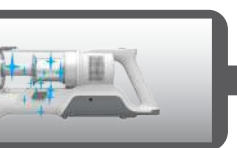

Additional cleaning instructions and modes.

Power Modes:

- ON:** Press the power button to turn the vacuum cleaner on.
- TURBO MODE:** Press the turbo button to activate turbo mode.
- STANDARD MODE:** Press the standard button to activate standard mode.
- OFF:** Press the power button to turn the vacuum cleaner off.

Cleaning Techniques:

- Use the vacuum cleaner on hard floors, carpets, and stairs.
- Use the turbo mode for deep cleaning.
- Use the standard mode for regular cleaning.


Accessories:

- Use the motor unit for cleaning.
- Use the extension tube for cleaning.
- Use the floor head for cleaning.

Clicking sounds:

- When attaching the dust container, you will hear a 'CLICK' sound.
- When attaching the motor unit, you will hear a 'CLICK' sound.
- When attaching the extension tube, you will hear a 'CLICK' sound.
- When attaching the floor head, you will hear a 'CLICK' sound.

5

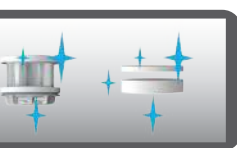

Final cleaning instructions and modes.

Power Modes:

- ON:** Press the power button to turn the vacuum cleaner on.
- TURBO MODE:** Press the turbo button to activate turbo mode.
- STANDARD MODE:** Press the standard button to activate standard mode.
- OFF:** Press the power button to turn the vacuum cleaner off.

Cleaning Techniques:

- Use the vacuum cleaner on hard floors, carpets, and stairs.
- Use the turbo mode for deep cleaning.
- Use the standard mode for regular cleaning.

Accessories:

- Use the motor unit for cleaning.
- Use the extension tube for cleaning.
- Use the floor head for cleaning.

Clicking sounds:

- When attaching the dust container, you will hear a 'CLICK' sound.
- When attaching the motor unit, you will hear a 'CLICK' sound.
- When attaching the extension tube, you will hear a 'CLICK' sound.
- When attaching the floor head, you will hear a 'CLICK' sound.

* GB - Content may vary according to your model. FR - Le contenu peut varier en fonction de votre modèle. DE - der inhalt kann je nach modell variieren. IT - I contenuti possono variare secondo il modello. NL - inhoud kan variëren volgens uw model. PT - o conteúdo pode variar de acordo com o modelo. ES - el contenido puede variar en base a su modelo. DK - indholdet kan variere i henhold til modellen. NO - innholdet kan variere avhengig av modellen. SE - innehåll kan variera beroende på modell. FI - sisältö saattaa vaihdella mallista riippuen. GR - το περιεχόμενο ενδέχεται να διαφέρει ανάλογα με το μοντέλο. RU - содержимое может меняться в зависимости от модели. PL - zawartość może być inna w zależności od modelu. CZ - obsah může lišit v závislosti na vašem modelu. SI - obsah sa može lišiti v zavislosti od modelu. TR - içerik modelinize göre farklılık gösterebilir. AR - قد يختلف المحتوى وفقاً لطرازك.