

PURE

Take a
Moment
to read me

 
 
 
support.pure-audio.com



EN For additional languages and help
DE Für weitere Sprachen und Hilfe
FR Pour d'autres langues et de l'aide
IT Per ulteriori lingue e assistenza
ES Para más idiomas
NL Voor meer talen en hulp
DA For yderligere sprog og hjælp
PL Dodatkowe języki i pomoc




Getting started

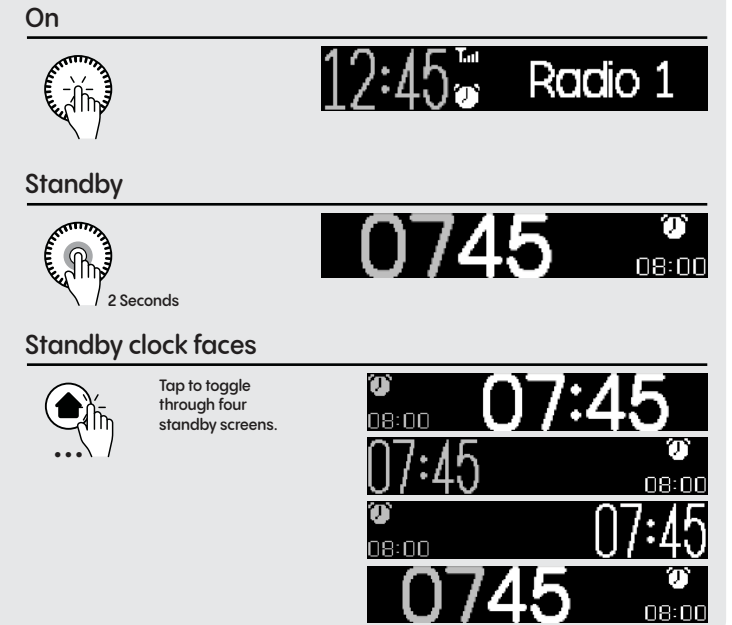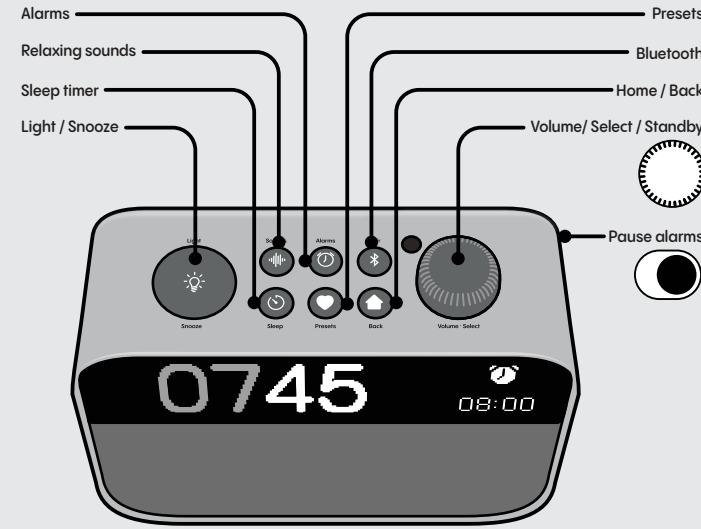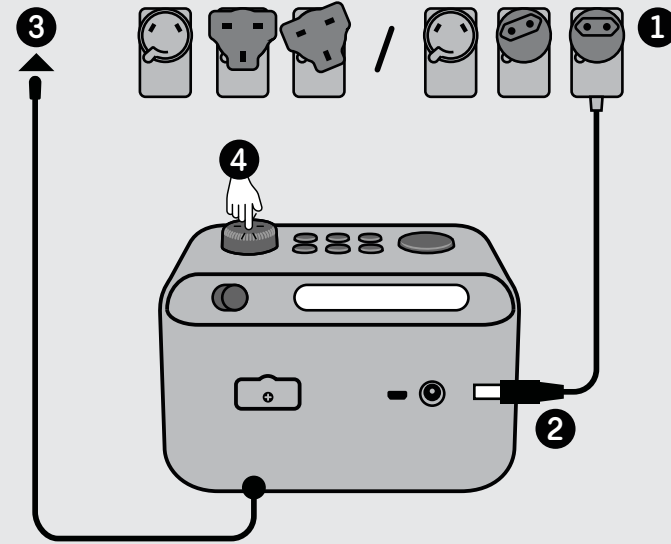


DAB radio

 Switch to DAB





Change station

 


FM radio

  Switch to FM



Change FM station

 

Relaxing sounds

Play relaxing sounds



Sounds list



Presets (DAB, FM & Sounds)

Save a station / sound as a preset (Maximum 10)



 
Remove a saved preset



Recall a preset list



DAB Scan



Ensure the antenna is hanging vertically for the best possible DAB reception.

DAB signal strength

 
Signal strength is visible in 24h clock mode or in 12h clock mode only when the signal is weak.



Manual FM tune



FM Scan



FM signal strength

Signal strength is visible in 24h clock mode or in 12h clock mode only when the signal is weak.



Bluetooth

Switch to Bluetooth



Pair new device



2 Seconds

When in pairing mode use the Bluetooth settings on your phone or tablet to pair to "Moment".

Paired successfully



 
PURE Joyful Listening.

support.pure-audio.com

DO NOT INGEST THE BATTERY, CHEMICAL BURN HAZARD
This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.


Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Avoid subjecting the battery to extremely low air pressure.

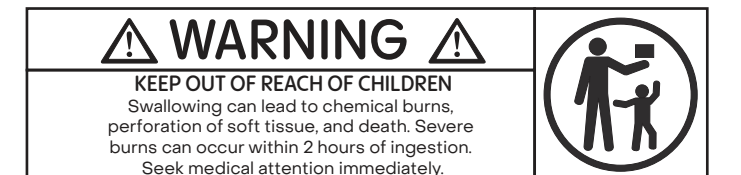


Add an alarm

 
1 - Add new alarm




2 - Alarm time

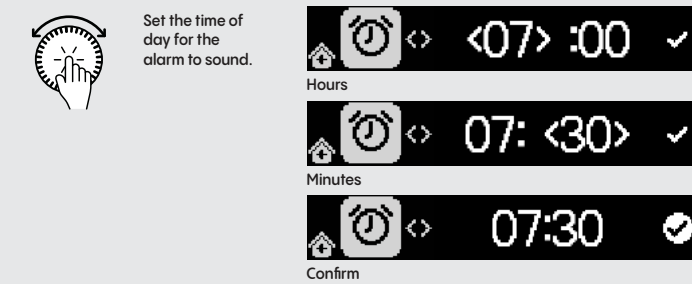 


3 - Repeat

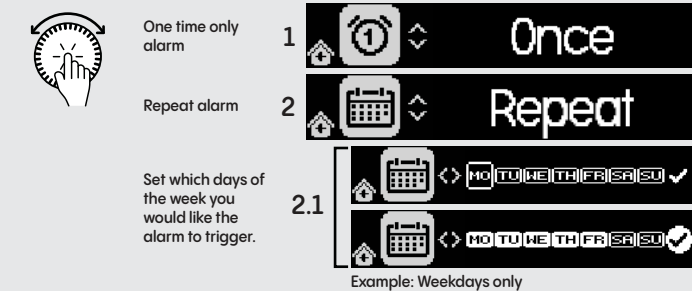 

4 - Source

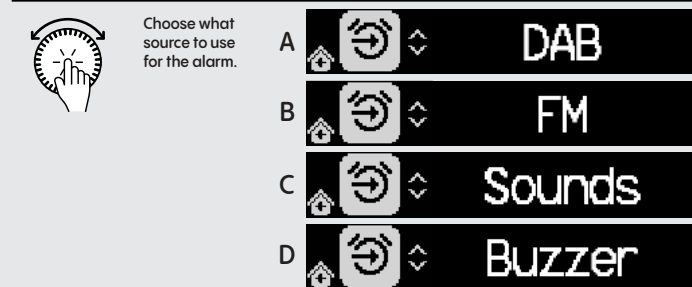 

 5 - Source content (DAB, FM & Sounds only)

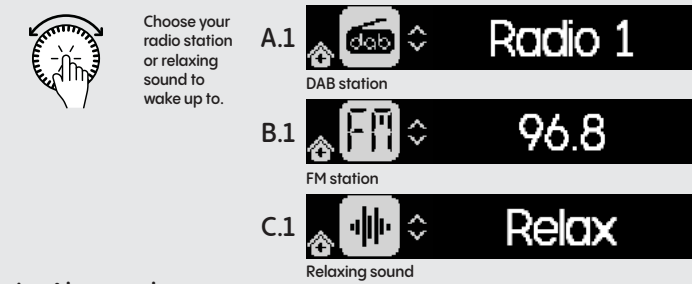


6 - Alarm volume



7 - Sound behaviour



 8 - Light behaviour

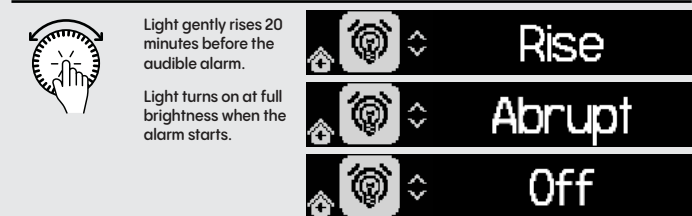

9 - Alarm saved



Modify alarms

Enable / Disable

 


Edit / Delete




Pause alarms


Enable and disable alarms

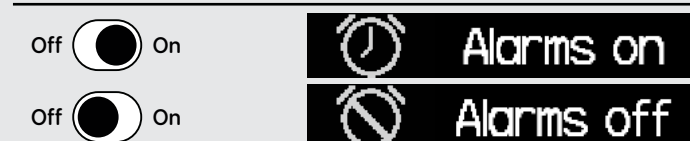

 One switch to enable all your currently active alarms or disable them in one convenient action.




Alarm status icons

 


Snooze or stop alarm

 Snooze alarm

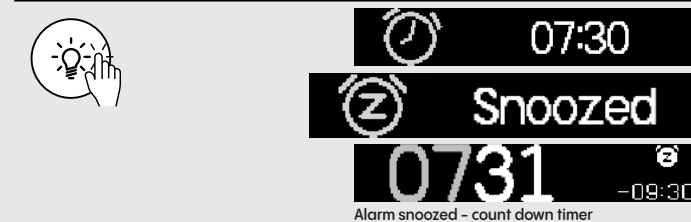

Stop alarm

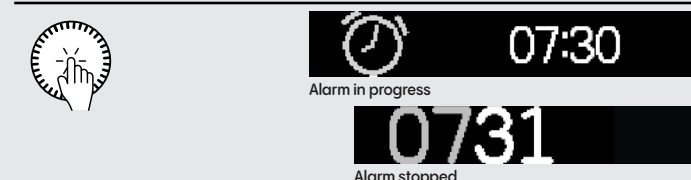 


Alarm battery backup

If mains power is lost only the next alarm will trigger with a loud backup alarm tone. If the backup alarm tone starts, slide the alarm switch to Off position to stop it. If you want to unplug Moment from mains power and do not want the backup alarm to trigger, slide the alarm switch to the Off position.

Battery needs replacing




 Replacing battery

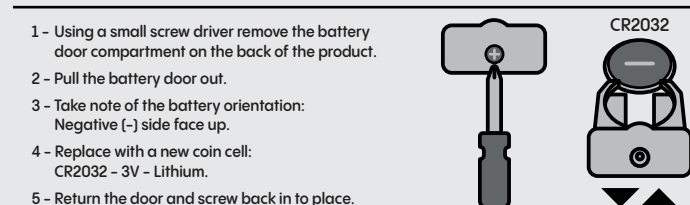


Support light

 Turn off / on

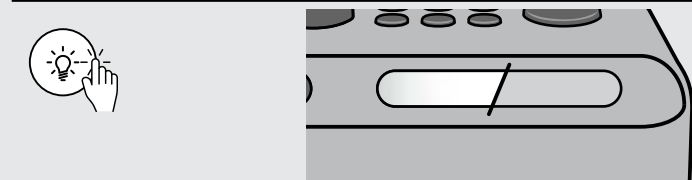

Adjust light brightness

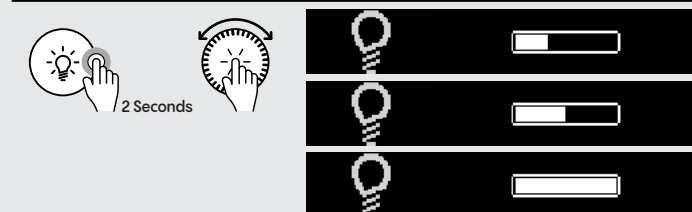 

Sleep timer

Start the sleep timer



Check or change the sleep timer

 


Stop sleep timer




Settings

Brightness

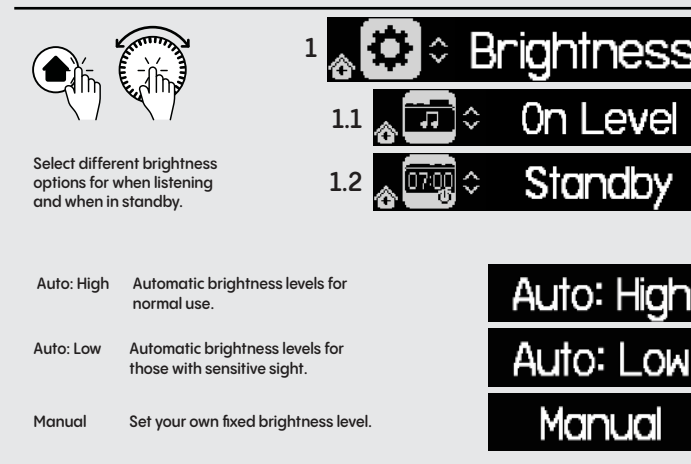

Clock, Time & Date

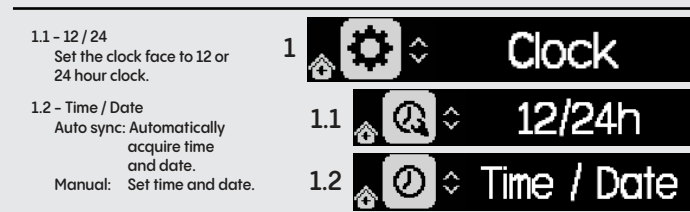 

Language

