

SENCOR®

SBG 3710SS



CONTACT GRILL

Translation of the original manual



SENCOR®

SBG 3710SS



A

1

2

3


4

5

6

7

8

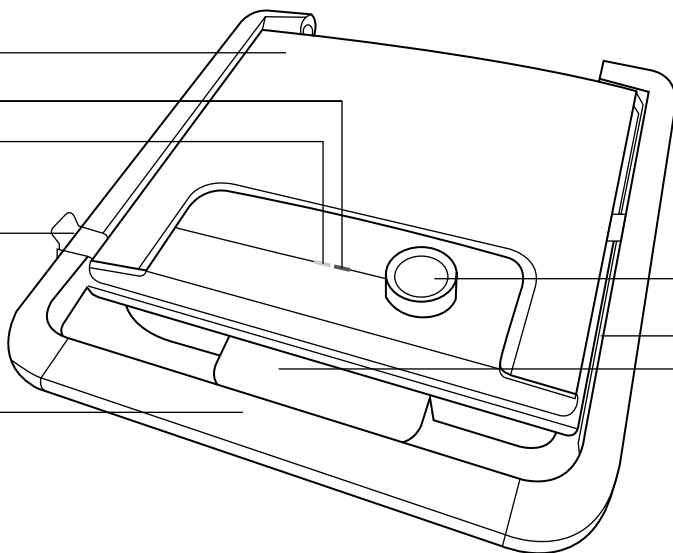

Important safety instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be used by children 8 years of age and older and by persons with physical, sensory or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- Cleaning and maintenance performed by the user must not be performed by children unless they are older than 8 years of age and under supervision.
- Children younger than 8 years of age must be kept away from the appliance and its power cord.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.
- Wipe the grill plates with a soft sponge lightly dampened in warm water. Follow the instructions found in section "Cleaning and maintenance".
- This appliance is not intended to be operated using an external timer switch or remote control.

- Before connecting the appliance to a power socket, check that the rated voltage stated on the appliance's rating label matches the electrical voltage in the socket to which you wish to connect the appliance.
- Connect the appliance only to a properly grounded socket. We recommend connecting the appliance to an independent electrical circuit. Do not use extension cords.
- Do not connect the appliance to a power socket unless it is properly assembled.
- Do not touch the power cord or the power plug with wet hands.
- The appliance is designed for household use only. Likewise, this appliance is intended for personal use in locations such as:
 - staff kitchens in stores, offices and other workplaces;
 - hotel or motel rooms and other living areas;
 - agricultural farms;
 - bed and breakfast establishments
- Do not use the appliance in an industrial environment or outdoors.
- The appliance is designed for cooking food. Do not use it for any other purposes than those intended.
- Do not place the appliance on window sills, kitchen sink drainboards or unstable surfaces. Always place it on a stable, even and dry surface.
- Do not place the appliance on an electric or gas stove or in its vicinity, do not place it in the vicinity of an open fire or an appliance that is a source of heat.
- Do not use the appliance in the vicinity of a bath, a kitchen sink, swimming pool or another water source.
- To prevent potential injury by electrical shock, do not submerge any part of the appliance in water or any other liquid.
- Before using this appliance, check that the drip tray is located in its place.
- During operation there needs to be sufficient area for air circulation above the appliance and on all its sides. Do not use the appliance near flammable materials such as curtains, kitchen towels, etc.
- The temperature of accessible surfaces may be higher if the appliance is in operation. Take care not to touch the hot grill plate or the top cover. The appliance may remain hot even after it is turned off. Prior to cleaning, maintenance or other handling, ensure that the appliance has cooled down completely.
- Be especially careful when grilling fatty food to avoid being burnt by spluttering fat.
- Do not touch the grill plate with sharp or metal objects. This may damage it.
- Always turn off the appliance and disconnect it from the power socket when leaving it without supervision, after finishing using it and before cleaning or moving it.
- Allow the appliance to fully cool down before moving, cleaning or storing it. Use the thermally insulated handle for carrying the appliance.
- Do not use the appliance as a place for placing items.
- Disconnect the power cord from the power socket by pulling on the plug, never pulling on the cord. Otherwise, this could damage the power cord or the socket.
- Make sure the power cord does not hang over the edge of a table and that it is not touching a hot surface.
- Do not use the appliance if it is not working correctly, if it was dropped on the floor, if it is damaged or has been submerged in water.
- To avoid the danger of injury by electrical shock, do not repair the appliance yourself or make any adjustments to it. Have all repairs performed at an authorised service centre. By tampering with the appliance, you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.

- Thank you for purchasing a SENCOR brand product and we hope that you will be happy with it.
- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.
- We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.


Note:

During use, the green indicator light will intermittently turn on and off, which indicates that the grill plate is heating up to the operating temperature. This is normal.

6. Open the grill and place the food that you wish to grill on the bottom grill plate. If necessary, tilt down the top grill plate.
7. If you need to check the food, open the grill.
8. When the food is sufficiently cooked, open the grill and using a metal or a heat-resistant, plastic kitchen utensil, remove the food from the grill plate.


Warning:

To open the grill, always use the thermally insulated handle.

DESCRIPTION OF THE APPLIANCE

A1 Top cover	A5 Handle
A2 Green indicator light – indicates that the grill is ready for use.	A6 Temperature control knob (1: lowest temperature; 2: medium temperature; 3: maximum temperature)
A3 Red indicator light – indicates that the grill is turned on.	A7 Main power switch I/O
A4 Safety latch	A8 Drip tray for grease and juices.

BEFORE FIRST USE

- Remove the contact grill from the packaging material and remove all promotional materials from it including labels which may be located on the grill/griddle plates.
- Wipe the grill plates using a clean dampened cloth and then wipe dry.
- Take the drip tray out of the base. Wash it in warm water with a small amount of kitchen detergent, rinse and then wipe it dry. Put it back in its place.
- Wipe the outer surface of the grill with a lightly dampened, soft wiping cloth and then wipe it dry.


Warning:

Do not rinse the grill or its power cord under running water or submerge it in water or any in other liquid.


Note:

We recommend that before first use, you turn the grill up to the highest temperature and leave it running for approx. 5 minutes to burn the grill and the grill plates in and to eliminate any possible unpleasant odour during first use. During this time a small amount of smoke may also be emitted. This is normal.

9. When you have finished using it, set the main power switch to position 0 (Off) and disconnect the power plug from the power socket.
10. Prior to cleaning, performing maintenance on or handling the grill, allow it to cool down.


Warning:

During use, the grill plates and the outer surface of the grill heat up and may reach high temperatures. The grill remains hot even after you have finished using it. Improper handling may result in serious burns. Be especially careful when handling the grill. We recommend using kitchen gloves. Always use the available heat-insulated handles.


Note:

Never use metal cooking utensils or knives as this could scratch the non-stick surface of the grill plates.

TIPS FOR GRILLING MEAT AND SMOKED GOODS

- To achieve optimal results, cut the meat into equally thick slices.
- To prevent meat from becoming tough and dried out, it is recommended not to salt it prior to grilling it. It is recommended to salt and season the food with spices only after it has been cooked.
- Before grilling marinated meat, pat it down with kitchen paper towels to remove excess marinade. Certain types of marinades may have a large sugar content which may subsequently burn on.
- When grilling, do not puncture the meat so that juices do not run out of it, making it tough and dry.
- Do not dry out the meat by grilling it for too long.
- Always make sure that chicken meat is thoroughly cooked.
- You do not have to prick pre-cooked hot dogs before grilling them.
- We do not recommend using the contact grill for grilling meat with thick bones, such as bone-in pork chops.
- Food must be completely defrosted prior to being grilled.

USING THE CONTACT GRILL

1. Place the grill on an even, rigid and dry surface at a sufficient distance from the power socket.
2. Release the safety latch in order to open the grill.
3. Insert the plug on the power cord into a power socket and set the main switch to the position I (On). The red indicator light will be lit.
4. Turn the temperature control knob to set the required temperature level, where 1 is low temperature, 2 is medium temperature and 3 is high temperature.
5. When the green indicator light is lit, the grill is ready for use.

QUICK GUIDE TO GRILLING

Temperature control	Recommended food
1	Heating food Grilling hot dogs, sausages Toasting delicate food and food that is intended to be toasted at a low temperature
2	Panini Toasting sandwiches Grilling fish and seafood Grilling fruit and vegetables
3	All types of meat (chicken, pork, beef)

CLEANING AND MAINTENANCE

- Clean out the grill after every use. Before cleaning, the grill must be turned off, disconnected from the power socket and must have cooled down.



Warning:
To prevent the risk of injury by electrical shock, do not submerge the appliance, power cord or power plug in water or any another liquid.

Grill plates

- To clean the grill plates, use a kitchen paper towel or a dampened soft wiping cloth.
- In the event of greater soiling, clean the grill plates using a lightly dampened cloth with the addition of a small amount of neutral kitchen detergent. After applying the detergent, thoroughly wipe the grill plates using a clean, lightly dampened cloth and wipe them dry.



Note:
It will be easier to clean the grill plates while they are still lukewarm.

Drip tray

- Ensure that the contents of the drip tray have cooled down and then carefully remove it from the base.
- Empty out its contents and wash it in warm water with an addition of neutral kitchen detergent. Then rinse it out using clean water, dry it and put it back in its place.

Exterior surface

- To clean the outer surface, use a dry or slightly dampened cloth. Then wipe everything so that it is thoroughly dry.
- For cleaning, never use steel wool, abrasive cleaning products, petrol, etc.

Storage

- When not using the appliance for an extended period of time, disconnect the power plug from the power socket, allow the appliance to cool down and clean it according to the instructions provided above.
- Before storing it, check that the appliance and all its accessories are thoroughly clean and dry.
- Store the appliance in a dry, clean and well-ventilated location not exposed to extreme temperatures and out of children's reach.

TECHNICAL SPECIFICATIONS

Rated voltage range.....220–240 V~
Rated frequency.....50–60 Hz
Rated power input.....2,000 W

We reserve the right to change text and technical specifications.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling, hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your products to the local retailer when buying an equivalent new product. Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic equipment, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.

