

簡介

恭喜您購買本產品並歡迎加入飛利浦！請於 www.philips.com/welcome 註冊您的產品，以善用飛利浦提供的支援。

這個果菜機的設計是要榨出最多的果汁量，但清洗起來卻毫不費力。它經過特別研發，要讓您充滿自信地處理各種食材，製作出各式美味佳餚。

一般說明 (圖 1)

- 1 具預清潔功能的進料棒
- 2 莓果投入口 (僅限 HR1837/HR1833)
- 3 進料管
- 4 蓋子
- 5 濾網
- 6 附壺嘴的果汁收集器
- 7 整合式果渣槽
- 8 安全扣夾
- 9 控制鈕
- 10 收線槽
- 11 驅動軸
- 12 馬達座
- 13 果汁壺

重要事項

使用本產品前，請先仔細閱讀此重要資訊，並保留說明以供日後參考。

危險

- 請勿將馬達座浸入水中或其他液體中，也不要在水龍頭下沖洗。

- 警示**
- 如果電線損壞，必須交由飛利浦、服務代理商或具備相同資格的技師進行更換，以免發生危險。
- 在無人看顧的情況下，或在組裝、拆解與清洗前，請務必拔除產品電源。
- 如果篩網或蓋子因故障壞或出現明顯裂痕，請勿使用產品，並與最近的飛利浦服務中心聯絡。
- 本產品僅供一般家庭使用。不適用於商店、辦公室、農場或其他工作場所的員工廚房等環境。亦不適合供飯店、汽車旅館、民宿及其他住宿場所的房客使用。
- 本產品不適合交由身體、知覺或精神能力障礙者或經驗與知識缺乏者 (包括孩童) 使用，除非由負責他們安全的人員提供安全使用產品相關的監督或指示說明。
- 請看管孩童，避免他們將產品當成玩具。
- 插頭、電線或其他組件受損時，請勿使用產品。
- 產品運轉時，絕對不可以將手指或其他物品放入進料管內。請僅使用進料棒進行此用途。水果、蔬菜、進料棒以外的物品絕對不可以放入進料管。
- 請勿碰觸篩網底部的小刀片。因為它們非常銳利。
- 請務必在乾燥、平穩且水平的表面放置及使用產品。
- 若要確保產品能穩固立著，產品站立的表面和產品底部請保持乾淨。
- 請勿食用果渣，亦勿用於料理。
- 插電之前請先確認產品機座標示的電壓是否與當地使用的電壓相符。
- 不可在無人看顧的情況下任由產品運作。

- 警告**
- 在您拆解並清潔產品前，請先將控制鈕旋轉至關閉位置，並將插頭自電源插座拔出。然後將鎖定臂下壓至解除鎖定位置。
- 請僅於關閉產品電源且篩網停止旋轉之後，再將鎖定臂下壓至解除鎖定位置。
- 使用完畢後，請務必拔除產品插頭。
- 移動產品時，請勿使用鎖定臂拿握產品。
- 使用前務必先將電線儲藏格的電源線完全解開。
- 請勿使用其他製造商的任何配件或零件，或非由飛利浦建議之配件或零件。如果您使用此類配件或零件，保固即會失效。
- 請在開啟產品電源前，先確認所有零件皆已正確組裝。
- 請僅於鎖定臂於鎖定位置時再使用產品。

電磁波 (EMF)

本飛利浦產品符合所有電磁波暴露的相關適用標準和法規。

蔬果營養表

取決於所使用的食材，您可以榨出多達 1.5 公升的果汁，且中間不需要清空整合式果渣槽。當您要榨取較硬的食材 (例如胡蘿蔔或甜菜根)，可榨出的最多果汁量將依您使用的食材品質而定。

注意：當整合式果渣槽達到最大容量時，果渣可能會跑到果汁收集器和果汁壺蓋的裡面。

如果您讓整合式果渣槽過滿，本產品會變慢。此時，請關閉產品電源，並清除整合果渣槽中的果渣。

防滴漏

處理完所有食材且果汁停止流出後，將壺嘴順時鐘旋轉約 120°，啟動防滴漏功能。

訂購配件

若要購買配件或備用零件，請瀏覽 www.shop.philips.com/service，或者洽詢您的飛利浦經銷商。您也可以聯絡您所在國家/地區的飛利浦客戶服務中心 (詳細聯絡資料請參閱全球保證書)。

回收

- 本產品使用壽命結束時，請勿與一般家庭廢棄物一併丟棄。請將該產品送至政府指定的回收點或進行回收。此舉為環保盡一份心力。
- 請遵循您所在國家/地區對電氣與電子產品分類收集的規定。正確處理廢棄產品有助於避免對環境和人類健康帶來負面影響。

保固與服務

如果您需要資訊或支援，請造訪：
www.philips.com/support，或另行參閱全球保證書。

疑難排解

本章概述您使用本產品時最常遇到的問題。如果您無法利用以下資訊解決您遇到的問題，請造訪 www.philips.com/support 查看常見問題清單，或聯絡您所在國家/地區的飛利浦客戶服務中心。

問題	解決方法
----	------

本產品無法運作。	本產品裝有安全系統。如果零件未正確組裝，產品將無法運作。請先關閉產品電源，並檢查零件是否均正確組裝。如果問題持續發生，請聯絡您所在國家/地區的飛利浦客戶服務中心。
----------	---

產品在使用期間間停止運轉。	請將本產品送到您當地的飛利浦經銷商處，或聯絡您所在國家/地區的飛利浦客戶服務中心。
---------------	---

產品在使用期間慢下來。	整合式果渣槽已達到最大容量。請關閉產品電源，並清除整合果渣槽中的果渣。
-------------	-------------------------------------

產品發出很大的噪音、發出難聞的味道、燙得無法碰觸、冒煙等。	新產品在前幾次使用時會發出臭味或稍微冒煙是很常見的現象。這種現象在使用產品幾次之後就會停止。如果一次處理太多食材，或處理的食材非常堅韌 (例如 韭菜)，或是讓產品運轉過久，產品也會發出臭味或冒煙。這時候您必須將產品的電源關閉，讓它冷卻 60 分鐘。如果問題持續發生，請聯絡您所在國家/地區的飛利浦客戶服務中心。
-------------------------------	---

本產品損壞。	請聯絡您所在國家/地區的飛利浦客戶服務中心。
--------	------------------------

濾網碰觸到進料管，或在處理時強烈震動。	請關閉產品電源，並拔除插頭。檢查濾網是否已正確放入果汁收集器中。濾網下方的肋條必須正確地安裝在驅動軸上。請檢查濾網有無受損。刮痕、裂紋、鬆脫的隔網盤或其他異常狀態都可能造成故障。
---------------------	---

	如果您在濾網上發現任何刮痕或損傷，請停止使用本產品。請聯絡您所在國家/地區的飛利浦服務中心或飛利浦客戶服務中心。
--	--

濾網塞住。	請關閉產品電源，清潔進料管及濾網，然後減少處理的食材量。
-------	------------------------------

開始調理前

 
 
 
 
 
 
- 唯有在所有零件均正確組裝，且安全扣夾位於鎖定位置的情況下，本產品才會開始運作。
- 請清洗水果和/或蔬菜，然後視情況將其切成可裝入進料管的大小。
- 請確定已將果汁壺放置在壺嘴正下方。
- 轉動控制旋鈕，開啟產品電源。
- 用進料棒推進時不要過度用力，這會影響榨汁的品質，甚至可能導致濾網停止轉動。
- 請將進料棒旁的溝槽對準進料管邊緣的小交緣，之後將進料棒滑入進料管。
- 當您處理完畢所有食材時，或當整合式果渣槽已滿時，請關閉產品電源並拔下電源插頭。靜候濾網停止旋轉。
- 若要清空整合式果渣槽，請取下蓋子、濾網和果汁收集器。
- 為讓果汁保有最佳風味和新鮮度，請於榨汁之後立即飲用。
- 警示：**請勿將手指或其他物品放入進料管中。

準備工作

- 若想榨出最多的果汁，請務必慢慢壓下進料棒。
- 請使用新鮮的蔬果，因為新鮮蔬果含有較多的汁液。鳳梨、甜菜根、芹菜莖、蘋果、紅蘿蔔、菠菜、瓜類、蕃茄、石榴、柳橙和葡萄都特別適合以果菜機來處理。
- 果菜機不適合處理非常堅硬和/或多纖維或含澱粉的水果或蔬菜，例如：甘蔗。
- 葉菜類及葉梗類蔬菜 (例如：高苜) 也可以用果菜機處理。
- 櫻桃、梅子、桃子等水果請先去核。如為西瓜、蘋果、葡萄這類的水果，則不必去除果核或渣籽。
- 您不需要先去皮。只需去除無法食用的厚果皮，例如：柳橙、鳳梨、奇異果、西瓜，以及沒煮過的甜菜根。
- 在榨取蘋果汁時，請記得，蘋果汁的濃度取決於您使用的蘋果。蘋果越多汁，果汁就越稀。請按照個人的果汁濃度喜好來選擇蘋果種類。
- 如果您想用果菜機來處理柑橘類水果，請先去皮並拿掉白色果皮纖維，因為白色果皮纖維會讓果汁有苦味。
- 內含澱粉的水果，例如：香蕉、木瓜、鱧梨、無花果及芒果，均不適合使用果菜機處理。請改用食物調理機、果汁機或棒型攪拌器來處理這些水果。

清潔

- 若要使用預清潔功能，請用水清洗蓋子及篩網。若要使用此功能，請將預清潔進料棒插入進料管內，並將約 200 毫升的水倒入進料棒的開口。

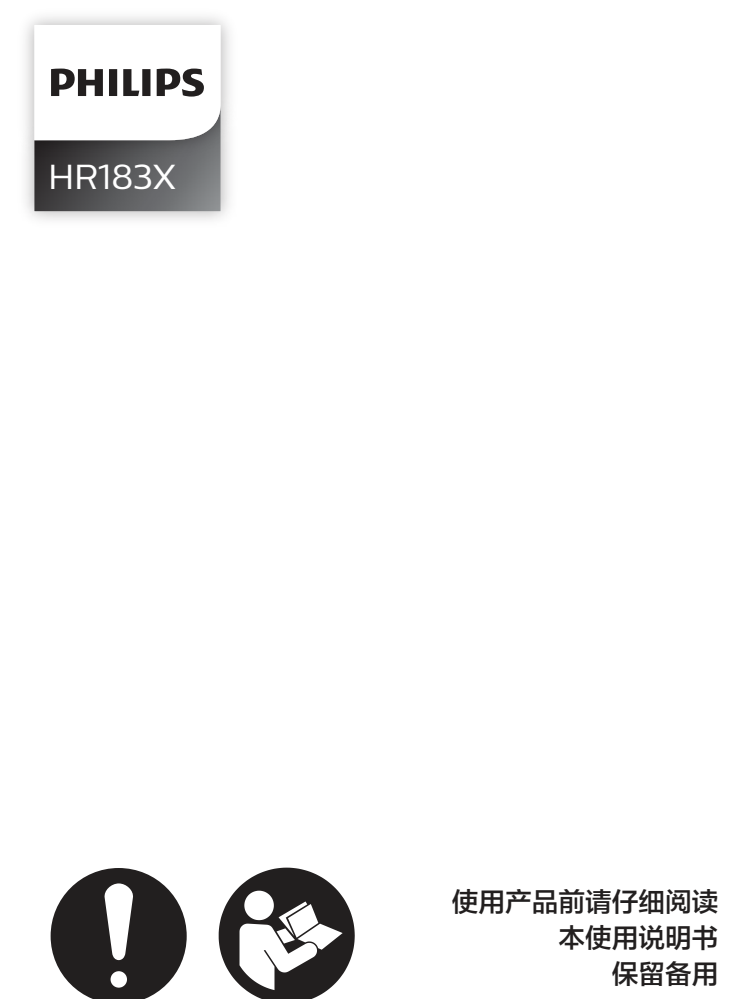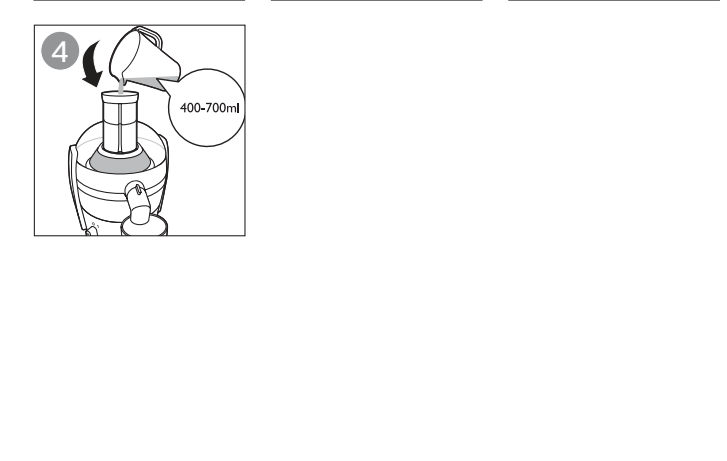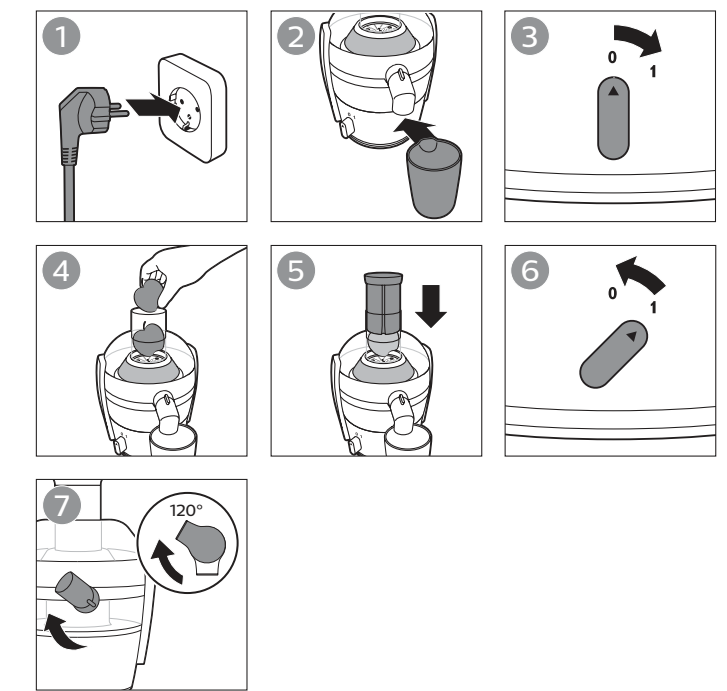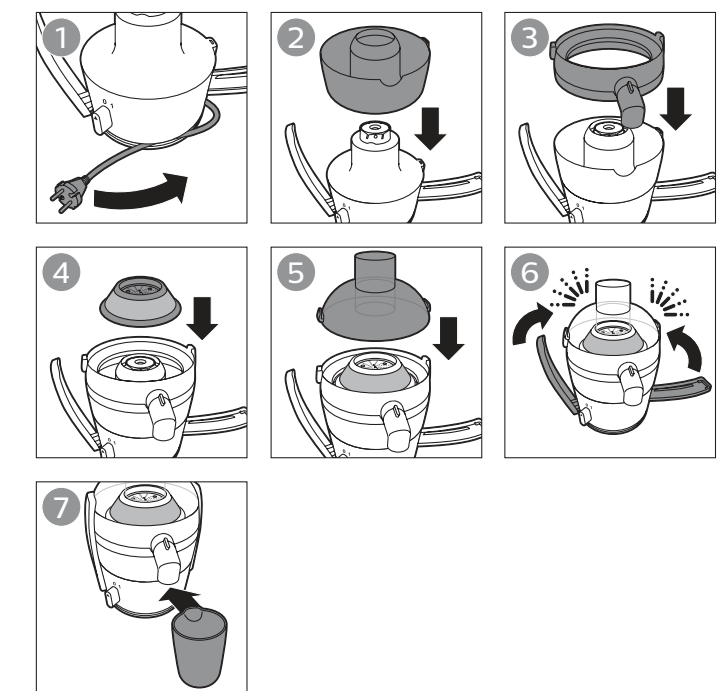
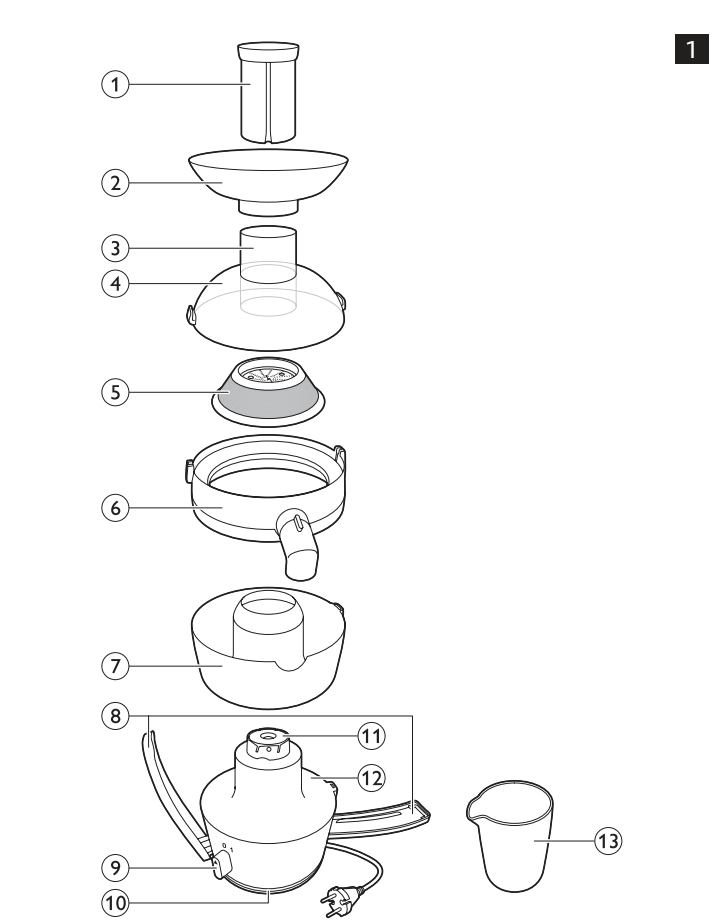
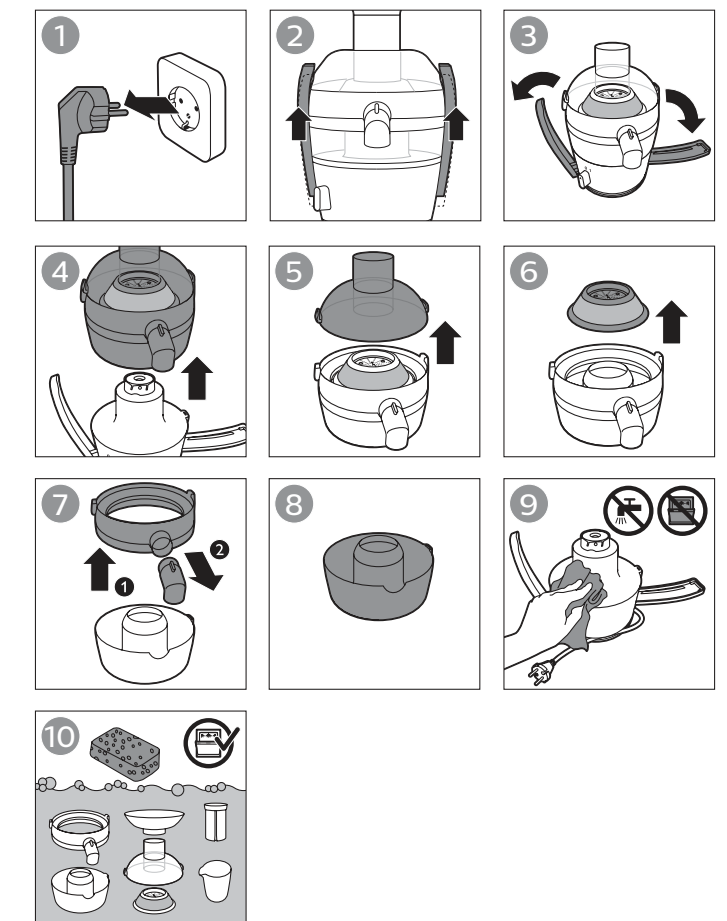


使用产品前请仔细阅读
本使用说明书
保留备用



Specifications are subject to change without notice
技术规格如有变更，恕不另行通知
© 2018 Koninklijke Philips N.V.
All rights reserved.
保留所有权利

   100% recycled paper
100% 循环纸
3000 019 69251 B

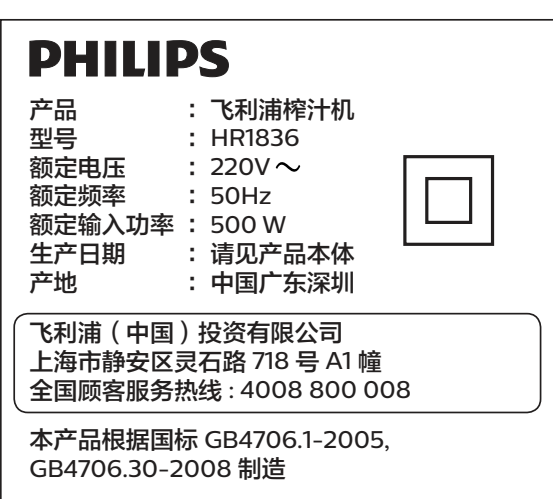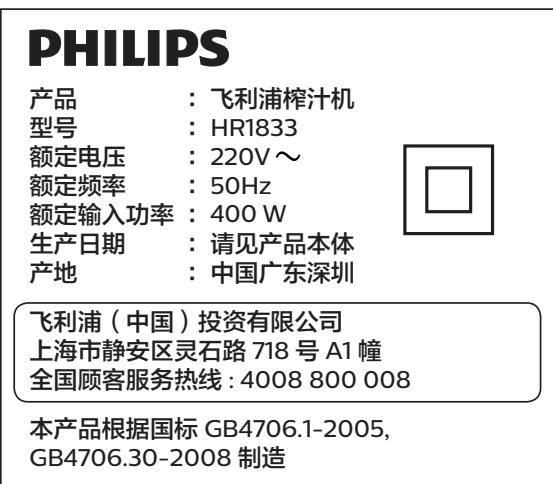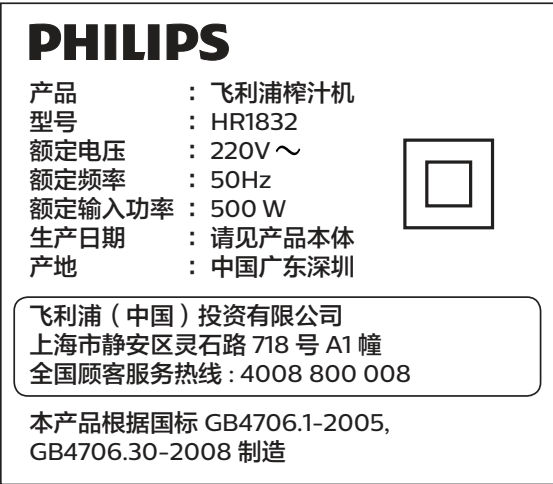

请妥善保管本使用说明书
发行日期：2018-10-19



ENGLISH
Introduction
Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome. This juicer has been designed to maximise the juice output while minimising the cleaning effort. It has been specifically developed to enable you to process a broad variety of ingredients and a wide range of recipes with confidence.
General description (Fig. 1)
1 Pusher with pre-clean function 2 Berry funnel (HR1837/HR1833 only) 3 Feeding tube 4 Lid 5 Filter 6 Juice collector with spout 7 Integrated pulp container 8 Safety clamps 9 Control knob 10 Cord storage compartment 11 Driving shaft 12 Motor unit 13 Juice jug
Important
Read this important information carefully before you use the appliance and save it for future reference.
Danger - Never immerse the motor unit in water or any other liquid, nor rinse it under the tap. Warning - If the supply cord is damaged, it must be replaced by Philips, its service agent or similarly qualified persons in order to avoid a hazard. - Always disconnect the appliance from the mains if you leave it unattended or before you assemble, disassemble or clean it. - Do not use the appliance if the sieve or the lid is damaged in any way or shows visible cracks and contact the nearest Philips service center. - This appliance is intended for normal household use only. It is not intended for use in environments such as staff kitchens of shops, offices, farms or other work environments. Nor is it intended to be used by clients in hotels, motels, bed and breakfasts and other residential environments. - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. - Children should be supervised not to play with the appliance. - Do not use the appliance if the plug, the mains cord or other components are damaged. - Never reach into the feeding tube with your fingers or an object while the appliance is operating. Only use the pusher for this purpose. Do not insert other items than fruits, vegetables or the pusher into the feeding tube. - Do not touch the small cutting blades in the base of the sieve. They are very sharp. - Always place and use the appliance on a dry, stable and level surface. - To ensure that the appliance stands stably, keep the surface on which the appliance stands and the bottom of the appliance clean. - Do not eat the pulp or use for preparing dishes. - Check if the voltage indicated on the base of the appliance corresponds to the local mains voltage before you connect the appliance. - Never let the appliance operate unattended.
Caution - Before you disassemble the appliance and before you clean it, set the control knob to off position and remove the plug from the wall socket. Then lower the locking arm to unlocked position. - Only lower the locking arm to unlocked position after you have switched off the appliance and the sieve has stopped rotating. - Always unplug the appliance after use. - Do not hold the appliance by the locking arm when you carry it. - Always unwind the power cord completely from the cord storage area before use. - Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid. - Make sure all parts are correctly assembled before you switch on the appliance. - Only use the appliance when the locking arm is in locked position.
Electromagnetic fields (EMF)
This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.
Fruit and vegetable facts
Depending on the ingredients used, you can prepare up to 1.5 litres of juice without emptying the integrated pulp container. When you juice hard ingredients such as carrots or beetroots, the maximum amount of juice that can be extracted depends on the quality of the ingredients you use.
<i>Note: When the integrated pulp container has reached its maximum capacity, pulp ends up in the juice collector and on the inside of the lid.</i>
<u>If the integrated pulp container is overfilled, the appliance slows down. When this occurs, switch off the appliance and remove the pulp from the integrated pulp container.</u>

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Fruit and vegetable facts

Depending on the ingredients used, you can prepare up to 1.5 litres of juice without emptying the integrated pulp container. When you juice hard ingredients such as carrots or beetroots, the maximum amount of juice that can be extracted depends on the quality of the ingredients you use.

Note: When the integrated pulp container has reached its maximum capacity, pulp ends up in the juice collector and on the inside of the lid.

If the integrated pulp container is overfilled, the appliance slows down. When this occurs, switch off the appliance and remove the pulp from the integrated pulp container.

Drip Stop
After you have processed all ingredients and the juice flow has stopped, turn the spout clockwise by about 120° to activate the drip stop function.
Ordering accessories
To buy accessories or spare parts, visit www.shop.philips.com/service or your Philips dealer. You can also contact the Philips Consumer Care Centre in your country (see the worldwide guarantee leaflet for contact details).
Recycling
- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment. - Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

Guarantee and service
If you need information or support, please visit www.philips.com/support or read the separate worldwide guarantee leaflet.

Troubleshooting
This chapter summarises the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Centre in your country.

Problem	Solution
The appliance does not work.	The appliance is equipped with a safety system. If the parts have not been assembled properly, the appliance does not work. Switch off the appliance and check if the parts have been assembled in the right way. If the problem persists, contact the Philips Consumer Care Centre in your country.

The appliance stops operating during use.	Take the appliance to your local Philips dealer or contact the Philips Consumer Care Centre in your country.
---	--

The appliance slows down during use.	The integrated pulp container has reached its maximum capacity. Switch off the appliance and remove the pulp from the integrated pulp container.
--------------------------------------	--

The appliance makes a lot of noise, gives off an unpleasant smell, is too hot to touch, gives off smoke etc.	It is very common for a new appliance to give off an unpleasant smell or emit some smoke the first few times you use it. This will stop after you have used the appliance a number of times. The appliance may also give off an unpleasant smell or emit some smoke if you process too many ingredients, if you process very hard ingredients (e.g. leaks) or if you let the appliance operate too long. In these cases, switch off the appliance and let it cool down for 60 minutes. If the problem persists, contact the Philips Consumer Care Centre in your country.
--	---

The appliance is damaged.	Contact the Philips Consumer Care Centre in your country.
---------------------------	---

The filter touches the feeding tube or vibrates strongly during processing.	Switch off the appliance and unplug it. Check if the filter is placed properly in the juice collector. The ribs in the bottom of the filter have to fit properly onto the driving shaft. Check if the filter is damaged. Cracks, crazes, a loose grating disc or any other irregularity may cause malfunction.
---	--

	If you detect any cracks in the filter or if the filter is damaged in another way, do not use the appliance anymore. Contact a Philips service centre or the Philips Consumer Care Centre in your country.
--	--

The filter is blocked.	Switch off the appliance, clean the feeding tube and the filter and process a smaller quantity.
------------------------	---

Before processing - The appliance only functions if all parts are assembled correctly and the clamp is in locked position. - Wash the fruit and/or vegetables and cut them, if necessary, into pieces that fit into the feeding tube. - Make sure the juice jug is placed directly under the spout. - Turn the control knob to switch on the appliance. - Do not exert too much pressure on the pusher, as this could affect the quality of the end result. It could even cause the filter to come to a halt. - Align the groove of the pusher with the small protrusions on the inside of the feeding tube and slide the pusher into the feeding tube. - When you have processed all ingredients or when the integrated pulp container is full, switch off the appliance and unplug it. Wait until the filter stops rotating. - To empty the integrated pulp container, remove the lid, the filter and the juice collector. - For maximum flavour and freshness, serve the juice immediately after preparation. - Warning: Never insert your fingers or an object into the feeding tube.
Preparation - To extract the maximum amount of juice, always press the pusher down slowly. - Use fresh fruit and vegetables, as they contain more juice. Pineapples, beetroots, celery stalks, apples, cucumbers, carrots, spinach, melons, tomatoes, pomegranates, oranges and grapes are particularly suitable for processing in the juicer. - The juicer is not suitable for processing very hard and/or fibrous or starchy fruits or vegetables such as sugar cane. - Leaves and leaf stalks of e.g. lettuce can also be processed in the juicer. - Remove stones from cherries, plums, peaches, etc. You do not have to remove cores or seeds from fruits like melons, apples and grapes. - You do not have to remove thin peels or skins. Only remove thick peels that you would not eat, e.g. those of oranges, pineapples, kiwis, melons and uncooked beetroots. - When you prepare apple juice, take into consideration that the thickness of the apple juice depends on the kind of apple you use. The juicier the apple, the thinner the juice. Choose a kind of apple that produces the type of juice you prefer. - If you want to process citrus fruits with the juicer, remove the peel as well as the white pith. The white pith gives juice a bitter taste. - Fruits that contain starch, such as bananas, papayas, avocados, figs and mangoes are not suitable for processing in the juicer. Use a food processor, blender or bar blender to process these fruits.

Cleaning When you use the pre-clean function, the lid and the sieve are rinsed with water. To use the function, insert the pre-clean pusher into the feeding tube and pour about 200 ml of water into the opening of the pusher.

简体中文

简介
感谢您的惠顾，欢迎光临飞利浦！为了您能充分享受飞利浦提供的支持，请在 www.philips.com/welcome 上注册您的产品。 本榨汁机旨在让您付出最少的清洁工作输出最多的果汁。它经过专门的设计，使您可以信心百倍地加工种类多样的原料以及一系列食谱。

基本说明 (图 1)
1 带预清洁功能的推杆 2 浆果漏斗（仅限于 HR1837/HR1833） 3 加料管 4 盖子 5 过滤器 6 带出汁口的汁液收集器 7 集成果渣储藏罐 8 安全夹板 9 控制按钮 10 电线储藏格 11 驱动轴 12 马达组件 13 果汁壶
注意事项
使用产品之前，请仔细阅读本重要信息，并妥善保管以供日后参考。

危险 - 切勿将马达装置浸入水或其他液体中，也不要在水龙头下冲洗。 警告 - 如果电源线损坏，为了避免危险，必须由制造商、其维修部或类似部门的专业人员更换。 - 产品无人看管时或拆装、清洁之前，务必断开产品电源。 - 如果旋转滤网或保护盖已损坏或有明显破裂，请勿使用产品并联系最近的飞利浦服务中心。 - 本产品仅限于普通家用。不得用于商店、办公场所、农场或其他工作环境的员工食堂。也不得由酒店、汽车旅馆、提供住宿和早餐的场所及其他住宿环境中的客人使用。 - 本产品不打算由肢体不健全、感觉或精神上有障碍或缺乏相关经验和知识的人（包括儿童）使用，除非有负责其安全的人对他们使用本产品进行监督或指导。 - 应照看好儿童，以免他们将产品当作玩具。 - 如果插头、电源线或其它组件受损，则不要使用产品。 - 产品工作时，切勿将手指或物体伸入加料管中。只能使用推杆进行操作。除水果、蔬菜或推杆外，请勿将其其他物件插入加料管。 - 请勿触碰滤网底座中的小切割刀片。刀刃非常锋利。 - 一定要在干燥、平稳的表面上放置和使用本产品。 - 为确保本产品平稳放置，请使产品所在的表面和产品底部保持洁净。 - 请勿食用果渣或将其作为食材。 - 在将产品连接电源之前，请检查产品底部所标电压是否与当地电源电压相符。 - 切勿在无人看管的情况下使用本产品。
警告 - 拆卸及清洁产品之前，请将控制按钮调到关闭位置并从电源插座上拔下插头。然后将锁臂降至解锁位置。 - 只有将电源关掉，并且过滤器已经停止运转之后，才能将锁臂降至解锁位置。 - 使用后务必拔下产品的插头。 - 在搬动时，请勿握持产品的锁臂。 - 每次使用前，必须把电源线从电线储藏格中全部解开。 - 切勿使用由其他制造商生产的，或未经飞利浦特别推荐的任何附件或部件。如果使用此类附件或部件，您的保修将失效。 - 打开产品电源之前，必须先确认所有部件组装正确。 - 只能在锁臂处于锁定位置时使用产品。
电磁场 (EMF)
本飞利浦产品符合所有有关暴露于电磁场的适用标准和法规。

水果和蔬菜资料摘要
取决于所使用的原料，您最多可以准备 1.5 升的果汁而无需倒空集成果渣储藏罐。在榨制胡萝卜或甜菜根等硬原料时，最多榨汁量取决于所用原料的品质。
注意：当集成果渣储藏罐达到其最大容量时，果渣将进入汁液收集器和果汁盖中。
<u>如果中央果渣储藏罐装满得过满，产品会减速。发生这种情况时，请关闭产品并将中央果渣储藏罐中的果渣倒掉。</u>
防滴漏功能
加工完所有原料且汁液停止流出后，将软嘴顺时针旋转大约 120° 即可启用防滴漏功能。

订购附件
要购买附件和备件，请访问 www.shop.philips.com/service 或联系飞利浦经销商。您也可以联系所在国家/地区的飞利浦客户服务中心（联系详情，请参阅全球保修卡）。

回收
- 弃置产品时，请不要将它与一般生活垃圾一同丢弃，应将其交给官方指定的回收中心。这样做有利于环保。 - 请遵循您所在国家/地区的电器及电子产品分类回收规定。正确弃置产品有助于避免对环境 and 人类健康造成负面影响。

保修与服务
如果您需要信息或支持，请访问 www.philips.com/support 或阅读单独的全球保修卡。

故障种类和处理方法

本章归纳了使用本产品时最常见的一些问题。
如果您无法根据以下信息解决问题，请访问
www.philips.com/support 查阅常见问题列表，
或联系您所在国家/地区的客户服务中心。

问题	解决方法
产品不能工作。	产品配备了安全系统。如果部件没有安装妥当，产品将无法运转。关闭产品并检查部件是否安装正确。如果问题仍然存在，请联系您所在国家/地区的飞利浦客户服务中心。
产品在使用过程中停止工作。	请将产品送往当地飞利浦经销商或联系您所在国家/地区的飞利浦客户服务中心。
产品在使用过程中减速。	集成式果渣储藏罐达到了其最大容量限制。关闭产品并清理集成式果渣储藏罐中的果渣。
榨汁机噪音很大，发出难闻的气味，烫得不能摸，冒烟等等。	在最初的几次使用中，新产品会散发出异味或者冒烟，都是十分正常的。使用几次之后就不会出现这些现象了。如果您加工的原料过多、处理的原料过硬（如韭葱）或如果产品运行时间过长，则产品可能会产生难闻气味或冒出少量轻烟。如发生这些情况，您应关闭本产品，让其冷却 60 分钟。如果问题仍然存在，请联系您所在国家/地区的飞利浦客户服务中心。
产品已损坏。	请与您所在国家/地区的飞利浦客户服务中心联系。
加工时，过滤器碰到加料管或强烈震动。	关闭产品电源并拔下插头。检查过滤器在汁液收集器中安装是否正确。过滤器底部的凸缘必须正确卡入到驱动轴上。检查过滤器是否损坏。破裂、裂纹、过滤栅松动或任何其他不正常都能引起故障。
	如果发现过滤器破裂或出现任何损坏，请不要再使用本产品。请联系飞利浦服务中心或您所在国家/地区的飞利浦客户服务中心。
过滤器堵塞。	关掉榨汁机电源，清理加料管和过滤器，少加一点物料。

加工之前 - 只有所有部件均已正确组装且安全夹处于锁定位置，产品才能工作。 - 将水果和/或蔬菜洗净，如有必要，切成能放入加料管的块。 - 确保将汁液杯直接放在出汁口下。 - 转动控制旋钮打开产品。 - 不要用太大的力量压推杆，因为这会影响榨汁的质量，并可能使过滤器停转。 - 将推杆的凹槽与加料管内侧的小凸缘对准，然后将推杆滑入加料管。 - 加工完所有原料或在中央果渣储藏罐已满时，关闭产品并拔掉产品插头。等到过滤器停止旋转。 - 要倒空中央果渣储藏罐，请取下盖子、过滤器和汁液收集器。 - 为获得最佳的香味和新鲜度，请在榨完后立即饮用。 - 切勿将手指或异物插入加料管。

准备 - 为了能榨出更多的汁，应慢慢地压推杆。 - 应使用新鲜水果和蔬菜，因为新鲜水果和蔬菜含有更多的汁液。菠萝、甜菜、芹菜茎、苹果、胡萝卜、菠菜、各种瓜、西红柿、石榴、柑橘和葡萄特别适合用榨汁机榨汁。 - 榨汁机不适合榨特别硬的和/或多纤维或者富含淀粉的水果或蔬菜，如甘蔗。 - 蔬菜的叶子和茎也能榨汁，如莴笋就可以用榨汁机榨汁。 - 去除樱桃、李和桃等水果的果核。至于瓜类、苹果和葡萄，则不必去籽。 - 无需去掉薄皮。仅需去掉不可食用的厚果皮即可，例如橘子皮、菠萝皮、猕猴桃皮、瓜皮以及生甜菜根。 - 榨苹果汁时，果汁的稀稠取决于苹果的种类。苹果含的果汁越多，榨出的果汁越稀。请根据您的喜好选择苹果的品种。 - 如果您要用果汁机加工柑橘类水果，请将皮剥掉并去掉白丝。白丝会使果汁带苦味。 - 含淀粉的水果，如香蕉、木瓜、鳄梨、无花果和芒果等，不适合用榨汁机榨汁。这些水果可用食品加工机、搅拌机或手持式搅拌机加工。

清洁 使用预清洁功能时，用水冲洗盖子和滤网。要使用此功能，请将预清洁推杆插入加料管，然后从推杆开口处注入约 200 毫升水。
