


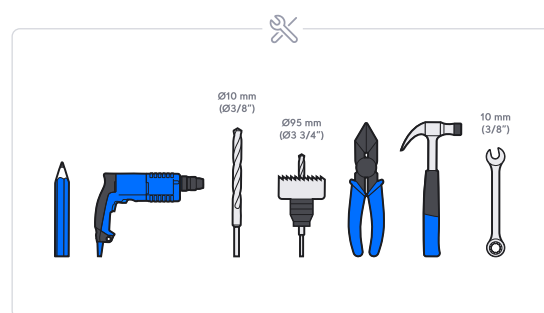
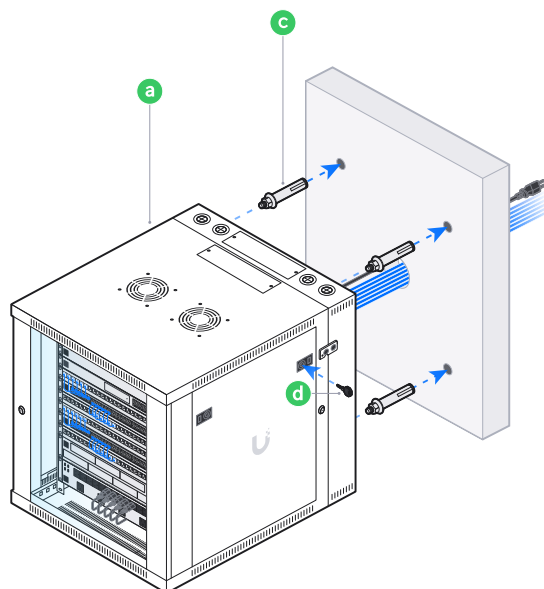


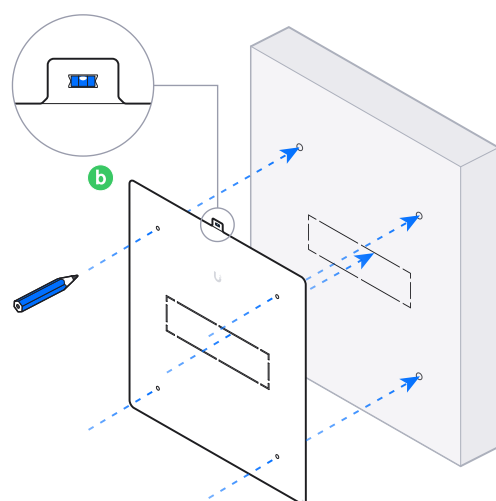


1

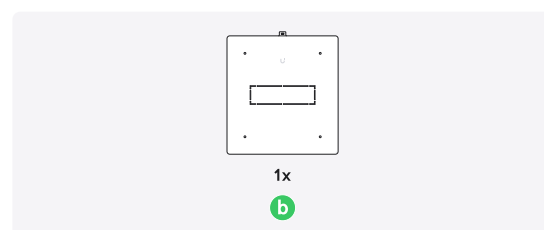



2

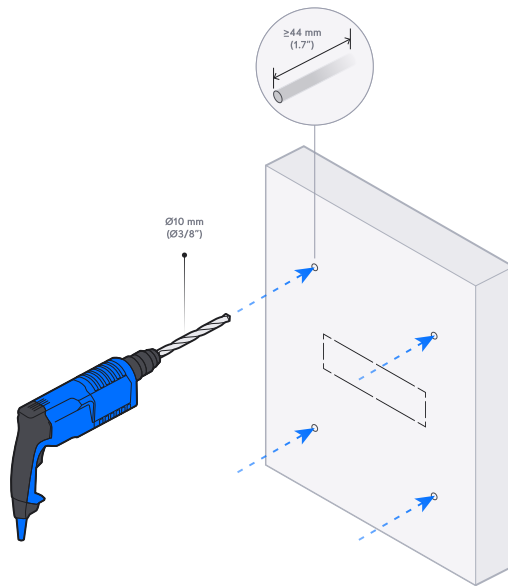


3



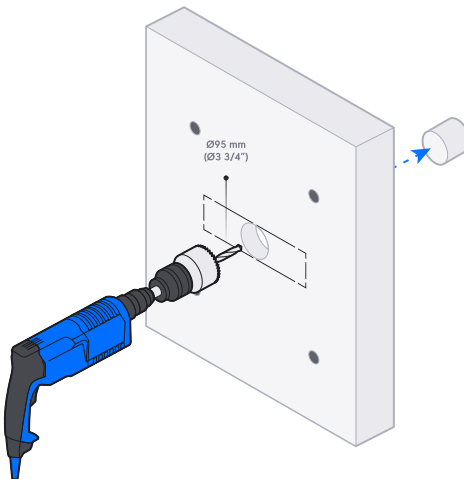


4

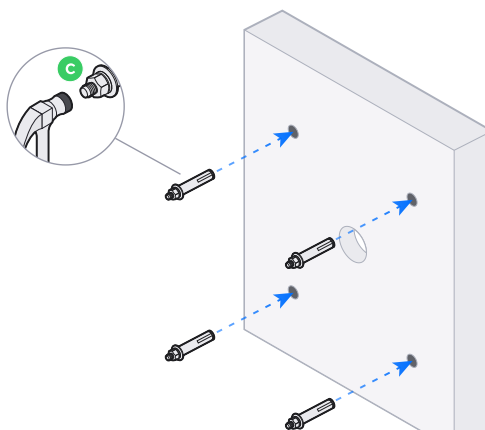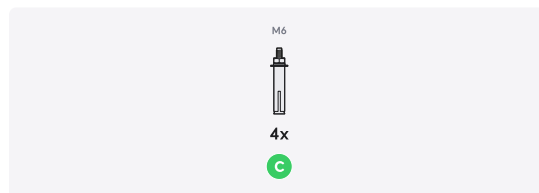

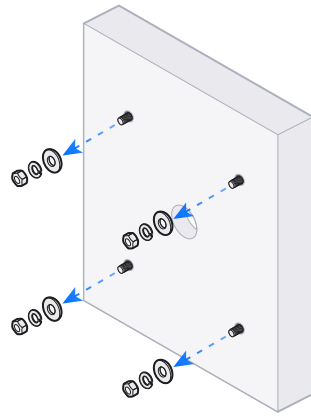





5

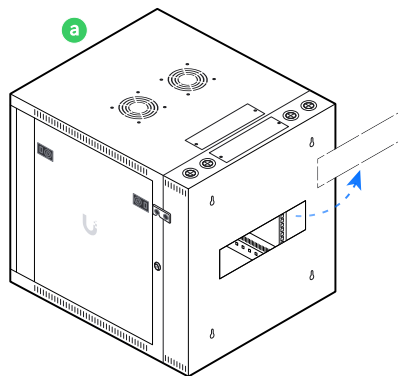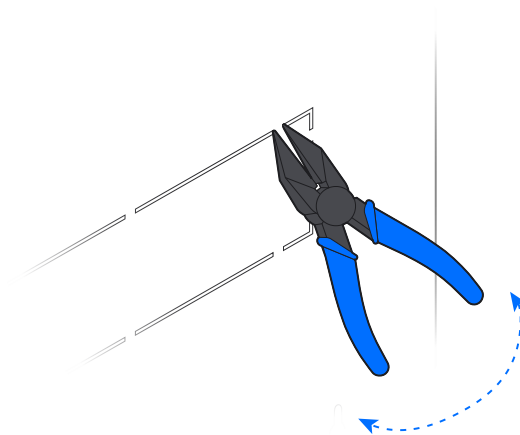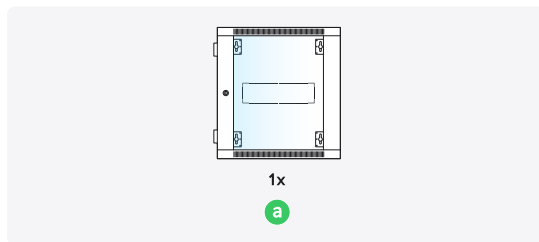


6







d

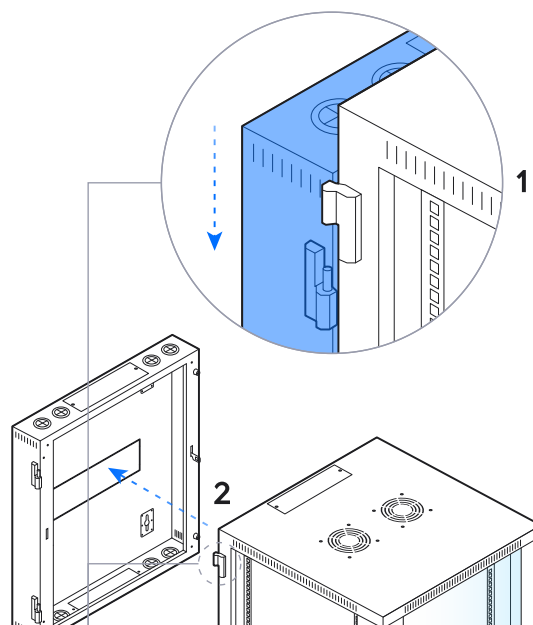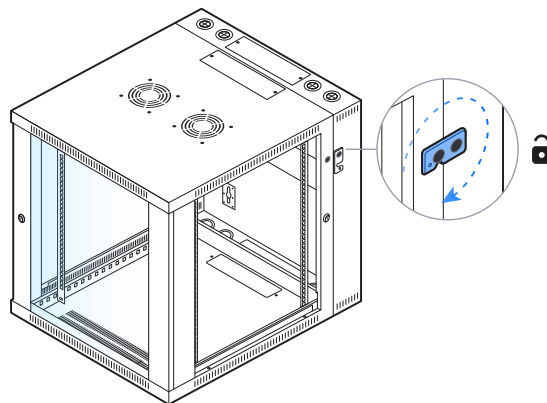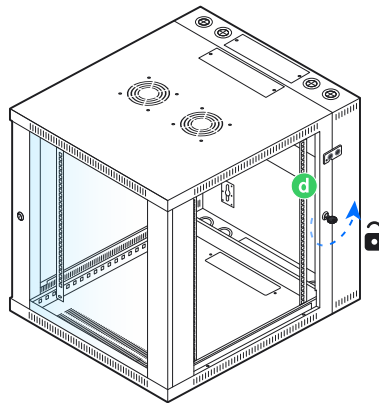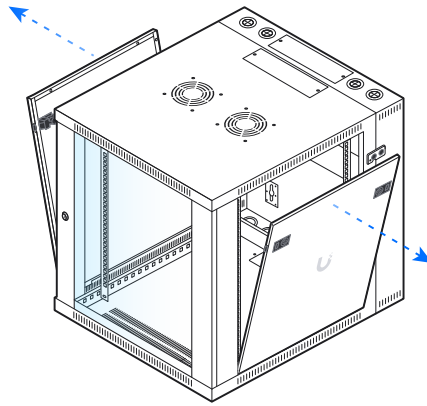




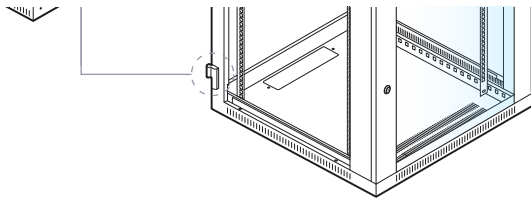



7

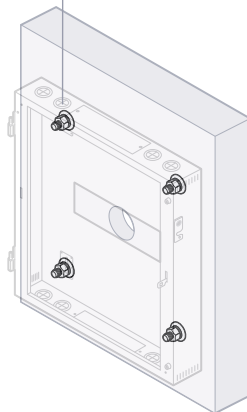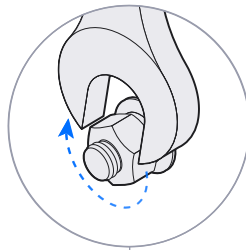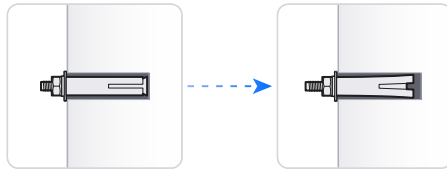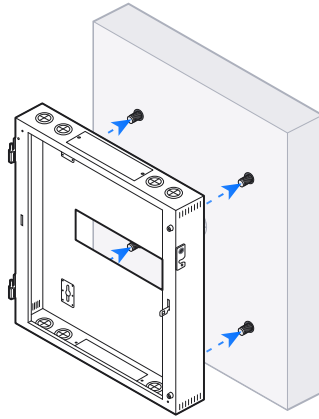

8



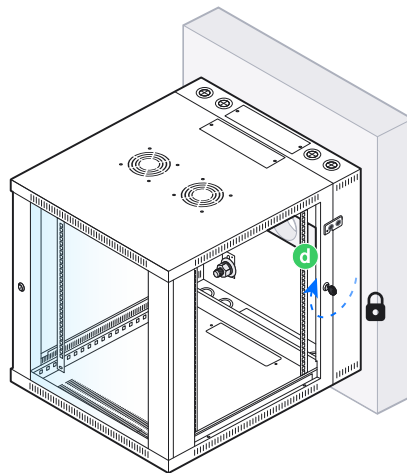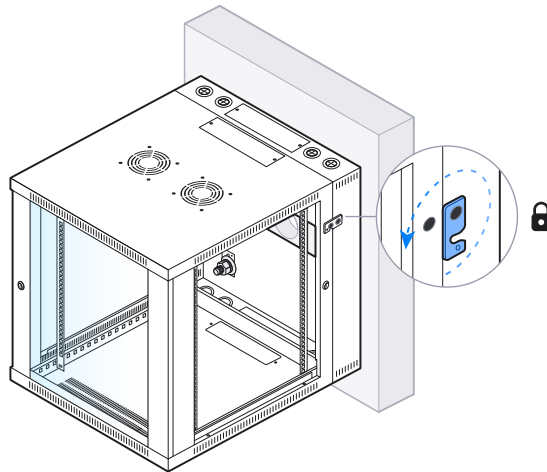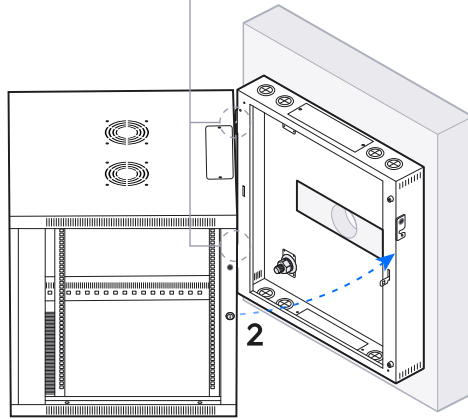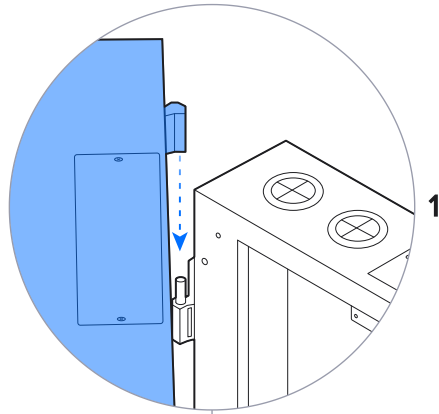


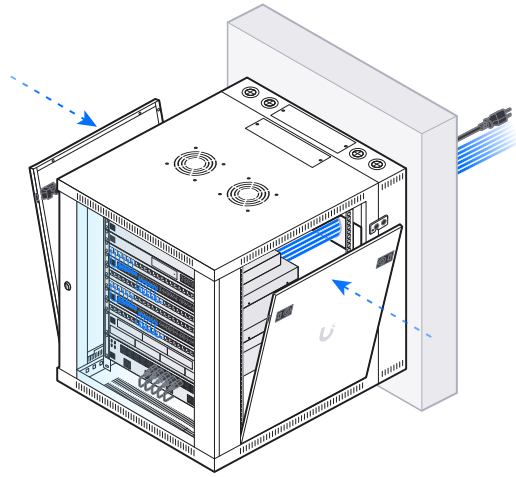



10



1x

d

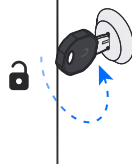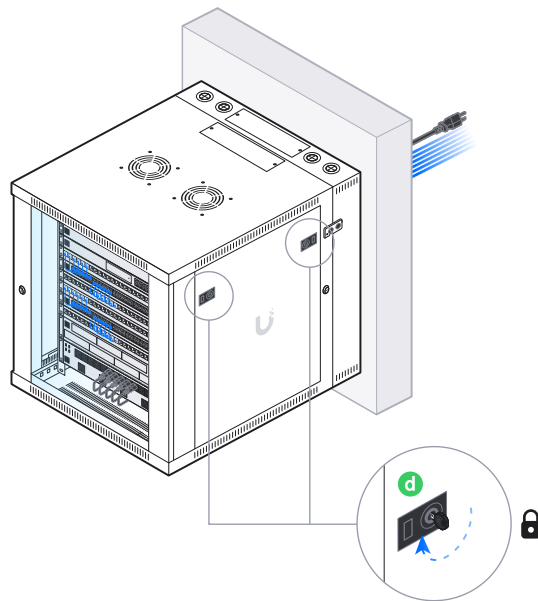

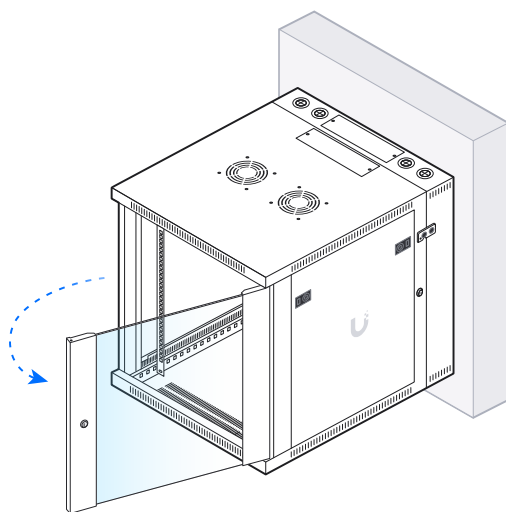

If you need further assistance, visit our [Help Center](#) or contact [Ubiquiti Support](#).

©2023 Ubiquiti Inc. All rights reserved. UniFi and the UniFi logo are trademarks or registered trademarks of Ubiquiti Inc. in the United States and other countries and regions.