



V1 8K Mechanical Keyboard User Manual

Knob
Version

Fully Assembled Version

Keyboard

1x Fully Assembled Keyboard

Including

1x Case

1x PCB

1x PC Plate

1x Sound Absorbing Foam

1x IXPE Foam

1x Latex Bottom Pad

1x PET Film

1x Case Foam

4 Sets x Stabilizers

1 Set x Keycaps (PBT Double-shot)

1 Set x Switches

Cable

1x Type-C Cable

 
 
1x Type-A to Type-C Adapter

Tools

1x Keycap & Switch Puller

1x Screwdriver


1x Hex Key

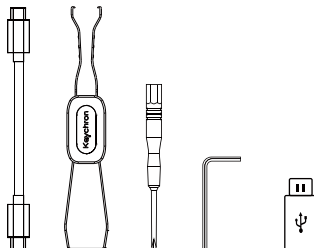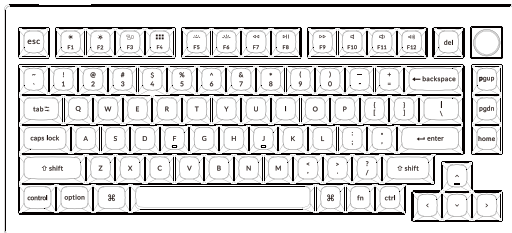

Quick Start Guide


If you are a Windows user, please find the appropriate keycaps in the box, then follow the instructions below to find and replace the following keycaps.

 Mac / Windows

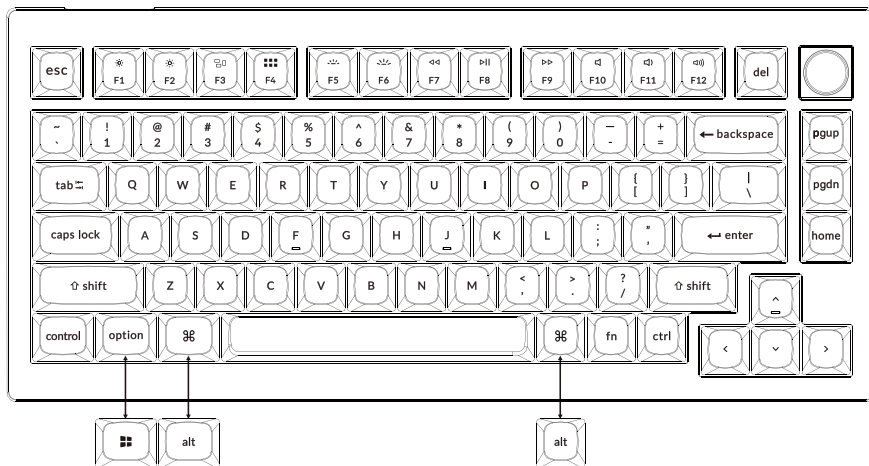

1 Switch To The Right System

 Please make sure the system toggle on the top left corner has been switched to the same system as your computer's operating system.



2 The Keychron Launcher App

 
Please visit launcher.keychron.com to use the online Launcher web app to remap the keys, create macro commands, or flash the firmware. If the Launcher cannot recognize your keyboard, please reach our support to get the instructions.



* The online Launcher can only run on the latest version of Chrome, Edge, and Opera browsers.

3 The Backlight

Press fn + Q to change the lighting effect

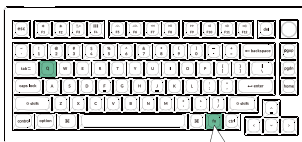

fn + Q

Press fn + tab to turn the backlight on/off



fn + tab

4 Adjust The Backlight Brightness

Press fn + W to increase the backlight brightness



fn + W

 
Press fn + S to decrease the backlight brightness




fn + S

5 Adjust The Backlight Speed

Press fn + T to increase the light effect speed

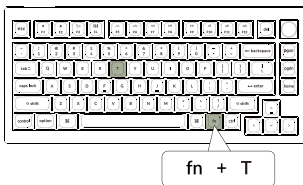

 Press fn + G to decrease the light effect speed

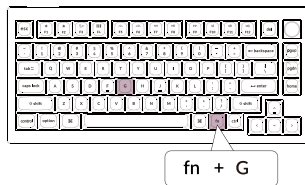

6 Warranty

The keyboard is highly customizable and easy to be rebuilt. If anything goes wrong with any of the keyboard components of keyboard during the warranty period, we will only replace the defective parts of the keyboard, not the whole keyboard.

 
 


7 The Layers

There are four layers of key settings on the keyboard. The layer 0 and layer 1 are for the Mac system. The layer 2 and layer 3 are for the Windows system.

If your system toggle is switched to Mac, then the layer 0 will be activated.

If your system toggle is switched to Windows, then the layer 2 will be activated. Remember that if you are using it in Windows mode, please make changes to the layer 2 instead of the top layer (the layer 0). This is a common mistake people are making.



8 Factory Reset & Firmware Update


$$f_n + J + Z$$

Troubleshooting? Don't know what's going on with the keyboard?

Factory reset your keyboard

1. Power on your keyboard.
2. Press and hold fn + J + Z (for 4 seconds). The keyboard backlight will flash in red quickly for 3 seconds, indicating that the keyboard has been reset.

Flash your keyboard firmware


1. Visit launcher.keychron.com to open the online Launcher web app.
2. Plug in the power cable.
3. Find the 'Firmware Update' tab on the left side of the Launcher and connect your keyboard with it.
4. Follow the instructions on the Launcher and complete the firmware update.

*Step-by-step guide, search the keyword "firmware" on keychron.com.

V1 8K MECHANICAL KEYBOARD SPECIFICATIONS


Specifications	
Layout	75%
Switch type	Mechanical
Width	147.7 mm
Length	328.05 mm
Front height	19.3 mm (without keycaps) 28.4 mm (with keycaps installed)
Back height	26.5 mm (without keycaps) 36.5 mm (with keycaps installed)
Keyboard feet height	2 mm
Angle	3.5 / 7.1 / 9.5 degree

 V1 8K MECHANICAL KEYBOARD OVERVIEW

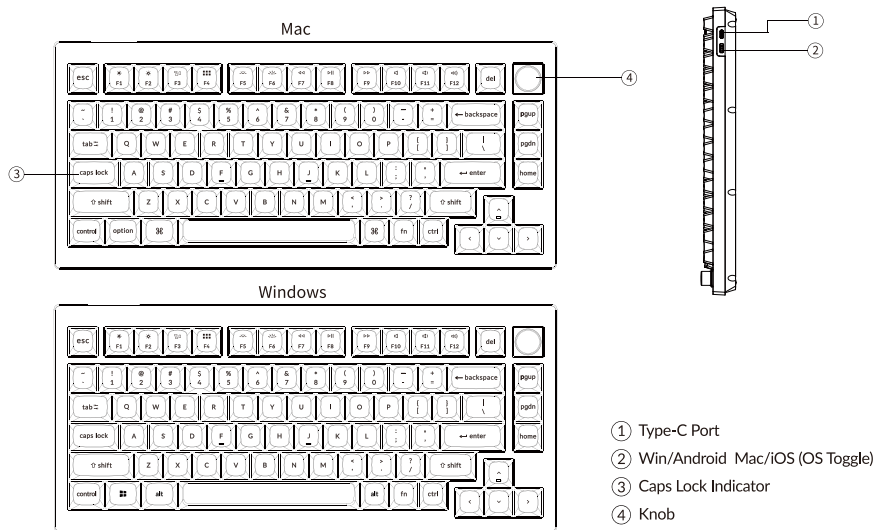


DEFAULT KEY LAYOUT:

 
LAYER 0: This layer will be activated when your keyboard's system toggle is switched to Mac.

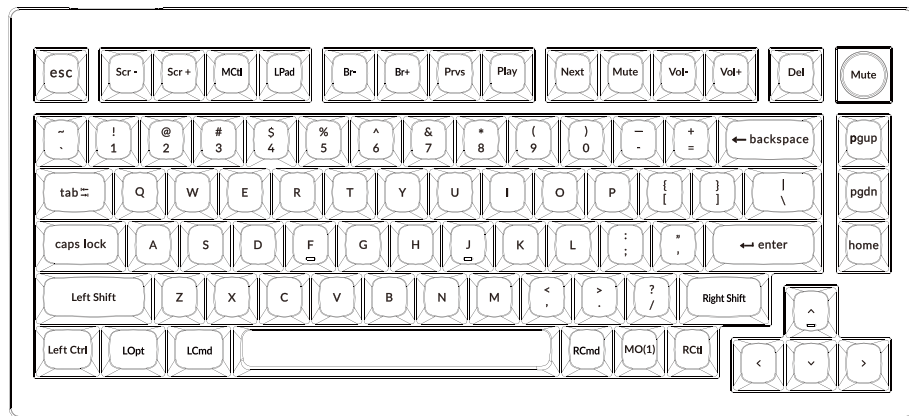

LAYER 1: This layer will be activated when your keyboard's system toggle is switched to Mac and press the fn/MO(1) key.

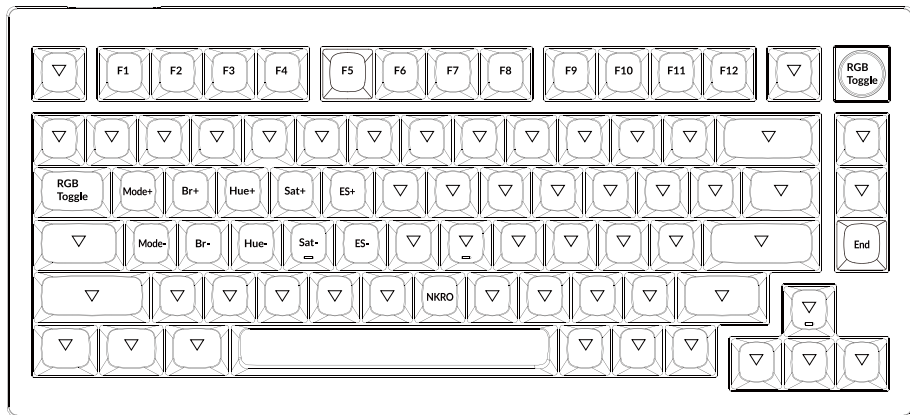 


LAYER 2: This layer will be activated when your keyboard's system toggle is switched to Windows.

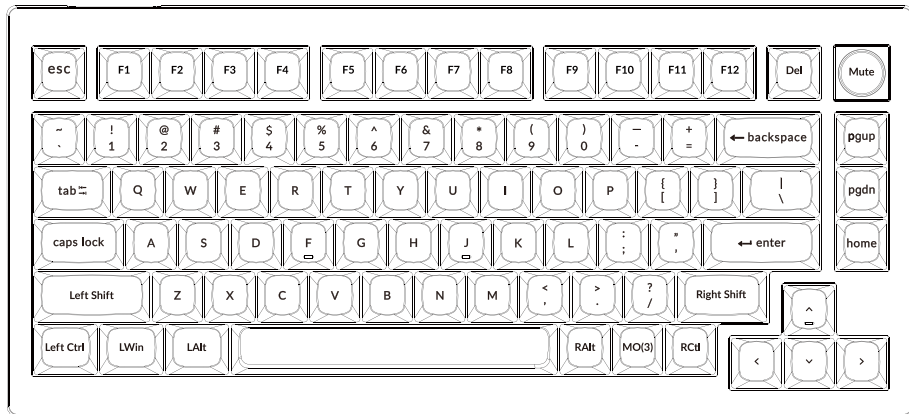 

LWin = Left Windows LAlt = Left Alt RAlt = Right Alt RCtrl = Right Ctrl

 LAYER 3: This layer will be activated when your keyboard's system toggle is switched to Windows and press the fn/MO(3) key.

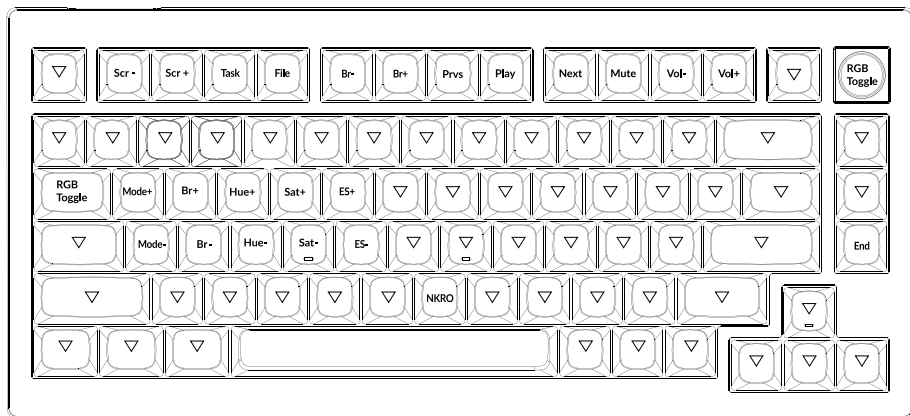

KEY DESCRIPTION

Key Description		Key Description	
Scr-	Screen Brightness Decrease	RGB Md+	RGB Mode Next
Scr+	Screen Brightness Increase	RGB Md-	RGB Mode Previous
Bright-	Backlight Decrease	Hue+	Hue Increase
Bright+	Backlight Increase	Hue-	Hue Decrease
Prvs	Previous	RGB SPI	RGB Speed Increase
Play	Play/Pause	RGB SPD	RGB Speed Decrease
Next	Next	MO(1)	Layer 1 will be activated when holding this key
Mute	Mute	MO(3)	Layer 3 will be activated when holding this key
Vol-	Volume Decrease	Reset	Reset The Keyboard
Vol+	Volume Increase	NKRO	N-key Rollover
RGB Toggle	Turn Backlight on/off		

BACKLIGHT SETTING

- Short-press key combination "fn" + "tab" / "fn" + knob (press) to turn the backlight on/off.
- Short-press key combination "fn" + "W" or rotate the knob clockwise while holding "fn" to increase the backlight brightness.
- Short-press key combination "fn" + "S" or rotate the knob counterclockwise while holding "fn" to decrease the backlight brightness.

POLLING RATE SWITCHING

 
Please configure the polling rate settings through the Keychron Launcher online program:
launcher.keychron.com

Third-party input tools are not compatible with the keyboard.

Due to compatibility, versions, brands and drivers of Windows/macOS, functionalities of third-party input tools may be affected while using the keyboard. Please make sure your operating system and drivers are up to date.

Certain multimedia keys or function keys do not work.

Functions of certain multimedia keys may be disabled due to compatibility, versions, brands, and drivers of devices.

*Multimedia keys: 

Function keys: 

Safety Precaution:

Keep the product, accessories and packaging parts out of the reach of children to prevent any accidents and choking hazards.

Always keep the product dry to avoid corrosion.

Do not expose the product to extreme temperatures below -10°C(14°F) or above 50°C(122°F) to preserve the lifespan of the keyboard.

Keychron, Inc.

Dover, DE 19901, United States

Find us at:

<https://www.keychron.com>

support@keychron.com

 @keychron

 @keychron

 @keychronMK

Designed by Keychron

Made in China



V1 8K 机械键盘用户手册

旋钮版本

完全组装版本

键盘

1x 已组装成品键盘

包含

1x 外壳

1x PCB

1x PC定位板

1x PCB与定位板夹心吸音泡棉

1x IXPE泡棉

1x 乳胶底垫

 
1x PET封音

1x 底部吸音泡棉

4套PCB卫星轴

1套键帽 (PBT材质-双色注塑)

1套机械轴体

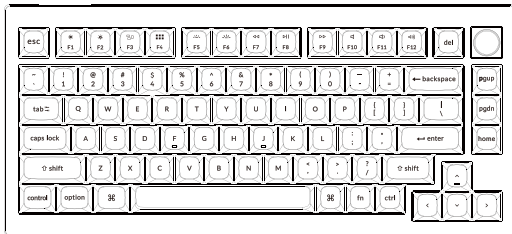

线材

1x Type-C 接口线材

 
1x Type-A to Type-C 转接头

工具

1x 拔轴键器

1x 十字螺丝刀


1x 内六角螺丝刀

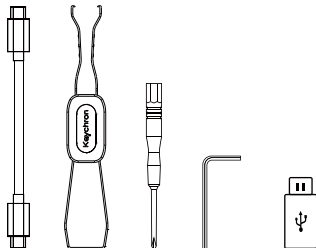

快速入门指南


如果您是Windows用户,请在包装内中找到对应的键帽,然后按照下面的说明找到并替换以下键帽。

 Mac / Windows

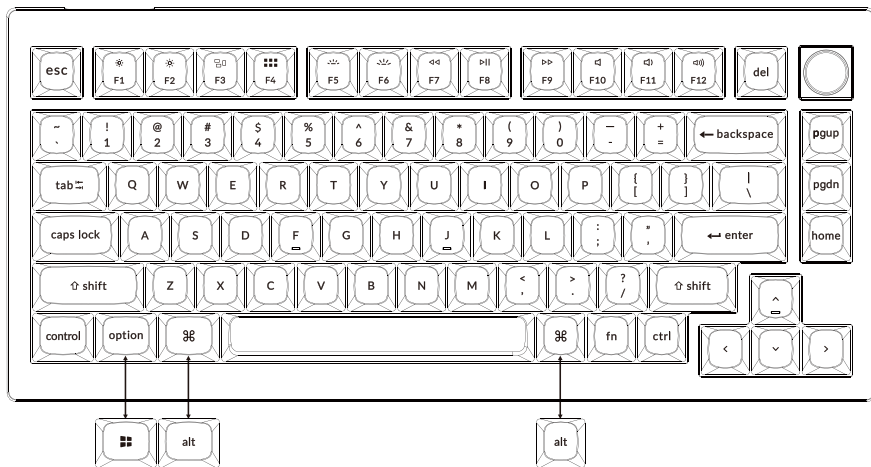

1、系统切换

 请确保键盘左上角的系统拨片切换到对应系统，如果没有选择正确，部分功能将无法使用。



2、关于Keychron Launcher App

 
请访问launcher.keychron.com 使用在线 Launcher app。该软件可以映射按键，创建宏命令，或者刷新固件。如果Launcher app不能识别你的键盘，请联系我们以获得技术支持。




*在线Launcher app只能在最新版本的Chrome, Edge和Opera浏览器中运行。

3、更改键盘背光模式以及快速关闭/开启键盘背光

组合fn+Q键, 更改键盘背光模式

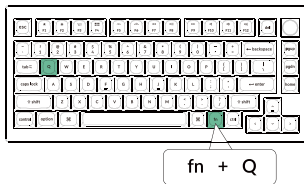


组合fn+tab键, 可快速关闭/开启键盘背光

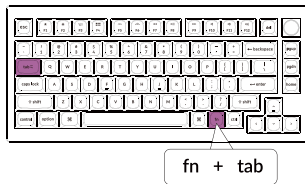 


4、调整键盘背光亮度

 组合fn+W键, 提高键盘背光亮度

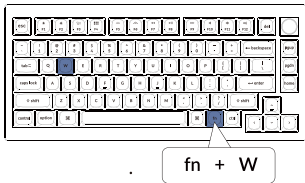


组合fn+S键, 减少键盘背光亮度

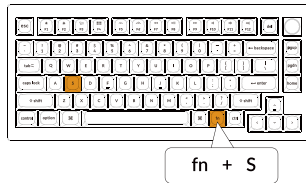 


5、调整背光速度

 组合fn+T键, 增加光效速度。

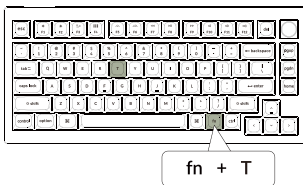

组合fn+G键, 降低光效速度。

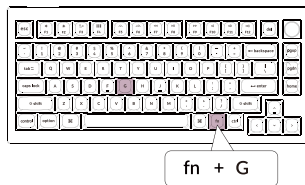 

6、保修

由于V1 8K客制化键盘是可高度定制且易于组装的, 所以键盘的任何一个部件出了问题, 我们只会更换键盘有问题的部件而不是整个键盘。

 


7、关于键盘键层说明

键盘有四层按键设置。
层0和层1是用于Mac系统。
层2和层3是用于Windows系统。

如果您的系统拨片切换到Mac档位，
层0将被激活。

如果您的系统拨片切换到Windows，
那么层2将被激活。
如果您在Windows系统模式下使用，
请对层2进行更改，而不是层0。
否则无法进行按键映射操作。



8、恢复出厂模式&更新固件

如果键盘出现了故障，不知道怎么办？

 
恢复出厂设置

1. 打开键盘 (任意模式均可)。
2. 按住 fn + J + Z (持续 4 秒)。键盘背光灯会呈红色快速闪烁 3 秒，表示键盘已重置。

刷新键盘固件

1. 访问 launcher.keychron.com 打开在线 Launcher web app。
2. 插入电源线。
3. 在Launcher上找到“固件更新”选项，并将键盘与其连接。
4. 按照Launcher提示，完成固件更新。


*在 keychron.com 上搜索关键字“Firmware”可以找到步骤指南。

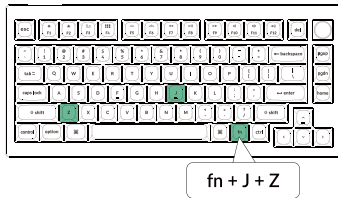

V1 8K 机械键盘规格


规格	
布局	75%
开关类型	机械轴体
宽度	147.7mm
长度	328.05mm
键盘下沿高度	19.3mm (不含键帽) / 28.4mm (含键帽高度)
键盘上沿高度	26.5mm (不含键帽) / 36.5mm (含键帽高度)
键盘脚垫高度	2mm
键盘倾斜角度	3.5° / 7.1° / 9.5°

 V1 8K 机械键盘概述

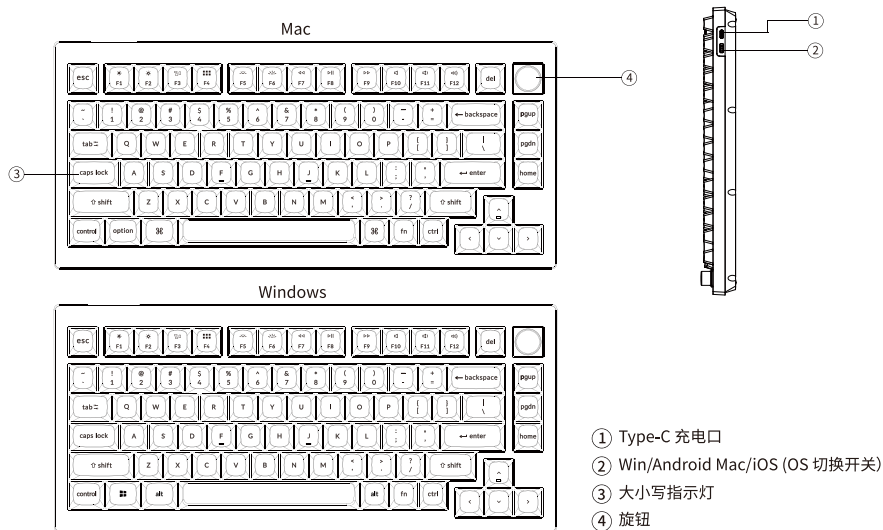


按键布局

 
层0:当您的系统拨片切换到Mac档位的时候,层0将被激活使用。

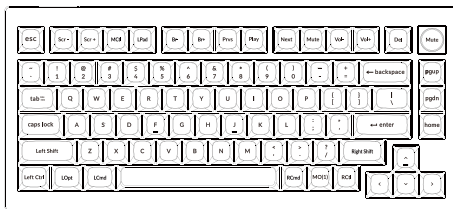

 层1:当您的系统拨片切换到Mac档位并组合fn/MO(1)键的时候,层1将被激活使用。

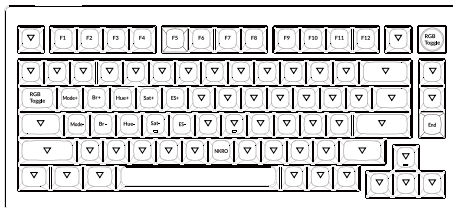


层2:当您的系统拨片切换到Windows档位的时候,层2将被激活使用。

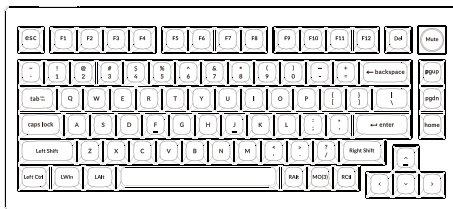 

LWin = Left Windows LAlt = Left Alt RAlt = Right Alt RCtrl = Right Ctrl

 层3:当您的系统拨片切换到Windows档位并组合fn/MO(3)键的时候,层3将被激活使用。

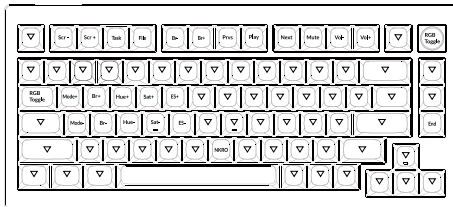

V1 8K 机械键盘多媒体按键说明

按键说明	
Scr-	屏幕亮度-
Scr+	屏幕亮度+
Bright-	键盘背光亮度-
Bright+	键盘背光亮度+
Prvs	上一曲
Play	播放/暂停
Next	下一曲
Mute	静音
Vol-	音量-
Vol+	音量+
RGB Toggle	关闭/开启键盘背光

按键说明	
RGB MD+	下一个RGB灯光模式
RGB MD-	上一个RGB灯光模式
Hue+	下一个灯光颜色
Hue-	上一个灯光颜色
RGB SPI	RGB灯光速度+
RGB SPD	RGB灯光速度-
MO(1)	按住MO(1),层1将被激活
MO(3)	按住MO(3),层3将被激活
Reset	重置键盘
NKRO	全键无冲

背光灯

- 短按组合键“fn+tab” / “fn+旋钮(按下)”可关闭/开启键盘背光。
- 短按组合键“fn+W”或按住“fn”键的同时顺时针旋转旋钮,可增加背光亮度。
- 短按组合键“fn+S”或按住“fn”键的同时逆时针旋转旋钮,可降低背光亮度。

回报率切换

请通过Keychron Launcher在线程序进行回报率设置:launcher.keychron.com

 
第三方输入工具与键盘不兼容。

答：由于Windows/Android操作系统的兼容性、版本、品牌和驱动程序，使用键盘时，第三方输入工具可能会受到影响。请确保您的操作系统和驱动程序是最新的。

某些多媒体键或功能键在设备上不起作用。

答：由于设备的兼容性，系统版本，驱动程序等原因，某些多媒体键或者功能键可能无法使用。

*多媒体键：

功能键：

安全预防措施：

防止儿童接触到产品、附件和包装部件，以防止任何意外和窒息的危险。

保持产品干燥，避免腐蚀。

不要将产品暴露在低于-10°C (14°F) 或高于50°C (122°F) 的极端温度下，以保持键盘的寿命。

Keychron, Inc.

Dover, DE 19901, United States

<https://www.keychron.com>

通过以下方式与我们联系

support@keychron.com

 @keychron

 @keychron

 @keychronMK

Keychron设计

中国制造

中国区总代：渴创技术（深圳）有限公司

执行标准：GB/T 14081-2010

售后热线：400-0766268

地 址：深圳市龙岗区坂田街道大发埔社区
大发路24号文坑工业区2栋201

