

BLACK+DECKER

INSTRUCTION MANUAL MODE D'EMPLOI MANUAL DE INSTRUCCIONES

ScumbusterPro™
ScumbusterPro™
ScumbusterPro™

BHPC210
BHPC220

Please read before returning this product for any reason.

À lire avant de retourner ce produit pour quelque raison que ce soit.
Lea el manual antes de devolver este producto por cualquier motivo.

DEFINITIONS: SAFETY ALERT SYMBOLS AND WORDS

This instruction manual uses the following safety alert symbols and words to alert you to hazardous situations and your risk of personal injury or property damage.

- DANGER:** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
- WARNING:** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
- CAUTION:** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.
- (Used without word)** Indicates a safety related message.
- NOTICE:** Indicates a practice not related to personal injury which, if not avoided, may result in property damage.

Thank you for choosing BLACK+DECKER! If you have a question or experience a problem with your BLACK+DECKER purchase, go to: <http://www.blackanddecker.com/instantanswers>
If you can't find the answer or do not have access to the Internet, call 1-800-544-6986 from 8 a.m. to 5 p.m. EST Mon. – Fri. to speak with an agent. Please have the CATALOG NUMBER available when you call.

To register your new product, visit www.BlackandDecker.com/NewOwner
Consulte le site Web www.BlackandDecker.com/NewOwner pour enregistrer votre nouveau produit.
Visite www.BlackandDecker.com/NewOwner para registrar su nuevo producto.

- On/off switch
- Main body
- Cleaning pad
- Charging station
- Extendable pole (BHPC220 unit only)
- Collar (BHPC220 unit only)
- Handle (BHPC220 unit only)
- Charging station terminals
- Main body charging terminals

- Bouton Marche/Arrêt
- Corps de l'outil
- Feuille de nettoyage
- Poste de recharge
- Poteau rallonge (unité BHPC220 seulement)
- Collet (unité BHPC220 seulement)
- Poignée (unité BHP220 seulement)
- Contacts de recharge de l'unité
- Contacts du poste de recharge

WARNING! Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

WARNING: To reduce the risk of injury, read the instruction manual.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliances, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

WARNING: Read all safety warnings and all instructions. Failure to follow the warnings and instructions listed below may result in electric shock, fire and/or serious injury.

WARNING: To reduce the risk of fire, electrical shock or injury:

- Do not operate in the presence of explosives and/or flammable fumes or liquids.
- Shock hazard. To protect against risk of electrical shock, do not put charging base in water or other liquid.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, or left outdoors, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle charger, including charger plug, and charger terminals with wet hands.

SAVE THESE INSTRUCTIONS

Wireless Certifications and Safety Information

- This device is CAN ICES-3(B)/NMB-3(B) compliant.
- This device complies with Part 15 of the FCC rules and Industry Canada License-exempt RSS standard(s). Operation is subject to the following two conditions:
 - This device may not cause harmful interference, and
 - This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and adaptor.
- Connect the equipment into an outlet on a circuit different from that to which the adaptor is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authority to operate the device. This Class B digital apparatus complies with Canadian ICES-003.

- Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.
- To comply with FCC and Industry Canada RF radiation exposure limits for general population, the antenna used for this device must not be co-located or operating in conjunction with any other antenna or transmitter.

The RBRC® Seal

The RBRC® (Rechargeable Battery Recycling Corporation) Seal on the nickel cadmium, nickel metal hydride or lithium-ion batteries (or battery packs) indicates that the costs to recycle these batteries (or battery packs) at the end of their useful life have already been paid by BLACK+DECKER. In some areas, it is illegal to place spent nickel cadmium, nickel metal hydride or lithium-ion batteries in the trash or municipal solid waste stream and the Call 2 Recycle® program provides an environmentally conscious alternative.

Call 2 Recycle, Inc., in cooperation with BLACK+DECKER and other battery users, has established the program in the United States and Canada to facilitate the collection of spent nickel cadmium, nickel metal hydride or lithium-ion batteries. Help protect our environment and conserve natural resources by returning the spent nickel cadmium, nickel metal hydride or lithium-ion batteries to an authorized BLACK+DECKER service center or to your local retailer for recycling. You may also contact your local recycling center for information on where to drop off the spent battery. RBRC® is a registered trademark of Call 2 Recycle, Inc.

SYMBOLS

The label on your tool may include the following symbols. The symbols and their definitions are as follows:

V.....volts
A.....amperes
Hz.....hertz
W.....watts
min.....minutes
~ or AC.....alternating current
— or DC.....direct current
n₀.....no load speed
Ⓜ.....Class I Construction (grounded)
Ⓜ.....earthing terminal
⚡.....safety alert symbol
Ⓜ.....Class II Construction (double insulated)
...../min or rpm.....revolutions or reciprocation per minute

ASSEMBLY


WARNING: Do not attempt to modify or repair the appliance

Do not attach/remove accessory when unit is running.

Attaching the handle to the extendable pole (BHPC220 unit only) (Fig. B)

- Slide the handle (7) into the extendable pole (5) until the button (10) clicks into position.

 
Fig. B

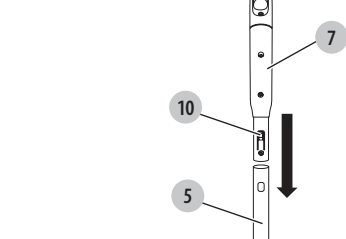

Attaching the collar (BHPC220 unit only) (Fig. C)

- Place the collar (6) onto the main body (2) and press down firmly, ensuring that the catch (11) locks securely into place.
- To remove the collar press the catch (11) and lift the collar off the main body.

 
Fig. C

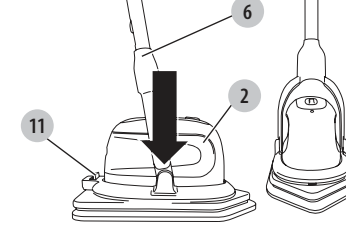

Attaching the extendable pole to the collar (BHPC220 unit only) (Fig. D)

- Twist the lock (12) on the extendable pole (5) in the direction of the "UNLOCK" position.
- Allow the extension (13) to emerge from the extendable pole.
- Slide the collar pole (14) into the extension (13) until the button (15) clicks into position.
- Adjust extension (13) in or out from the extendable pole to desired height.
- Twist the lock (12) on the extendable pole (5) in the direction of the "LOCK" position.

 Fig. D

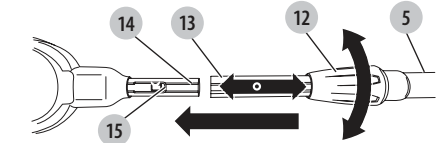

Charging the battery (Fig. E, F)

WARNING: For use only with the supplied charger.

From new, the rechargeable cells of the product need a minimum charge time of 12 hours to ensure full power.

NOTE: Ensure the charging station (4) is placed securely on a flat level countertop surface or secured to a suitable wall. (See Optional mounting of the charging station to a wall)

- The switch must be switched OFF before placing onto the charger. The product will not charge if the switch is in any other position.
- Plug the charger into any standard 120 Volt 60 Hz electrical outlet. Do not use an extension cord.
 - Place the main body (2) into the charging station (4) ensuring the charging station terminals (8) fully contact the main body charging terminals (9) as shown in Figure F.
 - While charging, the charging indicator LED (16) will illuminate.
 - When fully charged the charging indicator LED (16) will turn off.
 - While charging, the charger may get warm, this is perfectly normal and safe. It is safe to leave the appliance connected to the charger indefinitely. The charger automatically reduces power consumption when charging is complete.

WARNING: Do not charge the battery at ambient temperatures below 39 °F (4 °C) or above 104 °F (40 °C).

Optional mounting of the charging station to a wall
The product can be wall mounted, if desired, using the charging station (4). (Screws are not supplied.)

If wall mounting, locate the charger within reach of an electrical outlet, and away from a corner or other obstructions which may impede air flow.

- Use the back of the charging station (4) as a template for the location of the mounting screws on the wall. Mount the charger securely using drywall screws (purchased separately) at least 1" (25.4 mm) long, with a screw head diameter of 0.28–0.31" (7–8 mm) as shown in Figure E.

NOTE: Ensure that the screw sizes are compatible with the holes in charging station.

- Drive screws into wood an optimal depth exposing a sufficient portion of each screw shank to fully engage the slot above each charging station mounting hole. Be sure the screw head is larger than the slot so as to securely hold the charging station to the wall.
- Plug the charger into any standard 120 Volt 60 Hz electrical outlet. Do not use an extension cord.
- The unit can then be stored, when not in use, or during the charging procedure as shown in Figure F.

Fig. E


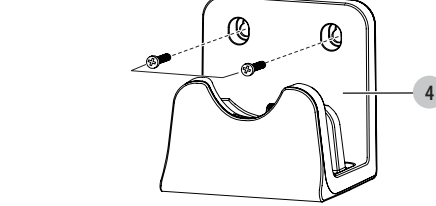 


Fig. F

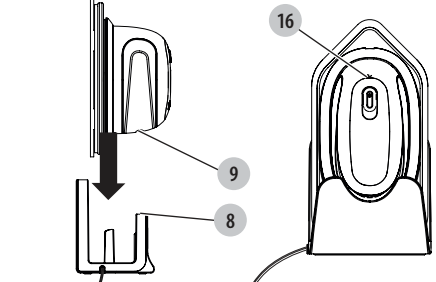 

USE

Switching on and off (Fig. G)

- To turn the scrubber ON, press the ON/OFF switch (1).
- To turn the scrubber OFF, press the ON/OFF switch (1) again.

NOTE: Return the product to the charger immediately after use so that it will be ready and fully charged for the next use. Ensure that the product is fully engaged with the charging station terminals.

Fig. G




Attaching a cleaning pad (Fig. H)

- Place the base of the main body of the unit (2) onto a cleaning pad

NOTE: Ensure that the "loop" side of the cleaning pad (3) is facing up and engages with the "hook" surface on the base of the main body, and press down firmly.

 Fig. H

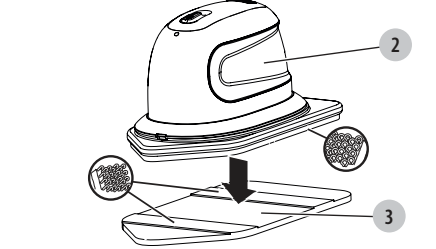

Cleaning

- Move the appliance in a circular pattern. Do not hold the appliance in one spot for too long.

Hints for optimum use

The appliance can be used with a variety of cleaning agents, including sprays, foams, rub-on gels and liquid detergents.

The appliance can be submerged in water at max depth of 8 inches (20 cm) for no more than 30 minutes at a maximum temperature of 86 ° Fahrenheit (30 degrees Celsius). Always read the manufacturer's instructions on the cleaning agent you use. Do not use the appliance with abrasive cleaning agents. Do not use with bleach or ammonia based cleaning products.

WARNING: Wear gloves and eye protection when using aggressive chemical cleaners.

If you are unsure about using this appliance on a particular surface, test it first on a small inconspicuous patch.

MAINTENANCE

Use only mild soap and damp cloth to clean the appliance. Store the appliance and attachments/accessories indoors.

WARNING: Make sure the appliance is completely dry before charging it.

IMPORTANT: To assure product SAFETY and RELIABILITY, repairs, maintenance and adjustment (other than those listed in this manual) should be performed by authorized service centers or other qualified service organizations, always using identical replacement parts.

TROUBLESHOOTING

If the product does not work, check the following:

- The charger was correctly plugged in for recharge. (It feels slightly warm to the touch.)
- The charger cord is not damaged and is correctly attached.
- The charger is plugged into a working electrical outlet.
- The switch is in the "OFF" position when charging.

For assistance with your product, visit our website

www.blackanddecker.com for the location of the service center nearest you or call the BLACK+DECKER help line at **1-800-544-6986**.

ACCESSORIES

Recommended accessories for use with your appliance are available from your local dealer or authorized service center. If you need assistance regarding accessories, please call: **1-800-544-6986**.

WARNING: The use of any accessory not recommended for use with this appliance could be hazardous.

	General purpose	BHPC200A
	Abrasive - Heavy duty	BHPC201A
	Microfiber	BHPC202A

SERVICE INFORMATION

All BLACK+DECKER Service Centers are staffed with trained personnel to provide customers with efficient and reliable power tool service. Whether you need technical advice, repair, or genuine factory replacement parts, contact the BLACK+DECKER location nearest you. To find your local service location, call: **1-800-544-6986** or visit www.blackanddecker.com

TWO-YEAR LIMITED WARRANTY

Black & Decker (U.S.) Inc. warrants this product to be free from defects in material or workmanship for a period of two (2) years following the date of purchase, provided that the product is used in a home environment. This limited warranty does not cover failures due to abuse, accidental damage or when repairs have been made or attempted by anyone other than BLACK+DECKER and its Authorized Service Centers. A defective product meeting the warranty conditions set forth herein will be replaced or repaired at no charge in either of two ways: The first, which will result in exchanges only, is to return the product to the retailer from whom it was purchased (provided that the store is a participating retailer). Returns should be made within the time period of the retailer's policy for exchanges. Proof of purchase may be required. Please check with the retailer for its specific return policy regarding time limits for returns or exchanges. The second option is to take or send the product (prepaid) to a BLACK+DECKER owned or authorized Service Center for repair or replacement at BLACK+DECKER's option. Proof of purchase may be required. BLACK+DECKER owned and authorized service centers are listed online at www.blackanddecker.com. This warranty does not apply to accessories. This warranty gives you specific legal rights and you may have other rights which vary from state to state or province to province. Should you have any questions, contact the manager of your nearest BLACK+DECKER Service Center. This product is not intended for commercial use, and accordingly, such commercial use of this product will void this warranty. All other guarantees, express or implied, are hereby disclaimed. LATIN AMERICA: This warranty does not apply to products sold in Latin America. For products sold in Latin America, check country specific warranty information contained in the packaging, call the local company or see the website for such information.

Imported by Black & Decker (U.S.) Inc.,
701 E. Joppa Rd.
Towson, MD 21286

BlackandDecker.com
1-800-544-6986

Définitions : symboles et termes d'alarmes sécurité

Ces guides d'utilisation utilisent les symboles et termes d'alarmes sécurité suivants pour vous prévenir de situations dangereuses et de risques de dommages corporels ou matériels.

- DANGER :** indique une situation dangereuse imminente qui, si elle n'est pas évitée, entraînera la mort ou des blessures graves.
- AVERTISSEMENT :** indique une situation potentiellement dangereuse qui, si elle n'est pas évitée, pourrait entraîner la mort ou des blessures graves.
- ATTENTION :** indique une situation potentiellement dangereuse qui, si elle n'est pas évitée, pourrait entraîner des blessures légères ou modérées.
- (Si utilisé sans aucun terme)** Indique un message propre à la sécurité.
- AVIS :** indique une pratique ne posant aucun risque de dommages corporels mais qui par contre, si rien n'est fait pour l'éviter, pourrait poser des risques de dommages matériels.

AVERTISSEMENT! lire tous les avertissements de sécurité et toutes les directives. Le non-respect des avertissements et des directives pourrait se solder par un choc électrique, un incendie et/ou une blessure grave.

AVERTISSEMENT : afin de réduire le risque de blessures, lire le mode d'emploi de l'outil.

CONSIGNES DE SÉCURITÉ IMPORTANTES

Lors de l'utilisation d'appareils électriques, toujours observer des précautions de base, notamment les suivantes :

LIRE TOUTES LES CONSIGNES AVANT D'UTILISER L'APPAREIL ÉLECTRIQUE.

AVERTISSEMENT : lire tous les avertissements de sécurité et toutes les instructions. Ne pas suivre les avertissements et les instructions ci-dessous peut conduire à un choc électrique, un incendie et/ou des blessures graves.

AVERTISSEMENT : afin de réduire le risque d'incendie, de choc électrique ou de blessure :

- Ne pas faire fonctionner en présence d'explosifs et/ou d'émanations ou liquides inflammables.
- Danger de choc électrique. Afin de vous protéger contre le risque de choc électrique, ne pas mettre le poste de recharge dans l'eau ou autre liquide.
- Ne pas le laisser être utilisé comme jouet. Une attention particulière est nécessaire lorsque l'appareil est utilisé par des enfants ou près des enfants.
- Utiliser seulement comme décrit dans le présent manuel. Utiliser seulement les accessoires recommandés du fabricant.
- Ne pas utiliser avec un cordon ou une fiche endommagée. Si l'appareil ne fonctionne pas comme il le devait, s'il a été échappé, endommagé ou laissé à l'extérieur, le retourner à un centre de service.
- Ne pas tirer ou transporter par le cordon, utiliser celui-ci comme une poignée, le passer sous une porte ou autour d'arêtes ou coins acérés. Ne pas passer la machine sur le cordon. Garder le cordon éloigné des surfaces chaudes.
- Ne pas débrancher en tirant sur le cordon. Pour débrancher, saisir la fiche, et non le cordon.
- Ne pas toucher au chargeur ou sa fiche et contacts si vos mains sont mouillées.
- Gardez vos cheveux, vêtements amples, doigts et toutes les parties de votre corps loin des ouvertures et des pièces en mouvement de l'outil.
- Ne pas recharger l'appareil à l'extérieur.
- Pour recharger l'appareil, n'utiliser que le chargeur fourni par le fabricant.
- Ne pas incinérer l'appareil même s'il est sévèrement endommagé. Les piles peuvent exploser sous la chaleur.
- Cet appareil n'est prévu que pour usage domestique et non pour utilisation commerciale ou industrielle.
- Ne pas laisser le cordon pendre du bord d'une table ou comptoir ou entrer en contact avec une surface chaude. Le poste de recharge ne devrait pas être placé ou monté près d'un évier ou d'une source de chaleur.
- Brancher le chargeur directement dans une prise de courant. Ne pas brancher sur un cordon de rallonge.

