

Installation manual

M Manual Projection Screen

en Installation Manual

ar تثبيت الشاشة

cz Instalační manuál

da Installationsmanual

de Installationsanleitung

ee Paigaldusjuhend

el Οδηγίες εγκατάστασης

es Manual de instalación

fi Asennusohje

fr Installation Manuel

he הנקתה יירדמ

hu Szerelési kézikönyv

it Manuale di installazione

jp 取り付け説明書

kr 설치 설명서

li Montavimo instrukcija

lt Uzstādīšanas rokasgrāmata

nl Installatie handleiding

no Installasjonshåndbok

pl Instrukcja instalacji

pt Manual de instalação

ro Manual de instalare

ru Инструкция по установке

sk Inštaláčny manuál

sl Navodila za montažo

sv Installationsmanual

tr Montaj kılavuzu

zh 安装手册



www.multibrackets.com

PRE INSTALLATION



Note 1


Carefully unpack the screen.

Note 2

Always handle the screen in a leveled position on a clean surface / area.

INSTALLATION


1

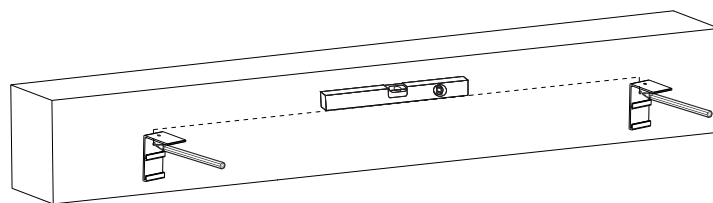

Make sure that the hooks are in level by bubble level


2a

Wall installation

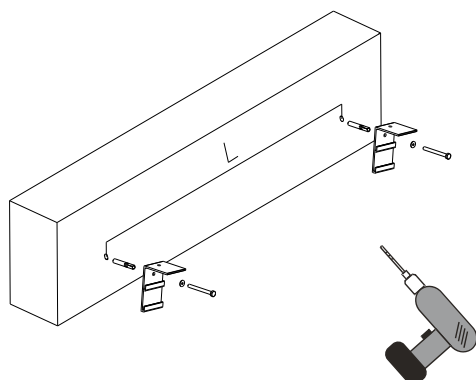


2b

Ceiling installation

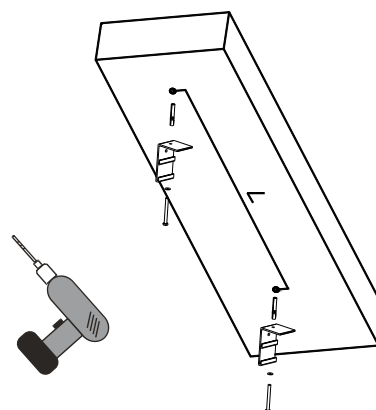


3

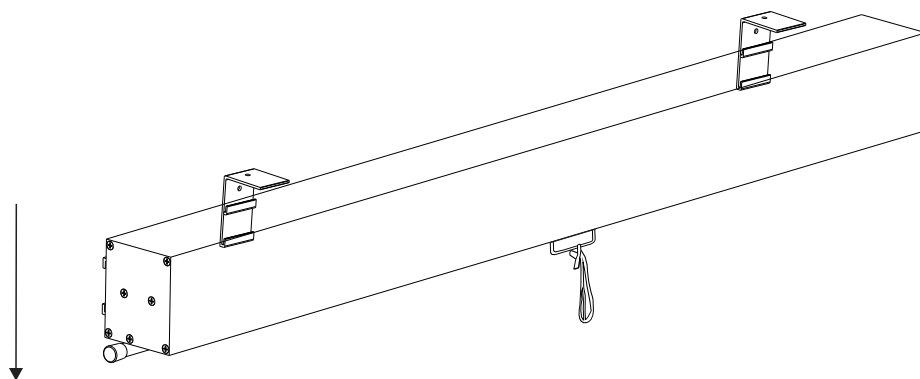


Mount the projection screen on the two hooks

4

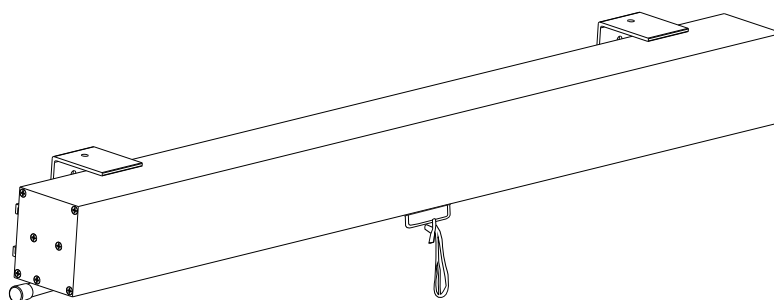


OPERATION

1

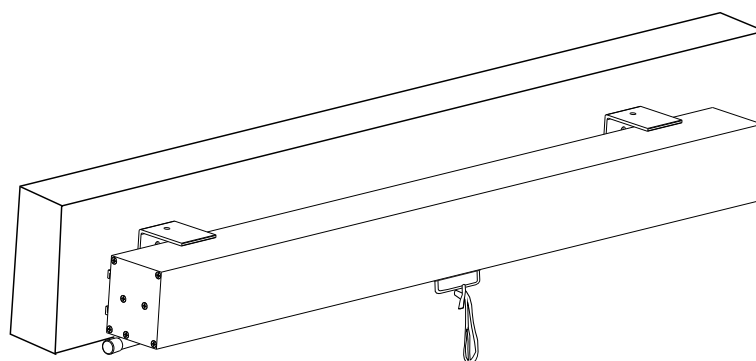


2a

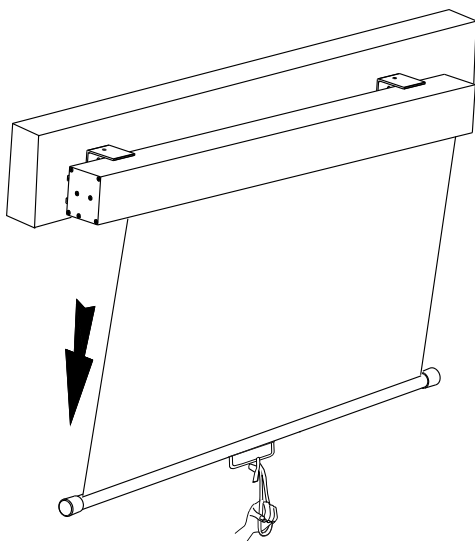


2b

CAUTION!
Do not pull screen further
than 30 cm down.

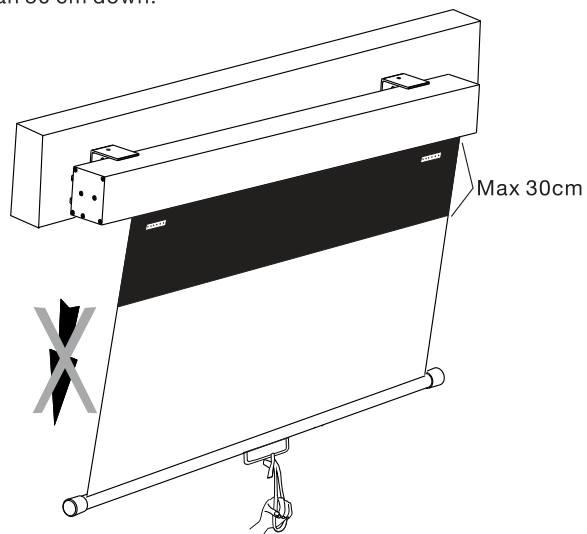

3

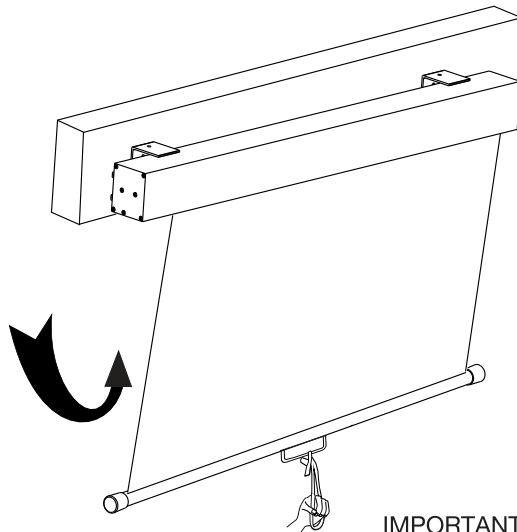

IMPORTANT:
Please gently roll up the screen after use.

Screen Maintenance


Note: Always pull the screen down or let it up in a 90-degree vertical angle. Do not allow the screen to touch the screen case when the screen goes up or comes down to avoid damaging the screen material.

1. Pull the screen down from the lanyard or from the handle only in a 90-degree angle. Do not attempt to pull the screen down by the surface or touch the screen, as it will damage the screen and void the warranty.

Note: An internal auto-lock mechanism system will cause the screen to stop and lock on the position at intervals.

2. If you want the screen to retract back, simply pull the screen down more than 5cm and retract the screen back by quickly and smoothly releasing it up gently. The screen is equipped with slow **retraction** which allows the screen to slowly retract without the need to hold on to the handle or lanyard. Simply release the handle and the screen will retract by itself.

Note: Always release at a 90-degree angle and do not let go until the screen is entirely inside the case if ever the screen feels stuck, keep in mind that the screen's mechanism is new and needs to be run up/down a few times to loosen up. If this happens, carefully with a little force yank the screen straight down to unlock the screen.

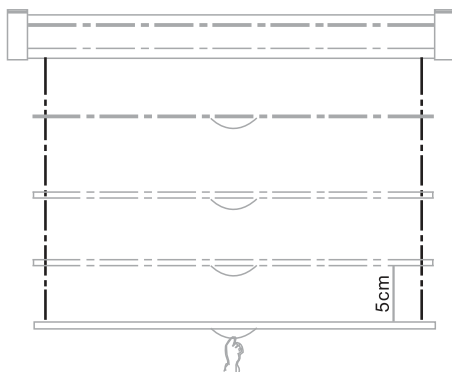

Note: Improperly bringing the screen up/down will damage the screen material or rolling system.

Screen Maintenance

When not in use, retract screen in its housing to keep the screen material surface clean.