

515_PRO

507_PRO

505_PRO

Vaporella®

MANUALE DI ISTRUZIONI

INSTRUCTION **MANUAL**
MANUEL D'INSTRUCTIONS

MANUAL DE INSTRUCCIONES
BEDIENUNGSANLEITUNG

MANUAL DE INSTRUÇÕES

REGISTRA IL TUO PRODOTTO
REGISTER YOUR PRODUCT
ENREGISTREZ VOTRE PRODUIT
REGISTRA TU PRODUCTO
GERÄTREGISTRIERUNG
REGISTE O SEU PRODUTO
www.politi.com

 **POLTI®**
NATURAL HOME EFFICIENCY

 
 
 
 
 
515_PRO




505_PRO
507_PRO



IMBUTO
FUNNEL
ENTONNOIR
EMBUDO
TRICHTER
FUNIL

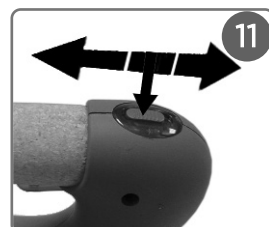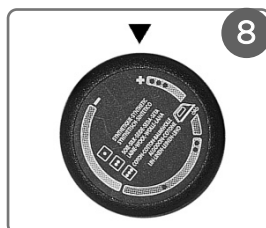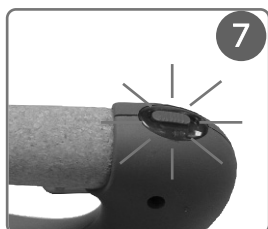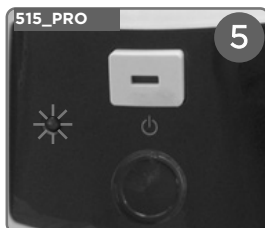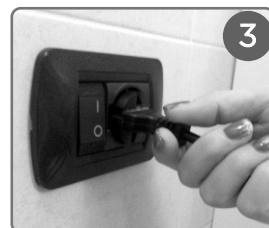

OPTIONAL

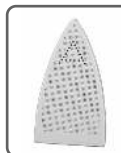 

PAEU0200

SOLETTA ANTI -LUCIDO
ANTI -SHINE SOLEPLATE
SEMELLE ANTI -BRILLANT
SUELA ANTI -BRILLOS
ANTI -GLANZEFFEXT -SOHLE
BASE ANTI -BRILHOS

PAEU0200

Kalstop



FPAS0001

ASSE VAPORELLA
VAPORELLA SHAFT
PLANCHE VAPORELLA
TABLA VAPORELLA
BÜGELBRETT VAPORELLA
TÁBUA VAPORELLA

PAEU0232



TAPPETINO APPOGGIAFERRO
IRON REST MAT
REPOSE-FER
SOPORTE PLANCHA
ABSTELLPLATTE FÜR BÜGELEISEN
TAPETE PARA APOIAR O FERRO



FPAS0030

ASSE STIRA E ASPIRA
STIRA E ASPIRA SHAFT
PLANCHE STIRA E ASPIRA
TABLA STIRA E ASPIRA
BÜGELBRETT STIRA E ASPIRA
TÁBUA STIRA E ASPIRA



PAEU0202

TELO UNIVERSALE
UNIVERSAL CLOTH
TOILE UNIVERSELLE
PAÑO UNIVERSAL
UNIVERSALTUCH
CAPA UNIVERSAL



PAEU0240

KIT STIRO
IRONING KIT
KIT DE REPASSAGE
KIT DE PLANCHADO
BÜGELSET
KIT PARA PASSAR



FPAS0032

ASSE STIRA E ASPIRA TOP
STIRA E ASPIRA TOP SHAFT
PLANCHE STIRA E ASPIRA TOP
TABLA STIRA E ASPIRA TOP
BÜGELBRETT STIRA E ASPIRA TOP
TÁBUA STIRA E ASPIRA TOP



PAEU0096

TROLLEY

Gli accessori optional sono disponibili all'acquisto nei migliori negozi di elettrodomestici, nei Centri Assistenza autorizzati e sul sito www.polti.com.

The optional accessories are on sale at all the best domestic appliance retailers, an Authorised Polti Service Centre or online at www.polti.com.

Les accessoires en option sont disponibles dans les meilleurs magasins d'appareils électroménagers, un SAV agréé ou sur le site www.polti.com.

Los accesorios opcionales están en venta en las mejores tiendas de electrodomésticos, Centros de Asistencia Autorizado o en la página web www.polti.com.

Die optionalen Zubehörteile sind in gut geführten Haushaltsgeschäften, bei den Autorisierten Kundendienstcenter oder auf www.polti.com erhältlich.

Os acessórios opcionais estão disponíveis para compra nas melhores lojas de eletrodomésticos, um dos Centros de Assistência Autorizados ou no site www.polti.com.

WELCOME TO THE WORLD OF VAPORELLA

THE PROFESSIONAL IRONING SYSTEM DIRECTLY TO YOUR HOME



ACCESSORIES FOR ALL NEEDS

On our web site **www.polti.com** and in good appliance shops you will find a wide range of accessories to increase the performance and the practical applications of your appliances to make home cleaning even easier.

To check the compatibility of an accessory with your appliance, search the code PAEUXXXX / FPASXXX listed next to each accessory on page 3.

If the accessory code you wish to buy is not listed in this manual, please contact our Customer Service team for more information.



REGISTER YOUR PRODUCT

Visit our website **www.polti.com** or call our Customer Services department to register your product.

You can benefit from a special welcome offer, in participating countries, and keep up to date on all the latest Polti news, as well as buy accessories and consumables.

To register your product, in addition to your personal information, you must enter the serial number (SN) which you will find on the silver label, located on the box and underneath the appliance.

To save time and have your serial number to hand, write it in the space provided on the back cover of this manual.



OFFICIAL YOUTUBE CHANNEL

Want to know more? Visit our official channel:
www.youtube.com/poltispa.

We'll show you the natural power and ecological effectiveness of steam both for ironing and for cleaning, through many videos of Vaporella and of all other products in Polti's world.

Sign up to the official channel to keep yourself updated about our video contents!

ATTENTION: The safety warnings are only indicated on this manual.

SAFETY WARNINGS

IMPORTANT PRECAUTIONS FOR USE



WARNING! BEFORE USING THE APPLIANCE, CAREFULLY READ ALL THE INSTRUCTIONS AND WARNINGS IN THIS MANUAL, AND ON THE APPLIANCE ITSELF.



Politi S.p.A. declines all liability for any accident deriving from any improper use of this appliance.

Correct use of the product is only as detailed in this instruction manual.

Any use which does not comply with these instructions will invalidate the warranty.

SAFETY SYMBOLS:



WARNING: High temperature. Risk of scalding!

If shown on the product, do not touch as parts may be very hot.



WARNING: Steam.

Risk of scalding!

This appliance reaches very high temperatures. Incorrect use of the device can cause scalding.

- Never disassemble or carry out maintenance on the appliance apart from that indicated in this manual. In the event of a fault or malfunction, do not try and repair the appliance yourself. In the event of a heavy knock, fall, damage or fall into water, the appliance may not longer be safe to use. Incorrect use or a lack of respect for the instructions herein may lead to serious accidents. Always contact Authorised Service Centres.
- To carry out any maintenance or cleaning requiring access to the boiler, ensure that the appliance is switched off at the

power switch and disconnected from the mains for at least two hours.

- This appliance can be used by children over 8 years old, by people with reduced physical, sensory or mental abilities or by inexperienced persons only where they are instructed in advance on its safe use and only if informed of the dangers related to the product. Children must not play with the appliance. The cleaning and maintenance of the appliance may not be done by children without the supervision of an adult. Keep the appliance and the power cable out of the reach of children under 8 years of age when the appliance is on or during the cooling phase.
- Keep all the parts of the packaging out of the reach of children; they are not toys. Keep the plastic bag out of the reach of children: danger of suffocation.
- This appliance is destined exclusively for indoor domestic use. **In order to reduce the risk of accidents, including: fires, electrocution, personal injury and scalding, both during use and during preparation, maintenance and storage, always take the fundamental precautions listed in this manual.**

RISKS CONNECTED TO THE POWER SUPPLY - ELECTROCUTION

- The earthing system and highly sensitive residual-current circuit breaker, complete with magnetothermic cut-out for your domestic system, guarantee safe use of electrical appliances. Therefore, for your own safety, check that the electrical system to which the appliance is connected complies with current laws.
- Do not connect the appliance to the mains if the voltage does not correspond with that of the domestic electrical circuit in use.
- Do not overload the sockets with adaptors and/or transformers. Only connect the product to a single socket with current that is compatible with the supplied plug.

- Do not use electrical extension leads that are unsuitable for the power rating or which are not compliant with law. They may overheat and possibly lead to short circuiting, fire, power outage or damage to the equipment. Only use extension leads which are certified, suitable for the power rating, supporting 16A and earthed.
- Always turn the appliance off at the ON/OFF switch before unplugging it.
- To remove the plug from the socket, do not pull the power cable, but hold the plug itself to avoid damage to the plug and the cable.
- Always unplug the appliance if it is not in use and before any preparation, maintenance or cleaning operation.
- The appliance must not be left unattended if plugged in to the mains.
- Fully unwind the cable from the cable winder (if present) before connecting the appliance to the mains and before use.
- Do not pull or jerk the cable and steam tube or expose it to tensions (twisting, crushing or stretching). Keep the cable and the steam tube away from hot and/or sharp surfaces and elements. Avoid crushing the cables in doors and windows. Do not pull the cable and the steam tube tight around corners. Avoid treading on the cable. Do not pass over the cable and the steam tube with the appliance. Do not wind the power cable around the appliance, especially if the appliance is hot.
- Do not substitute the plug on the power cable.
- If the power cable and the steam tube is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid all possible hazards. Do not use the product if the power cable and the steam tube are damaged.
- Do not touch or use the appliance barefoot and/or with wet body or feet.
- Do not use the appliance near containers full of water, e.g.

sinks, baths and swimming pools.

- Do not immerse the appliance, including the power cable and plug, in water or other liquids.
- Steam must not be directed towards equipment containing electric or electronic components.

RISKS DURING USE OF THE PRODUCT – INJURIES/SCALDING

- The product should not be used in areas where there is a danger of explosions or in the presence of toxic substances.
- Do not pour toxic substances, acids, solvents, detergents, corrosive substances and/or explosives or perfumes into the boiler.
- Only pour water or the water mix indicated in the Chapter “WHICH WATER TO USE” into the boiler.
- Do not direct the steam jet or the iron onto toxic substances, acids, solvents, detergents or corrosive substances. The handling and removal of dangerous substances must be carried out according to the indications of the manufacturers of these substances.
- Do not direct the steam jet or the iron onto explosive powders or liquids, hydrocarbons, open flames and or extremely hot objects.
- Keep all body parts away from the vacuum intake and from any moving parts.
- Do not position the product near sources of heat such as fireplaces, stoves and ovens.
- Do not obstruct the openings and grills on the product.
- Do not direct the steam jet or the iron on any part of the body of people or animals.
- Do not direct the steam jet or the iron on clothes while they are being worn.
- Cloths and rags and fabrics which have been subjected to a deep steam reach very high temperatures, above 100°C. Take care when handling the appliance.
- During use, keep the product in a horizontal position on stable

surfaces.

- To continue steam delivery, return the switch to its original position.
- Iron only on supports that are heat resistant and which allow the steam to permeate.
- When placing the iron on its stand, make sure that the surface on which the stand is placed, is stable.
- If the iron rest mat needs to be replaced, only use original spare parts.
- The iron must be used and rested on a stable surface.
- Do not place the hot appliance on heat-sensitive surfaces.
- If ironing whilst sitting down, take care to ensure that the jet of steam is not angled towards your legs. Steam can scald.
- Before connecting the appliance to the current, ensure that the continuous steam jet button is not pressed.
- Never leave the iron unattended when it is plugged in.
- Always use the appliance with the safety cap supplied or an original replacement part. Using non-original Polti safety caps can lead to accidents.
- When accessing the pressurised boiler (removing the cap, filling up), ensure that the appliance has been switched off at the power switch and disconnected from the mains for at least two hour, allowing it to cool. There is a risk of accidents while the boiler is a switched on/hot and pressurised.
- Do not connect the appliance with the safety cap removed. Carefully tighten the safety cap before plugging in and turning on the appliance.
- Before turning on the appliance, check that there is nothing blocking the mouth of the boiler (filler bottle, funnel, or other objects), and that the safety cap is closed.
- Check that the safety cap is correctly tightened; if steam is escaping from the cap, switch off the boiler, unplug the power cable, wait for two hour for the appliance to cool, and then unscrew. Check the condition of the safety cap and seal. If the cap is in good condition, screw it back on completely. If

steam continues to escape from the cap, take the appliance to the nearest authorised service centre.

- Periodically check the condition of the safety cap and seal. Impact and being dropped may compromise the safety of the cap. Replace with an original spare part or replace the seal.
- If the cap spins freely, this indicates that the boiler is still pressurised and therefore hot. Never force the cap open, whether the appliance is switched on or the boiler is switched off and the appliance is disconnected from the mains. Always wait for the boiler to cool, opening the cap without force.
- Do not use tools to unscrew the cap. If the cap cannot be removed, even once the appliance has cooled, go to your nearest authorised service centre.
- **WARNING**  Never fill the boiler as soon as the safety cap has been opened when the boiler is still hot, even if the appliance is unplugged from the mains. On contact with the hot, empty boiler, cold water will evaporate producing a spray of steam which can cause burns. Only fill the boiler when cold and always keep your face away from the boiler mouth when filling.
- The use of non-original Polti caps and disregard for the instructions in this manual constitutes improper use. Polti S.p.A. declines all liability for any accident deriving from any improper use of this appliance.

CORRECT USE OF THE PRODUCT

This appliance has been designed only for domestic use as a steam iron with a separate boiler according to descriptions and instructions provided in this manual. Please read these instructions carefully and keep them. If this manual is lost, it can be consulted and/or downloaded from the website www.polti.com.

POLTI S.p.A. reserves the right to change equipment or accessory specification without prior notice.

Before leaving our factory all our products are rigorously tested. This is the reason why your VAPORELLA may contain some residual water in the boiler and in the tank.

Correct use of the product is only as detailed in this instruction manual. Any other use may damage the appliance and invalidate the warranty.

INFORMATION FOR USERS

Pursuant to European Directive 2012/19/EU, regarding electric and electronic appliances, this appliance must not be disposed of with domestic waste, but sent to an official collection facility. This appliance complies with EU Directive 2011/65/EU



The crossed-out bin symbol on the appliance indicates that, at the end of its useful lifespan, the product must be disposed of separately from other waste. Therefore, at the end of its life, the user must handover the appliance to an appropriate collection centre for electric and electronic waste. Proper separate waste collection to facilitate the subsequent recycling, treatment and environmentally compatible disposal of the appliance helps to prevent negative effects on the environment and human health, and promotes recycling of the materials the product is made of. Unlawful disposal by the owner involves the application of the administrative sanctions envisaged by current legislation.

WHICH WATER TO USE IN THE BOILER

This appliance has been designed to function with normal medium tap water between 8°F and 20°F. If the tap water contains a lot of limescale use a mix composed of 50% tap wa-

ter and 50% demineralised water which is widely available to purchase. Do not use pure demineralised water.

Warning: check the hardness of the water at the technical office at your local council or the local water supplier.

If you only use tap water, you can reduce the formation of limescale by using the special Kalstop decalcifying product, distributed by Polti, and available for sale at all major domestic-appliance stores or online at www.polti.com.

Never use distilled water, rain water or water containing additives (e.g. starch, perfumes), or water produced by other domestic appliances, by water softeners or filter jugs. Do not use chemical substances or detergents.

1. PREPARATION FOR USE

1.1 Place the boiler on a firm, flat and heat-resistant surface.

1.2 Unscrew the safety cap (1) and fill the boiler with 0.9 l of water (if completely empty), making sure it does not overflow, using the special funnel (2). Carefully screw the safety cap back on, checking that it is completely closed (1).

This operation must always be carried out when the boiler has cooled and with the power cable disconnected from the mains.

1.3 Connect the power cable to an appropriate mains socket (3).

Completely unwind the power cable before plugging it into the mains and before use, and always use the appliance with the power cable completely unwound.

1.4 Press the ON/OFF switch (4) pressure indicator light (5)(6) and iron heating indicator light (7) will come on.

WARNING: if steam is escaping from the safety cap, switch the appliance off and unplug it from the mains. Wait for two hour for the appliance to cool before unscrewing the cap and screwing it back on.

WARNING: Never leave the filling bottle or the funnel resting on the mouth of the boiler, with the product connected to the power supply, since this could cause burns.

WARNING: When first operating steam, there may be some drops of water mixed with the steam due to temperature imbalances. Direct the first jet of steam onto a rag.

2. IRON TEMPERATURE ADJUSTMENT

Before ironing an item of clothing, always check the symbols on its label, for the instructions provided by the manufacturer.

Check, based on the following table, the most appropriate type of ironing and select the most appropriate temperature on the iron (8):

	High temperature – cotton, linen: Set the iron temperature adjustment knob to the position •••
	Medium temperature – wool, silk: Set the iron temperature adjustment knob to the position ••
	Low temperature – synthetic, acrylic, nylon, polyester: Set the iron temperature adjustment knob to the position •
	- Do not iron - Steam ironing and steam treatment not allowed

ATTENTION: For low temperature we do not recommend the use of steam since water could come out from the holes on the soleplate. For medium temperature alternate the use of steam and dry ironing to avoid water leaking from the holes on the soleplate.

Divide the laundry according to the symbols on the garment labels or according to the kind of fabric. Always start ironing with the garments that require the lowest temperature, in order to reduce the waiting times and avoid the risk of burning the fabrics.

3. STEAM IRONING

3.1 Make sure that chapter 1 has been completed and regulate the temperature of the iron (9) as described in chapter 2

3.2 Wait for the “Steam Ready” indicator light (5)(6) and “Iron Heating” indicator light (7) to turn off.

3.3 **Only for Vaporella 515 Pro** Adjust the steam flow by turning the knob in a clockwise direction to increase the jet of steam (9). Turning it in an anticlockwise direction reduces the steam flow. We recommend maximum for heavy fabrics such as jeans and linen, medium for cotton and minimum for lightweight or delicate fabrics.

3.4 Press the steam button (10) on the iron to

make steam come out of the holes on the plate. Releasing the button, the flow stops. Proceed to iron the garments.

When first using the steam, there may be some drops of water leaking out of the plate, this is due to imperfect thermal stabilization. We therefore recommend that the first jet of steam be directed onto a cloth (clean rag).

3.5 To have a continuous jet of steam move the button forward (11). The steam will continue to come out even when the button is released. To interrupt the supply, move the button backward (11).

The indicator lights “Iron heating” and “Steam ready” turn on and off during use. This indicates that the electrical resistor has started to work to keep the pressure of the boiler steady. This is a normal occurrence, and it is therefore possible to continue ironing.

ATTENTION: Do not place the hot iron on any surface. Vaporella is equipped with an iron rest mat with soft non-slip inserts designed to resist high temperatures.

4. VERTICAL IRONING

It is possible to use the iron vertically to remove creases from fabrics and/or to freshen up the fibres, eliminating possible residual odours.

Hold the iron vertically, push the steam button (10) and touch the fabric slightly with the soleplate, if the type of fabrics allows it.

5. DRY IRONING

For dry ironing, adjust the temperature of the iron as described in Chapter 2. When dry ironing, be careful not to press the steam button since water could leak from the plate.

6. OUT OF WATER

When the appliance does not release steam anymore, this means there is no more water in the boiler.

WARNING: Never fill the boiler as soon as the safety cap has been opened when the boiler is still hot, even if the appliance is unplugged from the mains. On contact with the hot, empty boiler, cold water will evaporate producing a spray of steam which can cause burns. Only fill the boiler when cold and always keep your face away from the boiler mouth when filling.



WARNING: Steam.
Risk of scalding!

To continue with use, proceed as follows:

- Operate the steam request button on the iron until the steam stops flowing.
- Turn the ON/OFF switch off.
- **Unplug from the mains electricity.**
- Wait 10 minutes and remove the safety cap, unscrewing it without force.
- Leave the appliance to cool for at least 10 minutes.
- Fill the boiler with 0,9l of water.
- Carefully screw the safety cap back on, checking that it is completely closed.

WARNING: If, during unscrewing, the cap spins freely or if steam is escaping, immediately stop the operation, ensuring that the boiler is switched off and the power cable is unplugged from the mains. Wait for the appliance to cool (two hour) and unscrew the cap before removal.

7. GENERAL MAINTENANCE

Before carrying out any maintenance on the device, always unplug it from the power mains making sure that the product has cooled down before proceeding.

To clean the outside of the appliance, only use a damp cloth and tap water.

Do not use detergents of any type.

Clean the iron soleplate when it is completely cold with a damp cloth or with a non-abrasive sponge.

7.1 BOILER MAINTENANCE

For good maintenance of the boiler we suggest using **Kalstop**, the special natural-base limescale, distributed by Polti, and available for sale at all major domestic-appliance stores or online at www.polti.com.

8. STORAGE

8.1 Turn off the appliance and disconnect from the mains electricity.

8.2 Wait for the appliance to cool down completely before storing it.

9. TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
If water comes out from the Iron soleplate instead of steam.	The optimal settings for ironing have been not reached.	Check that the lights are off so that the temperature and the pressure have reached the right levels.
	The temperature knob on the iron is set at the minimum value.	Adjust the temperature knob on the iron to the medium/maximum value.
	The boiler has been overfilled.	Push the steam button on the Iron (directing the steam flow on to a cloth) till steam comes out from the holes of the Iron soleplate.
Steam does not come out from the Iron soleplate	No power / On-Off switch is off	Check that the power is on and that the On/Off switch is pressed.
	No water in the boiler.	Check if there is still water in the boiler and proceed as described in chapter 6.
Little steam comes from the Iron soleplate.	Only for Vaporella 515_PRO The steam regulation knob is set at the minimum value.	Only for Vaporella 515_PRO Increase the steam flow by adjusting the steam regulation knob to the medium/maximum value (9).
	The steam is very dry, so is barely visible, but is present and effective.	This is normal especially in particular environmental conditions.
Some water drops are present on the fabric.	The cover used on the Ironing board is wet since it cannot withstand the power of the steam station.	Check that the Ironing board is suitable (ironing board with grid that prevents condensation).
If problems persist or are not listed above, please contact a Polti Authorised Service Centre (www.polti.com for the updated list) or contact Customer Services.		

WARRANTY

This appliance is for domestic use only and is guaranteed for two years from the date of purchase against any defects present at the time the goods are handed over; the date of purchase must be proven via a proof of purchase document valid for tax purposes and issued by the seller.

For repairs, the appliance must be accompanied by proof of purchase.

This warranty does not affect the consumer rights deriving from European Directive 99/44/EC as regards some aspects of sale and warranty of consumer goods, rights which the consumer should uphold with respect to the seller.

This warranty is valid in the countries which adhere to European Directive 99/44/EC. For other countries, local regulations on warranties apply.

WHAT THE WARRANTY COVERS

During the warranty, Polti guarantees free repair of a product with a manufacturing or factory defect and, therefore, the client is not liable to pay for any work or materials.

In case of irreparable defects, Polti may replace the product free of charge.

To avail of the warranty, the customer should visit one of the Polti Authorised Service Centres with proof of purchase from the seller valid for tax purposes and bearing the date of purchase of the product. Without proof of purchase and the relative date of purchase, the work will be charged for. Store the proof of purchase document safely for the whole duration of the warranty.

WHAT THE WARRANTY DOES NOT COVER

- Any fault or damage not deriving from a manufacturing defect.
- Any fault due to improper use or use other than that indicated in the instruction booklet, an integral part of the product sales contract.
- Any defect resulting from *force majeure* (fires, short circuits) or caused by third parties (tampering).
- Damage caused by the use of non-original Polti parts, and repairs or modifications performed by staff or service centres not authorised by Polti.
- Damage caused by the customer.
- Parts (filter, brush, hose, battery, etc.) damaged by use (consumable goods) or normal wear and tear.
- Any damage caused by limescale.
- Defects resulting from lack of maintenance/cleaning according to the manufacturer's instructions.
- Assembly of non-original Polti accessories or those that have been modified or which are not suitable for the appliance.

Inappropriate use and/or use not compliant with the instructions for use and any other warnings or indications contained in this manual invalidates the warranty.

Polti takes no responsibility for any direct or indirect damage to people, objects or animals caused by non-compliance with the instructions indicated in this instruction booklet, regarding warnings for use and product maintenance.

To see the up-to-date list of the Polti Authorised Service Centres, visit the website www.polti.com.



POLTI®

NATURAL HOME FEELING

Vaporella®

Vaporetto®

LECOASPIRA

Vaporetto®

Forzaspira®

 
UNICO 

www.polti.com



REGISTRA IL TUO PRODOTTO
REGISTER YOUR PRODUCT
ENREGISTREZ VOTRE PRODUIT
REGISTRA TU PRODUCTO
GERÄTREGISTRIERUNG
REGISTRE O SEU PRODUTO

SN:



CALL CENTER

ITALIA SERVIZIO CLIENTI	848 800 806
FRANCE SERVICE CLIENTS	04 786 642 12
ESPAÑA SERVICIO AL CLIENTE	902 351 227
PORTUGAL SERVIÇO AO CLIENTE	707 780 274
UK CUSTOMER CARE	0845 177 6584
DEUTSCHLAND KUNDENDIENST	03222 109 472 9

OTHER COUNTRIES, PLEASE VISIT WWW.POLTI.COM



POLTI S.p.A, - Via Ferloni, 83
22070 Bulgarograsso (CO) - Italy
www.polti.com

Follow us:

