

Cordless Stick Vacuum Cleaner

User Manual



VRT 61814 VR
VRT 61818 VW
VRT 61821 VD

EN

01M-8813003200-5017-01
01M-8813013200-5017-01
01M-8812993200-5017-01

beko

Please read this user manual first!

Dear Valued Customer,

Thank you for selecting this Beko appliance. We hope that you get the best results from your appliance which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the appliance and keep it as a reference for future use. If you handover the appliance to someone else, give the user manual as well. Follow the instructions by paying attention to all the information and warnings in the user manual.

Remember that this user manual may also apply to other models. Differences between models are explicitly described in the manual.

Meanings of the Symbols

Following symbols are used in various sections of this manual:

	Important information and useful hints about usage.
	WARNING: Warnings against dangerous situations concerning the security of life and property.
	Protection class for electric shock.



This appliance has been manufactured in environmental friendly modern plants without giving any harm to the nature.



This product does not contain PCB's.

CONTENT

1 Important safety and environmental instructions 4-6

1.1 General safety	4
1.2 Compliance with WEEE Directive and Disposing of the Waste Product	5
1.3 Compliance with RoHS Directive	5
1.4 Information on Waste Batteries	5
1.5 Package information	5
1.6 Plug Wiring	6

2 Your cordless stick vacuum cleaner 7

2.1 Overview	7
2.2 Technical data	8

3 Operation 9-11

3.1 Intended use	9
3.2 Installing the body and brush	9
3.3 Charging the appliance	9
3.4 Operating the appliance	10
3.5 Starting cordless vacuum cleaner	10
3.6 Accessories	11

4 Cleaning and care 12-13

4.1 Cleaning the dust container	12
4.2 Cleaning the brush	12
4.3 Storage	13
4.4 Handling and transportation	13

1 Important safety and environmental instructions

This section contains safety instructions that will help protect from risk of personal injury or material damage.

Failure to follow these instructions voids any granted warranty.

1.1 General safety

- This appliance complies with international safety standards.
- This appliance may be used by children aged 8 years and above and persons whose physical, perceptive or mental skills are impaired or who are inexperienced or not knowledgeable about the appliance **as long** as they are supervised or informed and made aware of the safe use of the appliance and the encountered dangers. Children should not play with the appliance. Cleaning and user maintenance should not be performed by children unless they are supervised by an adult.
- If the power cable or the appliance itself is damaged, do not use it. Contact an authorised service.
- Your mains power supply should comply with the information supplied on the rating plate of the appliance.
- The mains plug is fitted with a 13A fuse. Ensure the same rating fuse is used should it need replacement.
- Do not use the appliance with an extension cable.
- Prevent damage to the power cable by not squeezing, bending, or rubbing it on sharp edges.
- Do not touch the appliance or its plug when it is plugged in if your hands are damp or wet.
- Do not pull the power cable when unplugging the appliance.
- Do not vacuum flammable materials and when vacuuming cigarette ash, make sure that it has cooled down.
- Do not vacuum water or other liquids.
- Protect the appliance from rain, humidity and heat sources.
- Never use the appliance in or near places where combustible or inflammable ambience or places are present.
- Unplug the appliance before cleaning and maintenance.
- Do not immerse the appliance or its power cable in water for cleaning.

1 Important safety and environmental instructions

- Do not attempt to dismantle the appliance.
- Only use original parts or parts recommended by the manufacturer.
- Do not clean particles such as cement, plaster and compressed paper in order to prevent the filter from being clogged and the motor being damaged.
- Only use the appliance with the supplied adapter.
- Do not use the appliance without filters; otherwise it can be damaged.
- If you keep the packaging materials, store them out of the reach of children.

1.2 Compliance with WEEE Directive and Disposing of the Waste Product



This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE). This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Do not dispose of the waste product with normal domestic and other wastes at the end of its service life. Take it to the collection center for the recycling of electrical and electronic equipment. Please consult your local authorities to learn about these collection centers.

1.3 Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

1.4 Information on Waste Batteries



This symbol on rechargeable batteries/batteries or on the packaging indicates that the rechargeable battery/battery may not be disposed of with regular house hold rubbish. For certain rechargeable batteries/batteries, this symbol may be supplemented by a chemical symbol. Symbols for mercury (Hg) or lead (Pb) are provided if the rechargeable batteries/batteries contain more than 0,0005 % mercury or more than 0,004 % lead.

Rechargeable batteries/batteries, including those which do not contain heavy metal, may not be disposed of with household waste. Always dispose of used batteries in accordance with local environmental regulations. Make enquiries about the applicable disposal regulations where you live.

1.5 Package information



Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

 
1 Important safety and environmental instructions

1.6 Plug Wiring

The moulded plug on this appliance incorporates a 13 A fuse. Should the fuse need to be replaced an ASTA approved BS1362 fuse of the same rating must be used. Do not forget to refit the fuse cover. In the event of losing the fuse cover, the plug must not be used until a replacement fuse cover has been fitted. Colour of the replacement fuse cover must be the same colour as that visible on the pin face of the plug. Fuse covers are available from any good electrical store.


• Fiting a different plug

- As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals on your plug, proceed as follows:
- Brown cable = L (Live)
- Blue cable = N (Neutral)
- Green/yellow cable must be connected to ground (E) $\equiv$ line
- With the alternative plugs a 13 A fuse must be fitted either in the plug or adaptore or in the main fuse box. If in doubt contact a qualified electrician.

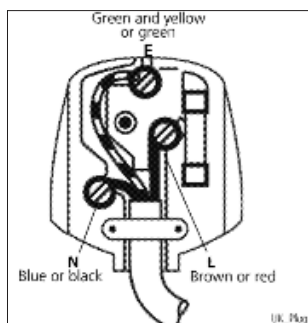

2 Your cordless stick vacuum cleaner

 2.1 Overview

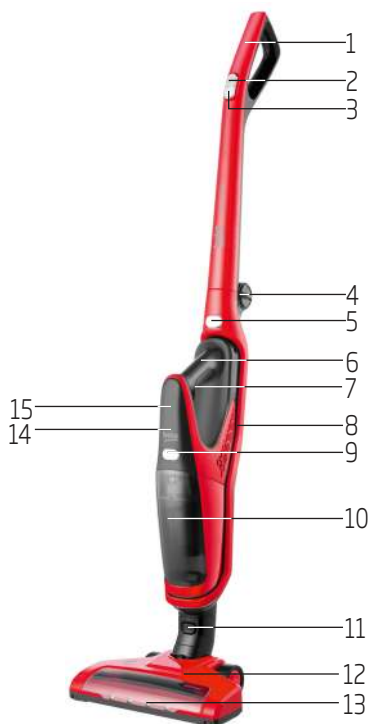

1. Stick vacuum cleaner handle
2. Stick vacuum cleaner on/off button
3. Speed adjustment button
4. Handle collapsing button
5. Cordless vacuum cleaner removal button
6. Cordless vacuum cleaner handle
7. Cordless vacuum cleaner on/off button
8. Body
9. Dust container removal button
10. Dust container
11. Brush removal button
12. Brush
13. LED light
14. Handheld vacuum cleaner
15. Charging and power indicator

The values which are declared on the markings affixed to your product or in other printed documents supplied with it represent the values which have been obtained in the laboratories pursuant to the pertinent standards. These values may vary according to the usage of the appliance and ambient conditions.

2 Your cordless stick vacuum cleaner

2.2 Technical data

Model	VRT 61814 VR	VRT 61818 VW	VRT 61821 VD
Supply voltage	100-240V~ 50-60Hz		
Power	14.4 W	18 W	21.6 W
Product spec	DC 14.4V 2000mAh Li-on	DC 18V 2000mAh Li-on	DC 21.6V 2000mAh Li-on
Apaptor Input	100-240V~50/60Hz 0.3A	100-240V~50/60Hz 0.3A	100-240V~50/60Hz 0.5A
Apaptor Output	18V 500mA	22V 500mA	27V 500mA
Brush spec	14.4V 5W	14.4V 5W	21.6V 8W
Charging time	4~6H		

Technical and design modification rights are reserved.

 
3 Operation

3.1 Intended use


The appliance has been designed for household use and is not suitable for industrial use.

3.2 Installing the body and brush


1. Lift the handle (1) in the arrow direction.

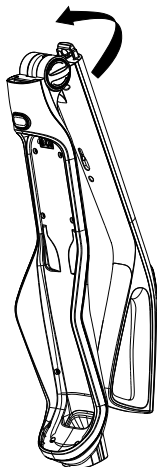

2. Attach the brush (12) to the body (8).

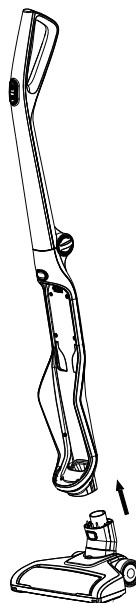 


3. Attach the handheld cleaner to the body (8).

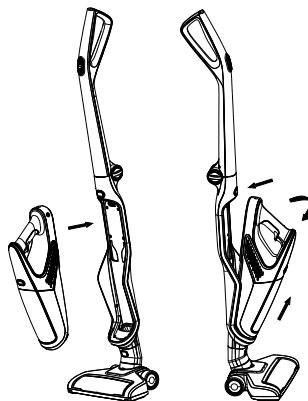 

3.3 Charging the appliance

1. Insert the thin end of the adapter to the charger and plug the adapter in.

 3 Operation

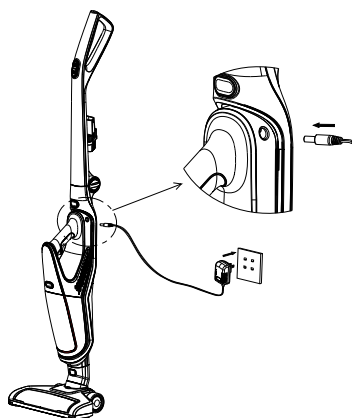

2. The charging indicator LED (15) will come on and the product will start to be charged; when charging is done, all charging indicators will be on.
 - If the charging indicator LED (15) is on, this means that the product is being charged.
 - If all levels of the charging indicator LED (15) is on, this means that the product is fully charged.



It takes up to 4-6 hours for the appliance to be fully charged.



WARNING: Appliance cannot be operated during the charging process.

3.4 Operating the appliance

1. Press the on/off button (2) to switch on the appliance.
2. When you press on/off button (2), appliance will start at maximum speed. Press speed adjustment button (3) to use in low speed. When you press speed adjustment button again, the appliance will run at maximum speed again.
3. After using the appliance, switch it off by pressing the On/off button (2).



Check the power indicator LEDs (15) during operation. As charging level decreases, these indicators will gradually go off and the appliance will stop working when all indicators are off.



Appliance will automatically stop if it is placed on charger while still in use.

3.5 Starting cordless vacuum cleaner

1. Press removal button (5) to remove the vacuum cleaner from the body (8).
2. Press on/off button (7) of the cordless vacuum cleaner to switch on your appliance.
3. After using the appliance, switch it off by pressing the On/off button (7) of the cordless vacuum cleaner.

 
3 Operation

3.6 Accessories

You can use your accessories by inserting them to the end of your vacuum cleaner.


Dust brush

Suitable for cleaning the curtains, and sensitive and fragile objects.

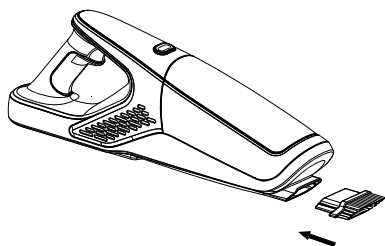

Upholstery tool

 Suitable for cleaning the floorings, stair steps, inside of the cars, sofas, armchairs etc.

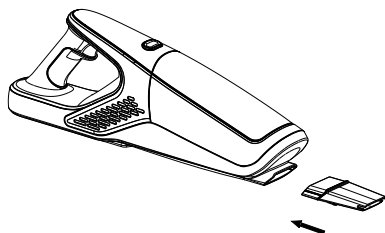

4 Cleaning and care

Switch off and unplug the appliance before cleaning it.



 
WARNING: Never use gasoline, solvent, abrasive cleaning agents, metal objects or hard brushes to clean the appliance.

4.1 Cleaning the dust container




It is recommended to clean the dust container after every use.

1. Press the dust container removal button (9) to remove the dust container (10).
2. Pull the filter by holding the handle and remove it from dust container (10).

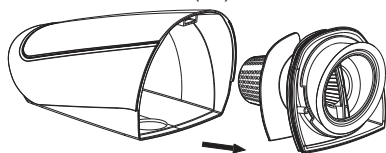


 3. Remove the HEPA filter by grasping the handle of the filter holder and turning counter-clockwise.

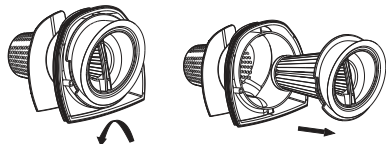

4. Wash out the dust container (10), filter holder and HEPA filter under the running water.
5. Clean the body of the cordless vacuum cleaner (14) with a soft damp cloth.

 
6. Replace the HEPA filter in its holder after all parts are dried and place filter holder in the dust container (10).

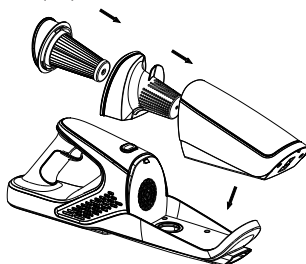


7. Replace the dust container (10) in the body of cordless vacuum cleaner (14).

4.2 Cleaning the brush

 1. Press the brush removal button (11) and remove the brush (12) from the body (8).
2. To clean the brush (12), release the lock using the roller brush release tab as shown below.

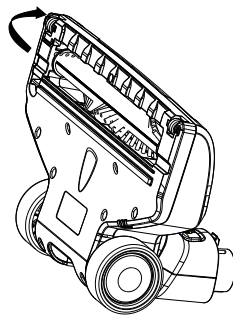

 3. Remove the roller brush.

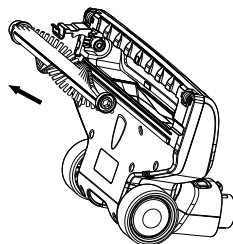

4. After cleaning and drying the roller brush, reattach it and lock the tab.

4 **Cleaning and care**

4.3 Storage

- If you do not intend to use the appliance for a long time, store it carefully.
- Unplug the appliance.
- Store the appliance in a vertical position or with its handle folded.
- In order to fold the handle, turn the folding button (4) clockwise and fold the handle (1).
- Keep the appliance out of the reach of children.

4.4 Handling and transportation

- During handling and transportation, carry the appliance in its original packaging. The packaging of the appliance protects it against physical damages.
- Do not place heavy loads on the appliance or on the packaging. The appliance may get damaged.
- Dropping the appliance may render it non-operational or cause permanent damage.

Product Guarantee

12 months breakdown and repair guarantee

Guarantor: **Beko plc, 1 Greenhill Crescent, Watford, Hertfordshire. WD18 8UF**

The guarantee does not in any way diminish your statutory or legal rights.

Your **appliance** has the benefit of our manufacturer's guarantee which covers the product for 12 months from the date of original purchase.

This gives you reassurance that if within that time, your **appliance** is proven to be defective because of either workmanship or materials, we will at our discretion either repair or replace your **appliance**.

The **appliance** must be correctly installed, located and operated in accordance with the instructions contained in the user manual. The guarantor disclaims any liability for accidental or consequential damage.

The Guarantee is subject to the following conditions:

- Documentary proof of the original purchase date is provided.
- The appliance has been installed and operated correctly and in accordance with our operating and maintenance instructions.
- The appliance is used only on the electricity supply on the rating plate.
- The appliance has only been used for normal domestic purposes.
- The appliance has not been altered, serviced, dismantled or otherwise interfered with by any person.
- The appliance is used in the United Kingdom or Republic of Ireland.
- Any parts removed during repair work or any product that has been replaced becomes our property.
- The guarantee is not transferrable if the product is resold.

The Guarantee does not cover:

- Transit, installation or delivery damage.
- Accidental damage.
- Misuse or abuse.
- Replacement of any consumable item or accessories. These include but are not limited to: plugs, cables, light bulbs, knobs, filters and flaps.
- Repairs or replacements required as a result of unauthorised repairs or inexperienced installation that fails to meet the requirements contained in the user guide or instruction book.
- Repairs to products used in commercial or non-residential household premises.

How to obtain after sales service, help or general advice

Please keep your purchase receipt or other proof of purchase in a safe place as you will need to show us this document if your product requires attention within the guarantee period.

Please also record your product details below, which will allow you to access our services more quickly and help us identify your product. The model number is printed on the front of the user guide and the serial and model number is shown on your products rating plate.

Model number	Serial number	Purchased from	Date of purchase

Please call our UK based Customer Service department if you need help or advice from us:

United Kingdom and Northern Ireland:

0333 207 9710

Republic of Ireland:

01 862 3411

You can also contact us through our website:

www.beko.co.uk

