


KODAK PIXPRO 4KVR360

360° VR CAMERA




Remote Viewer APP & Software

Software Interface

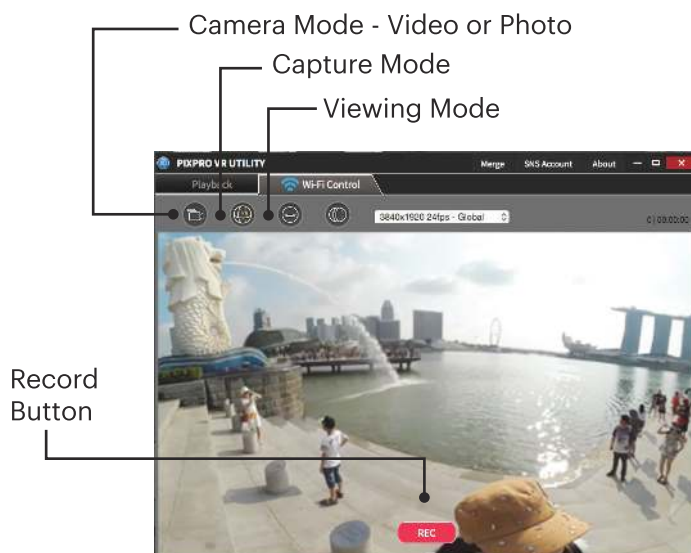

APP Interface

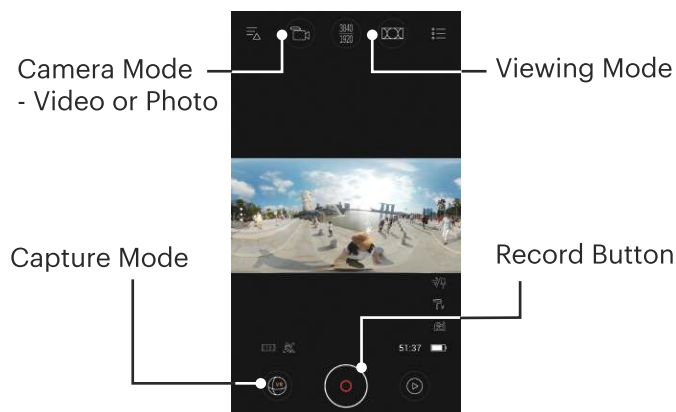

Record Button - Starts / Stops Video & Captures Photos

Viewing Mode - Equirectangular, Little Planet, Magic Flat, Fish Eye

Camera Mode - Video or Photo

Capture Mode - 360° Spherical/VR Mode (Lens A & Lens B), 4K [16:9] Full Frame Mode & 235° Dome Mode

APP & Software Instructions

Connect camera to smart device (or PC) with Wi-Fi.

Operation Method:

1. 4KVR360 :

Check SSID (Service Set Identifier) PIXPRO- 4KVR360_KXXXX and password (default password: 12345678) indicated on the label in the battery compartment of the camera. Press the button to enable W-Fi mode. The camera will enter the waiting for connection interface two seconds later.



2. Smart Device or PC:

Enable Wi-Fi mode. Device will automatically search for nearby Wi-Fi hotspots. Select the one with the same SSID (PIXPRO- 4KVR360_KXXXX) and input the password.



3. 4KVR360 :

When the Wi-Fi connection is successful, enter the Wi-Fi connection interface.



4. Smart Device or PC:

When connected via Wi-Fi, you can tap the APP icon on the smart device to start it; or double-click the APP icon on the computer desktop to start it.

5. 4KVR360 :

When the APP is successfully connected to the camera, the connected APP interface will appear.



When recording is started via the APP, the recording interface will appear on the camera's LCD.



If the Wi-Fi connection is cut-off while recording, the camera will continue to record and will enter the connectionless recording interface.



PC Tool: PIXPRO 360 VR Suite, **APP:** PIXPRO 360 VR Remote Viewer

kodakpixpro.com