



Einhell

CLASSIC



Cordless Lawn Trimmer
GC-CT 18/24 Li P - Solo
Item No.: 3411104

Ident No.: 11018

Bar Code: 4006825635690

The Einhell GC-CT 18/24 Li P-Solo cordless grass trimmer is the ideal helper for bringing the garden and strips of grass into shape. The cordless grass trimmer is a member of the Power X-Change family. The powerful system batteries are used in all tools across the series. 1 x 18 V battery is required for operation. For comfortable working without fatigue there is an additional handle for two-handed operation. The housing and the secondary handle are made of impact-proof, high-grade plastic. The cutting width is 24 cm with a speed of 8,500 rpm. The product is supplied complete with 20 plastic blades. The system battery and charger are available separately.

Features & Benefits

- Member of the Power-X-Change family, 1x18V batteries necessary
- Fatigue-free and agile operation thanks to low weight
- User-friendly two-hand operation thanks to additional handle
- Housing and handle made of impact-resistant, high-grade plastic
- Incl. 20 plastic blades
- Supplied without battery and charger (available separately)

Technical Data

- | | |
|--------------------------|----------|
| - Revolutions of knife | 8500 rpm |
| - Cutting width of knife | 24 cm |
| - Number of accumulators | 0 Pieces |

Logistic Data

- | | |
|--------------------------------------|--------------------|
| - Product weight | 1.2 kg |
| - Gross weight single packaging | 2 kg |
| - Dimensions single packaging | 180 x 150 x 490 mm |
| - Pieces per export carton | 8 Pieces |
| - Gross weight export carton | 17 kg |
| - Dimensions export carton | 635 x 505 x 390 mm |
| - Container quantity (20"/40"/40"HC) | 1600 3280 3936 |



ADDITIONAL HANDLE



EASY HANDLING




INCL. 20 Pcs. BLADES



18V BATTERY POWERED (NOT INCLUDED)



18 V

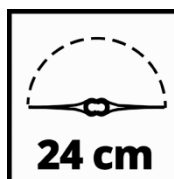

24 cm



**LOW WEIGHT
EASY HANDLING**

Available as special accessories



Spare Blade-Set GE-CT 18 Li
Lawn Trimmer Accessory
Item No.: 3405730
Bar Code: 4006825560404
Einhell Grey



18V 2,0 Ah Power-X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



18V 4,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



18V 30min Power-X-Change
Charger
Item No.: 4512011
Bar Code: 4006825587029
Einhell Accessory



Power-X-Boostcharger 6 A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



18V 1,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512021
Bar Code: 4006825601350
Einhell Accessory



18V 4,0 Ah Power-X-Change
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 3,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512041
Bar Code: 4006825613698
Einhell Accessory



18V 2,6Ah P-X-C Plus
Battery
Item No.: 4511436
Bar Code: 4006825616590
Einhell Accessory



18V 5,2 Ah P-X-C Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



Power-X-Twincharger 3 A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory