



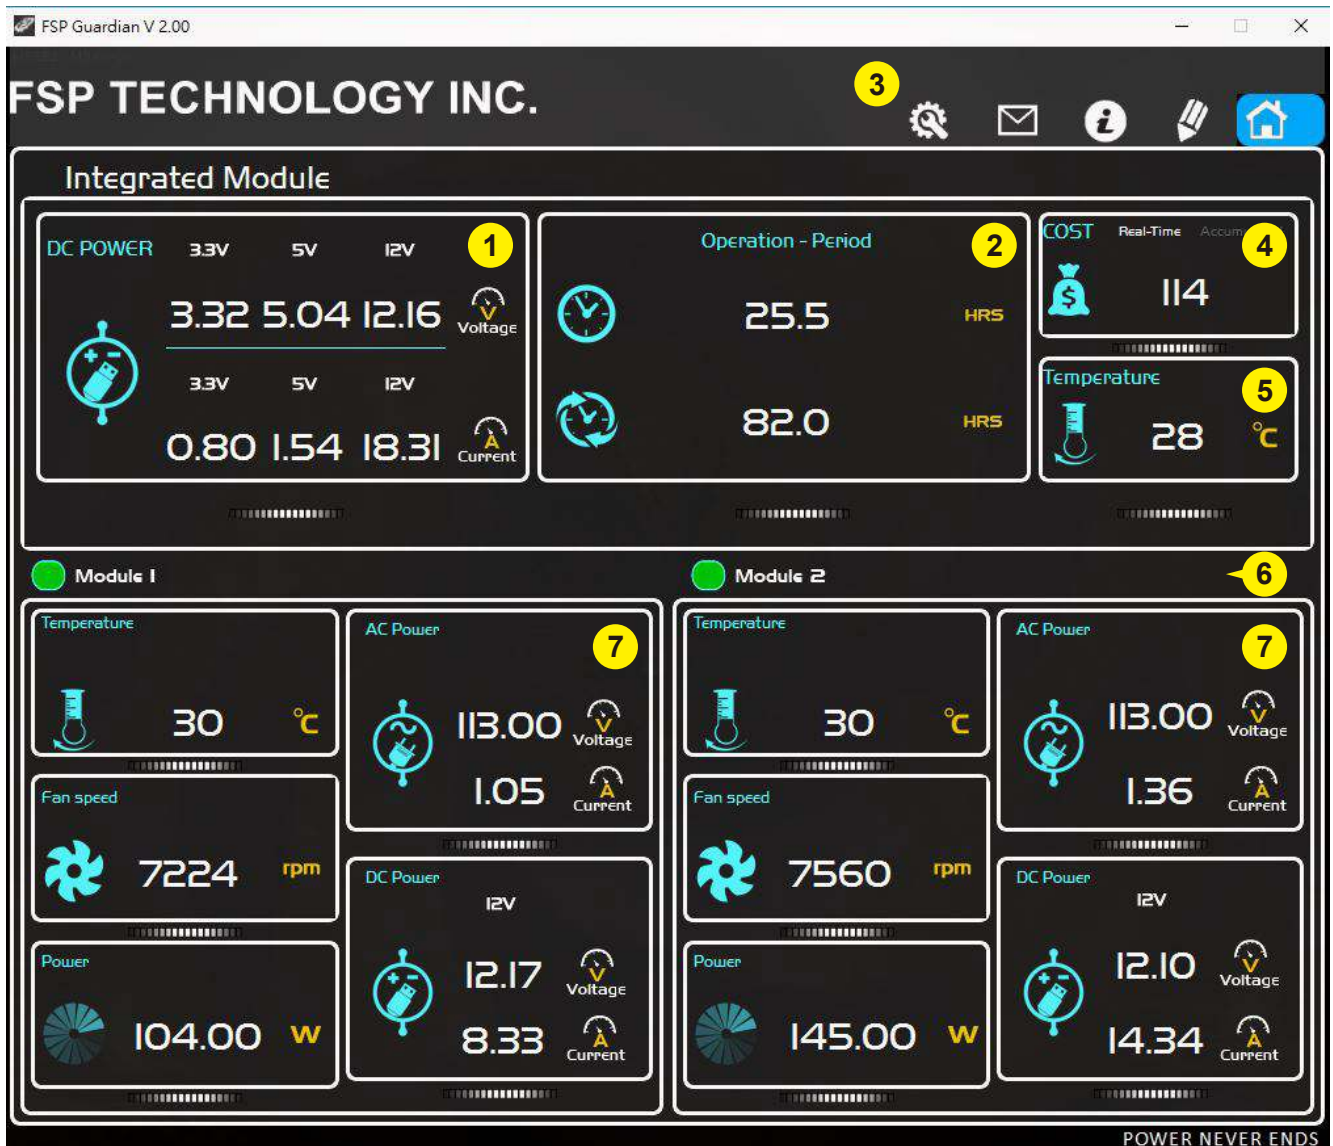

- 1 3.3 V, 5 V, 12 V**
Total Power Output of 3.3V, 5V, 12V
- 2 Operation Period**
Current operation time.
Accumulated operation time.
- 3 Label of Page**
Click the icons as you wish.
- 4 Total Electricity Cost**
Current Cost.
Accumulated Cost.

- 5 Power Temperature**
- 6 Modules' Status Indicators**
- 7 Single Module's Status**
Input Voltage / Current
Output Voltage / Current
Fan Speed
Output Wattage
Module Temperature

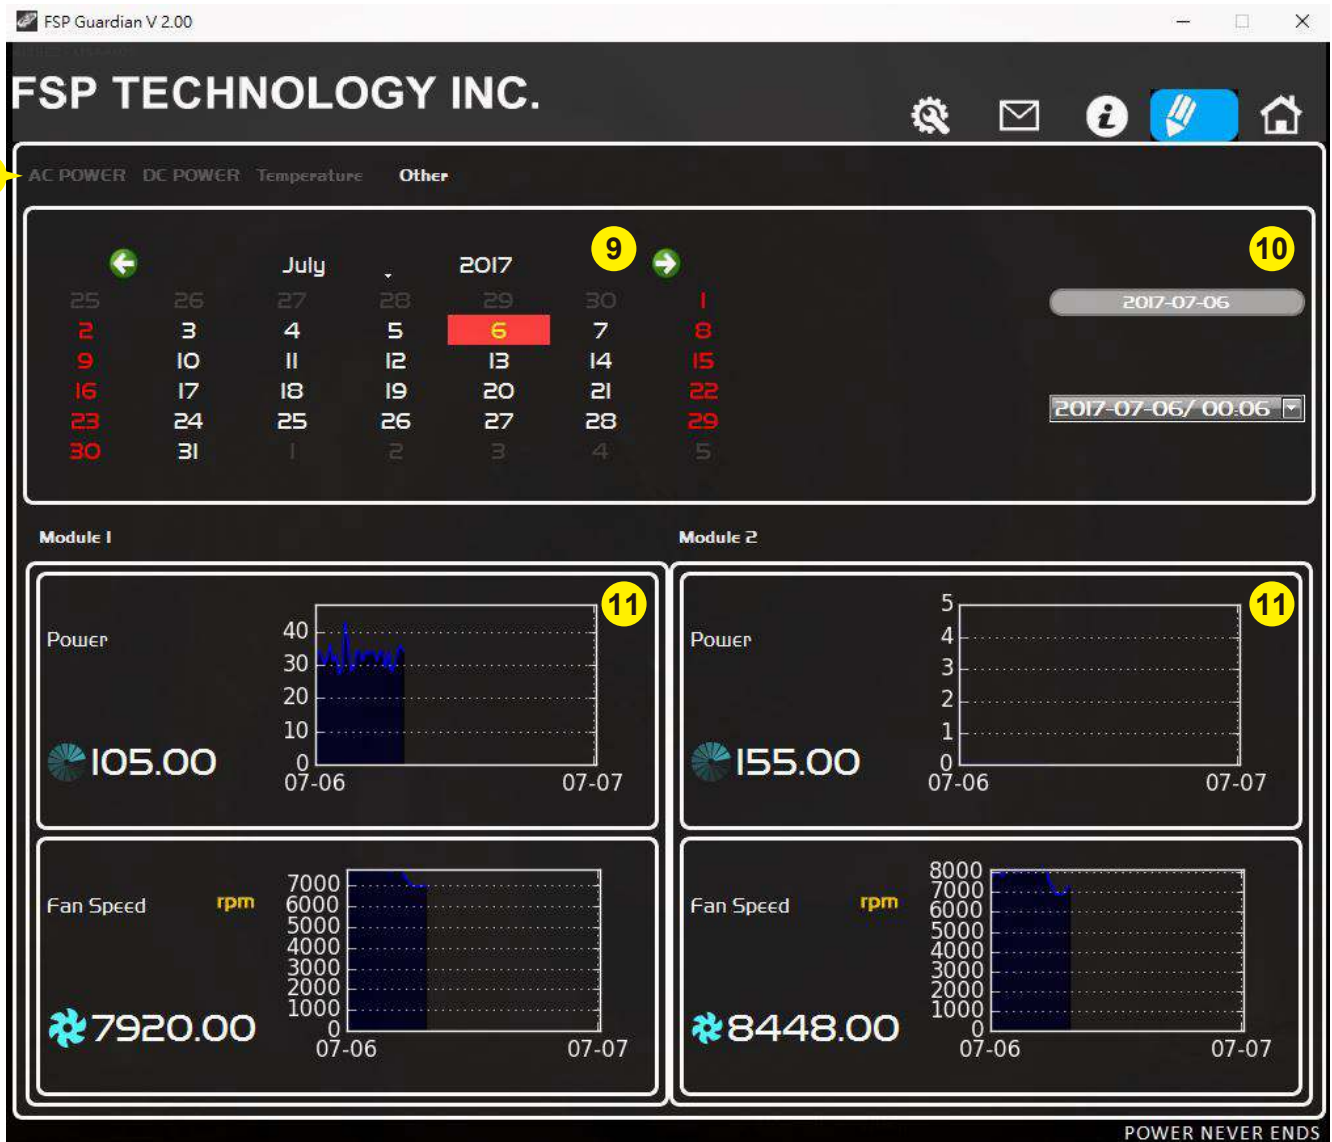

8 Label of Data Type

9 Date of Record


Choose the date you want to check.

10 Record Information

This area shows all data files of current date.

11 Figures and Graphs

This area shows the current data (figures and graphs) of each module.

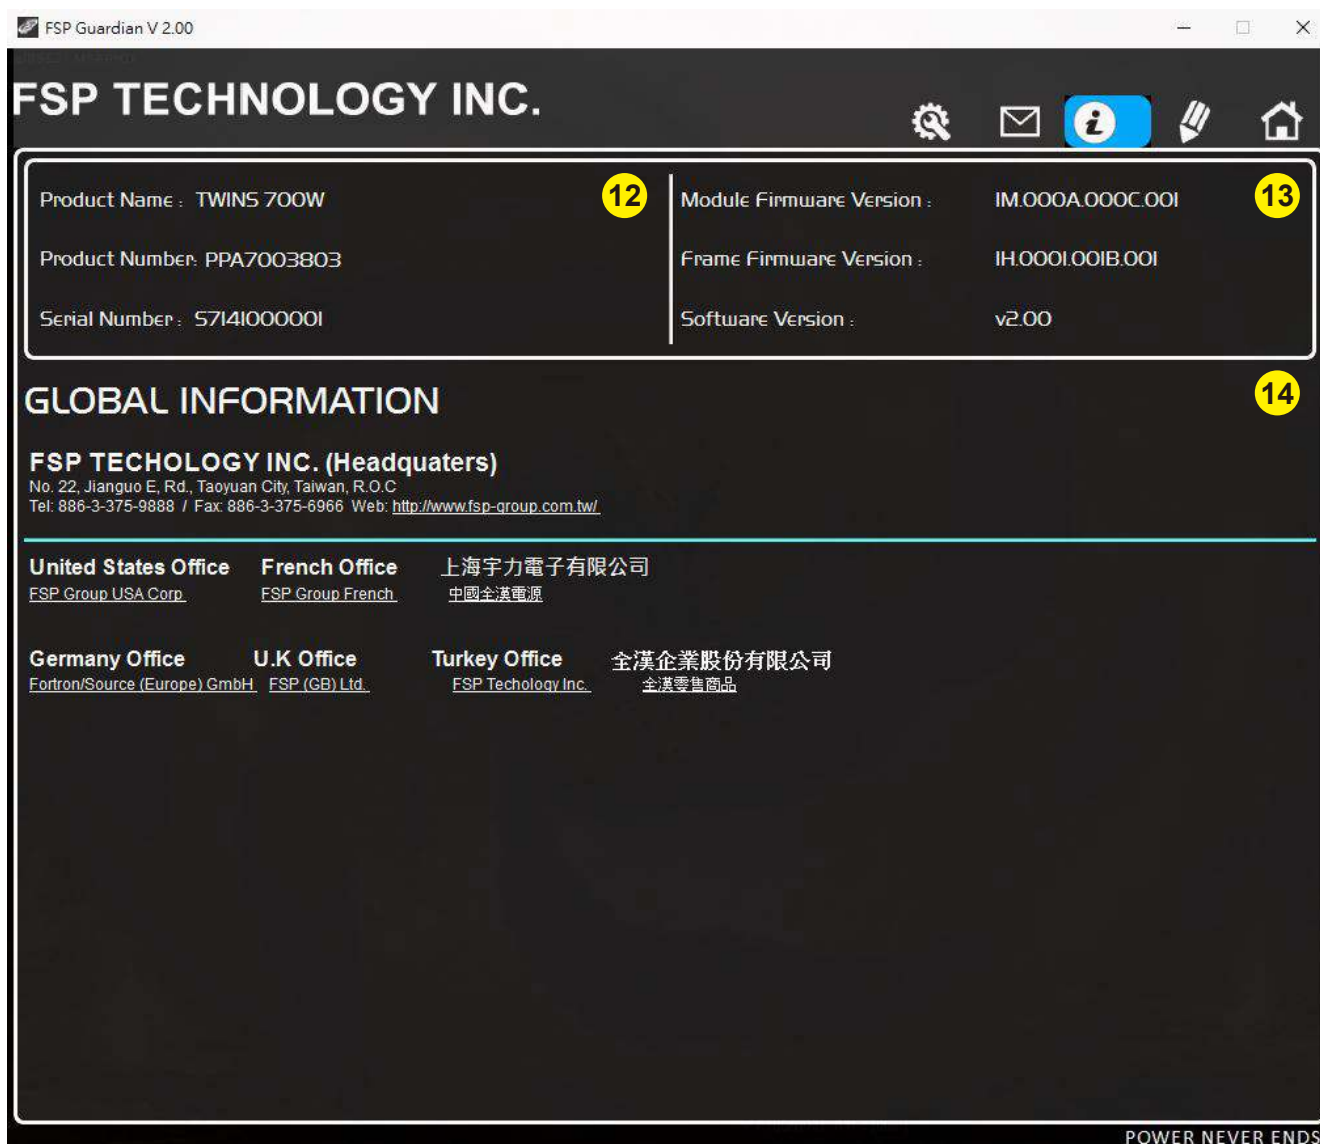

12 Product Information

13 Firmware Information

14 FSP Website Link



15 Mail Alarm Function

Setting up the following information of sender, including mail server, monitor's name, sender's name and pass word.

16 Conditions of Alarm

Please select conditions that need to be alarmed to users by mail.

17 Mail Receiver Setting

Click "ADD" to increase a new reviver. Double click to revise present name list.

18 Mail Sample

The mail content can be customized by user.

"<Your display Name>"

It will show the name of user.

"<< Cause >>"


It will show the conditions happened.

19 Retransmission Cycle Interval Setting


Fill in the seconds.

20 Save the Setting

Please click the button to save your setting.

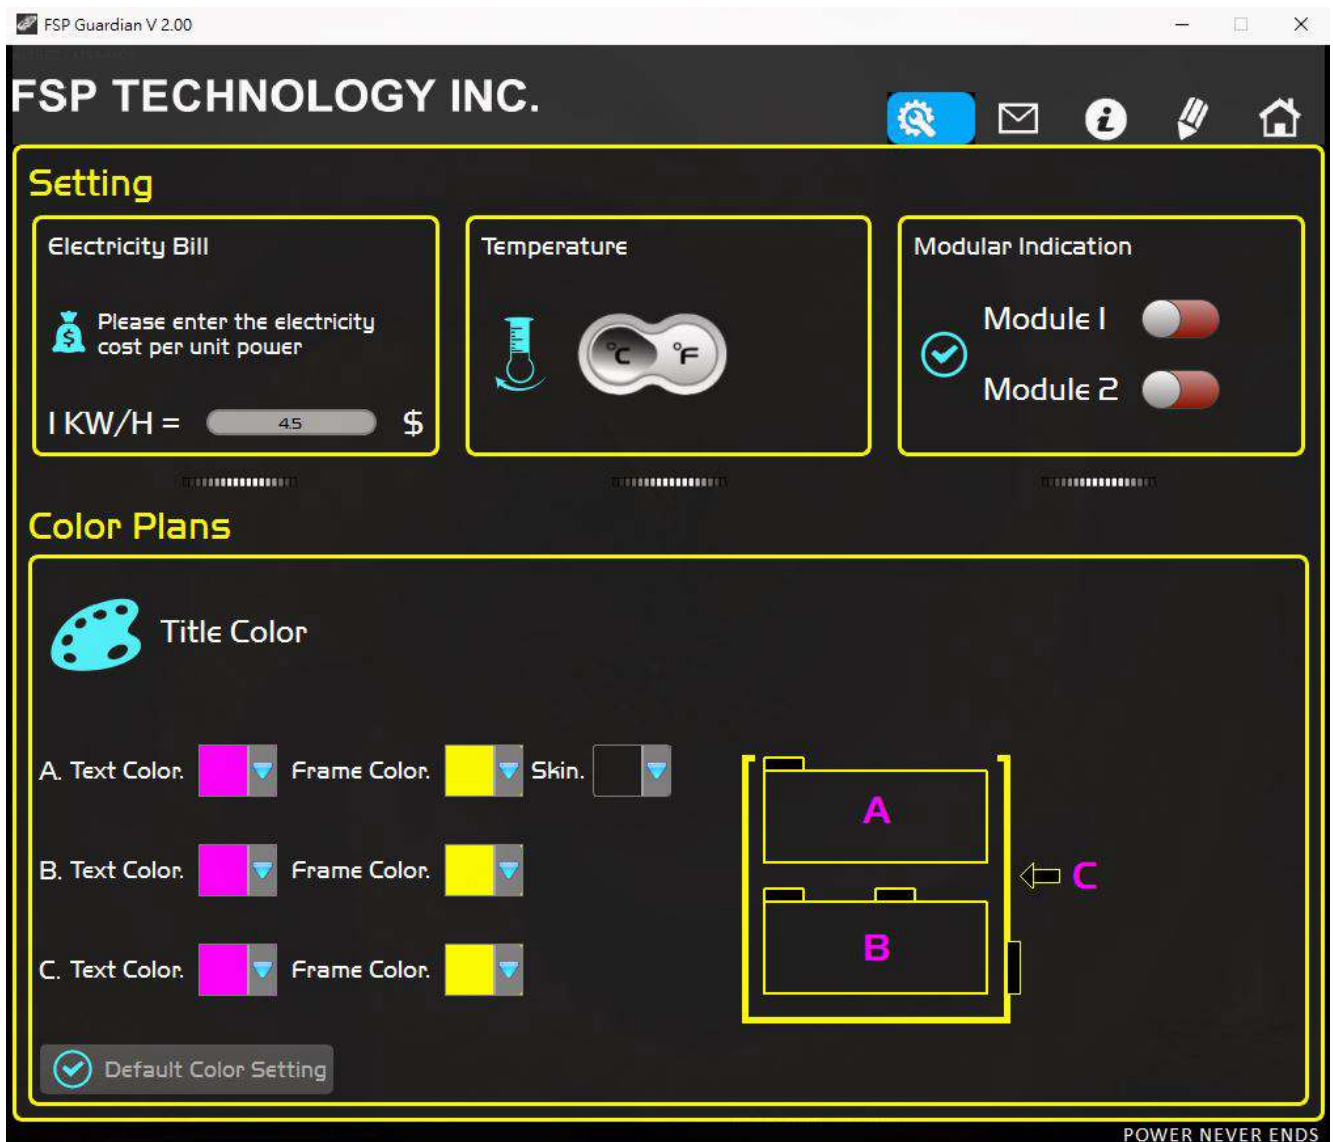

Example of Frame Color Selection

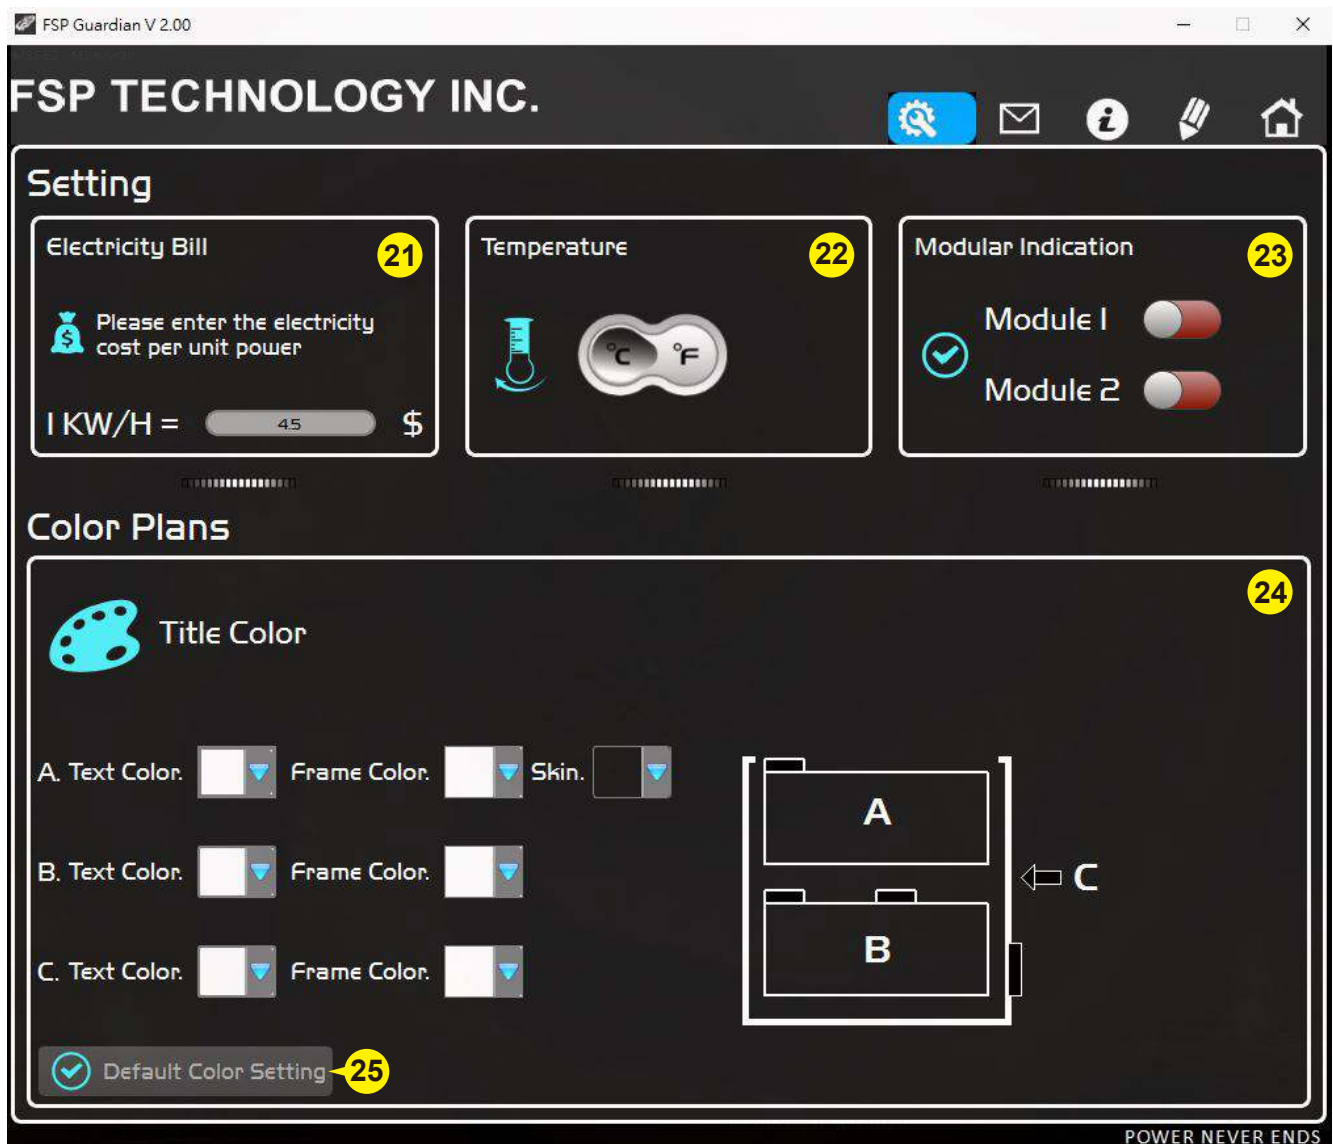

21 Electricity Bill Setting

22 Temperature Unit Setting Button

Choose the unit you prefer and it will be shown on the Home page.

23 Online Modular Indicator Testing

Slide the button to green(right side), you will find the corresponding module's light blinking.

24 Color Plans

The frames' and background's colors can be adjusted by your choices. You also can preview the results by the illustration.

25 Reset the Software to the Default Color Setting