



To Install The Projector On The Projector Ceiling Mount


- Move the projector mounting plate and adjust the leftward/rightward slide.

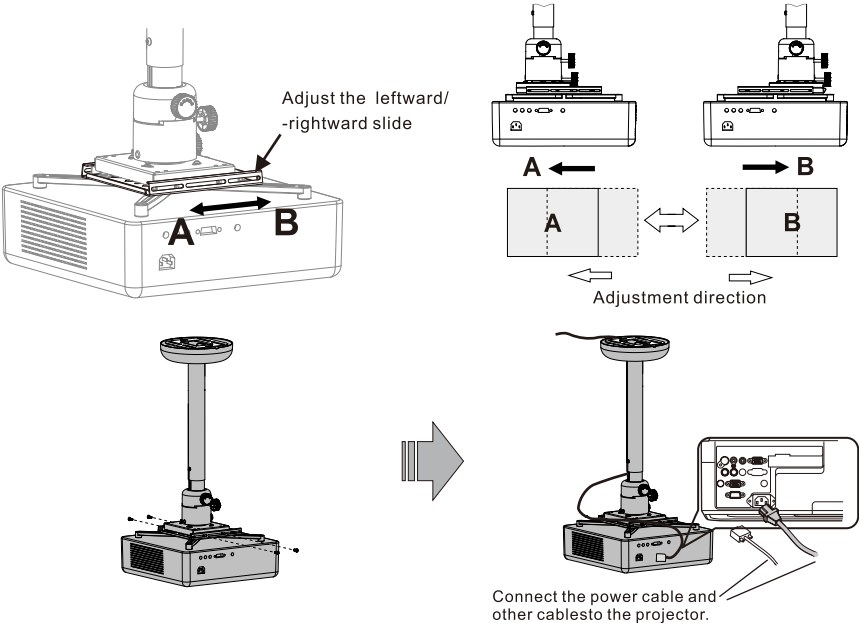


To Adjust The Vertical Tilt

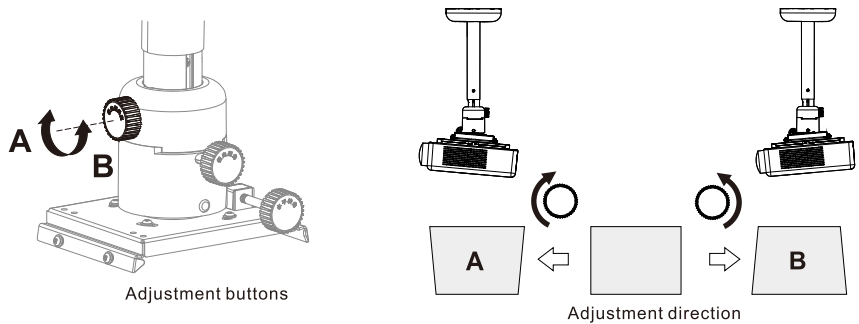


To Adjust The Horizontal Roll

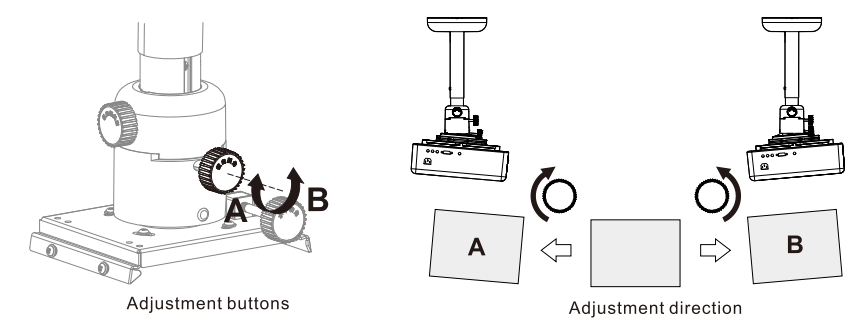

To Adjust The Horizontal Rotation

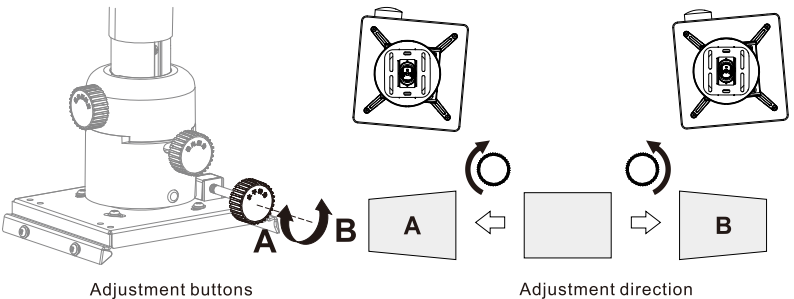


To Adjust The Upward/Downward Slide

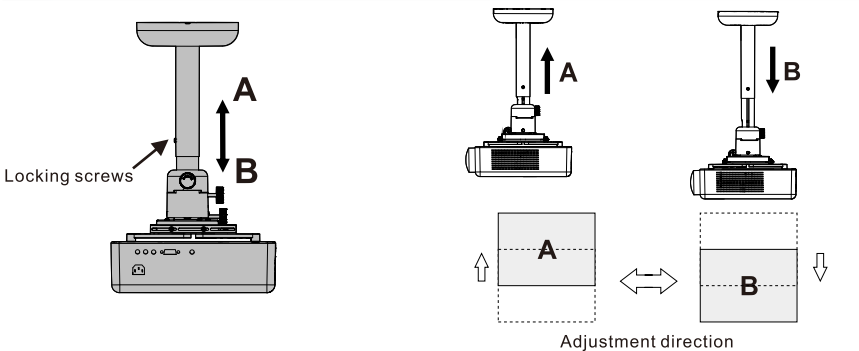

To Remove The Projector Ceiling Mount

- Use a stick or something hard to pry open the ceiling plate cover.

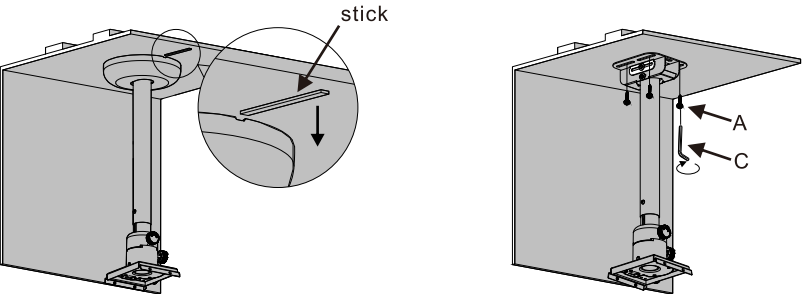


Product Information :

| Model            | M Universal Projector Ceiling Mount 500-800 with Fine tune        | M Universal Projector Ceiling Mount 600-1000 with Fine tune |
|------------------|-------------------------------------------------------------------|-------------------------------------------------------------|
| Product Weight   | 2.1kg                                                             | 2.4kg                                                       |
| Max Weight Load  | 25kg                                                              | 25kg                                                        |
| Adjustable Range | 500mm-780mm(from mounting plate bottom to the ceiling)            | 600mm-980mm(from mounting plate bottom to the ceiling)      |
| Adjustable Angle | ± 5° tilt, left/right, front/rear and lateral rotation adjustment |                                                             |



M Universal Projector Ceiling Mount  
500-800 / 600-1000 with Fine tune

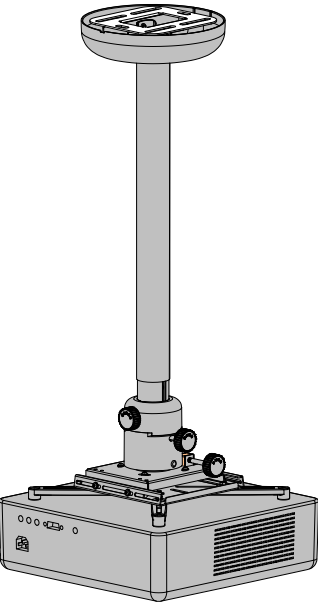


- Be sure to read this manual thoroughly and to do the installation work safely.  
Keep this manual available for future reference.
- Sufficient expertise is required for installing this projector Ceiling mount.
- Do not use the projector Ceiling mount for purposes other than for which it is designed.


## Important Safety

- 1 Be sure to read this manual thoroughly to do the installation work.
  - 2 Only qualified service personnel (two or more) should carry out installation or dismantling of the projector from the projector wall mount.
  - 3 **Use with products heavier than the maximum weights(Weight Capacity : <25kg) indicated may result in instability causing possible injury.**
  - 3 For safety reasons, check the strength of the wall before installation. If the wall is not strong enough, reinforce it sufficiently before installation.
  - 4 Do not make alterations to the projector Ceiling mount.
  - 5 Do not install the projector Ceiling mount on a wall subject to vibration or impact.
  - 6 To avoid fire, do not install the projector with the projector Ceiling mount in a humid or excessively dusty place.
  - 7 Use the supplied accessories only. Use of accessories other than those supplied may result in damage to the projector Ceiling mount.
  - 8 When dismantling the projector from the projector Ceiling mount, be sure to unplug the AC power cord and other connecting cables beforehand.
  - 9 Do not hit or hang any heavy objects on the projector Ceiling mount. If the projector Ceiling mount is damaged, stop use and contact a qualified service person immediately.
  - 10 Please install this apparatus only on the horizontal surface instead of the slanting one.
- \* **Manufacturer is not liable for any damages or injury caused by mishandling or improper installation.**

## Checking The Supplied Accessories


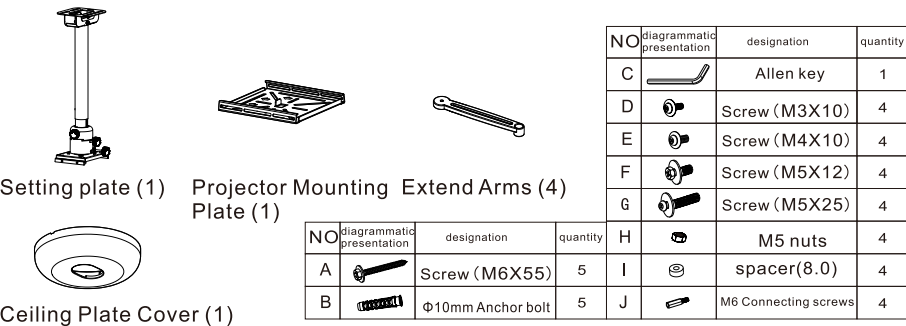


## To Set The Projector Ceiling Mount On The Wall

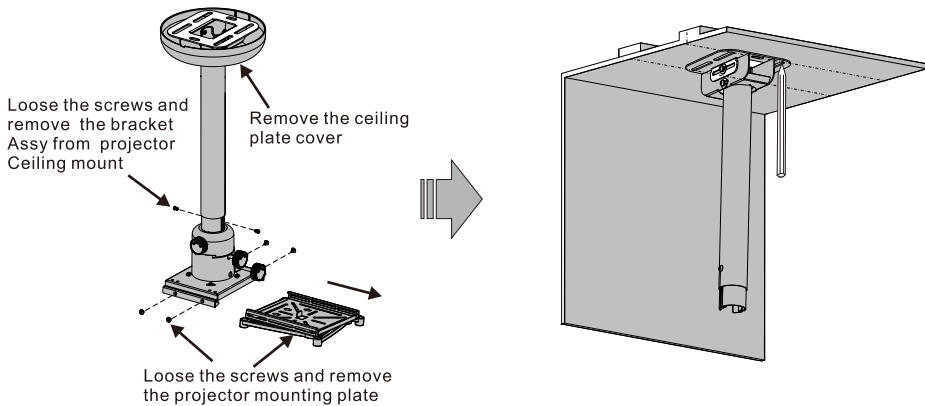


## To Set The Projector Ceiling Mount On The Wall

- Concrete ceiling mounting thickness must be a minimum 100mm. Anchor bolt and screw (M6 × 55) are needed to be used for installation.
- Dry-ceiling mounting thickness must be a minimum 70mm. Only screw(M6 × 55) is needed to be used for installation. If the wall is not strong enough, reinforce it sufficiently before installation.
- Please contact reseller if you have any questions about mounting surface issue.

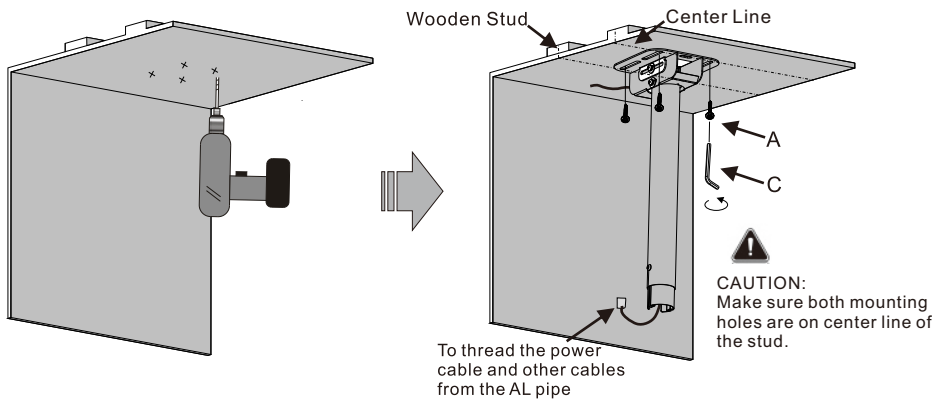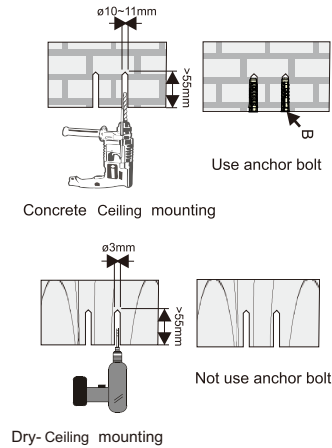


## To Set The Projector Ceiling Mount On The Wall

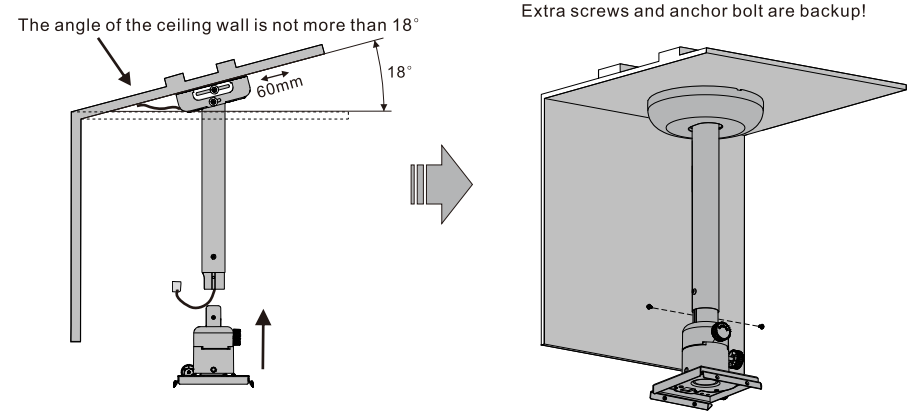

## To Install The Projector On The Projector Ceiling Mount

a. Use the extend arms :

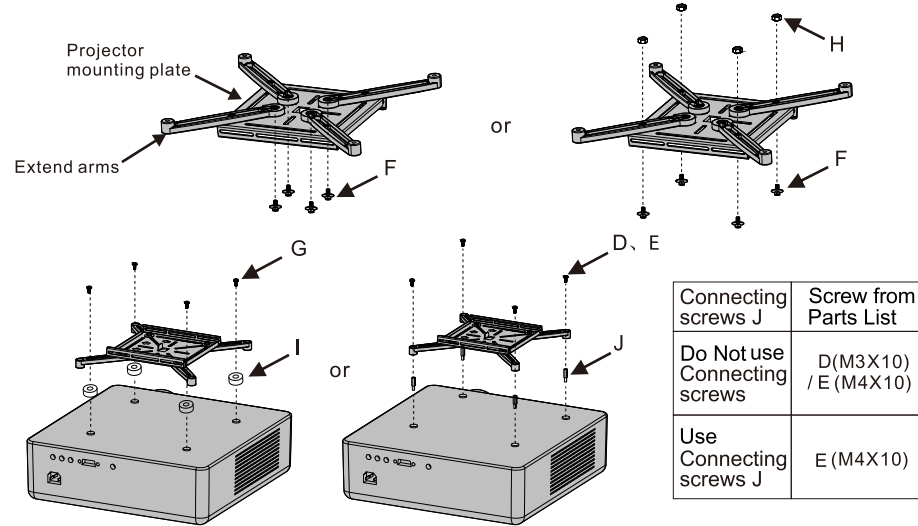

b. Do not use the extend arms :

