 
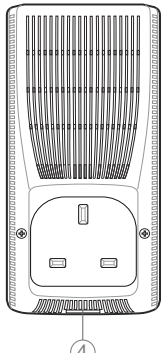 


Quick Setup Guide

AX3000 Dual-band WiFi Range Extender

RP-AX58

Hardware Overview

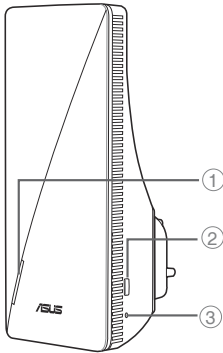

- ① LED
- ② WPS button
- ③ Reset button
- ④ LAN port



* For detailed information, please refer to <https://asus.click/rp-ax58>

Specifications:

AC Power board	AC Input: 100V ~240V		
Operating Temperature	0~40°C	Storage	0~70°C
Operating Humidity	50~90%	Storage	20~90%

Service and Support



<https://www.asus.com/support>

Video Tutorials



https://qr.asus.com/wl_videotutorials

 
PAP 22 COLLEZIONE DI CARTA

BEFORE SETUP WE SUGGEST...



Placing your RP-AX58


Plug your RP-AX58 into a power outlet near your router/AP and wait for the LED to turn solid blue.

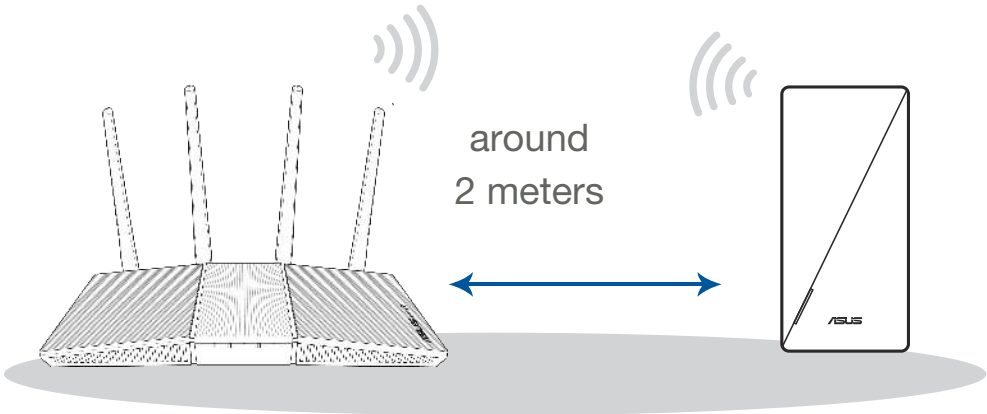

SETUP METHODS Set up RP-AX58 as a WiFi range extender



 Download the ASUS Extender App and follow the onscreen instructions for setup.

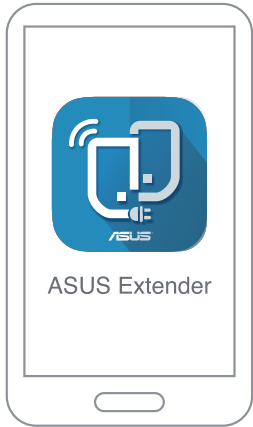

SETUP METHODS Set up RP-AX58 as an AiMesh Node



Download the ASUS Router App and follow the onscreen instructions for setup.

