


QUICK REFERENCE GUIDE

UPS EVER DUO AVR / DUO AVR USB


- DUO 350 AVR
- DUO 550 AVR USB
- DUO 850 AVR USB

Note: to obtain detailed information, please read the full instruction manual, which can be downloaded from our website www.ever.eu.

2. ADDITIONAL REMARKS

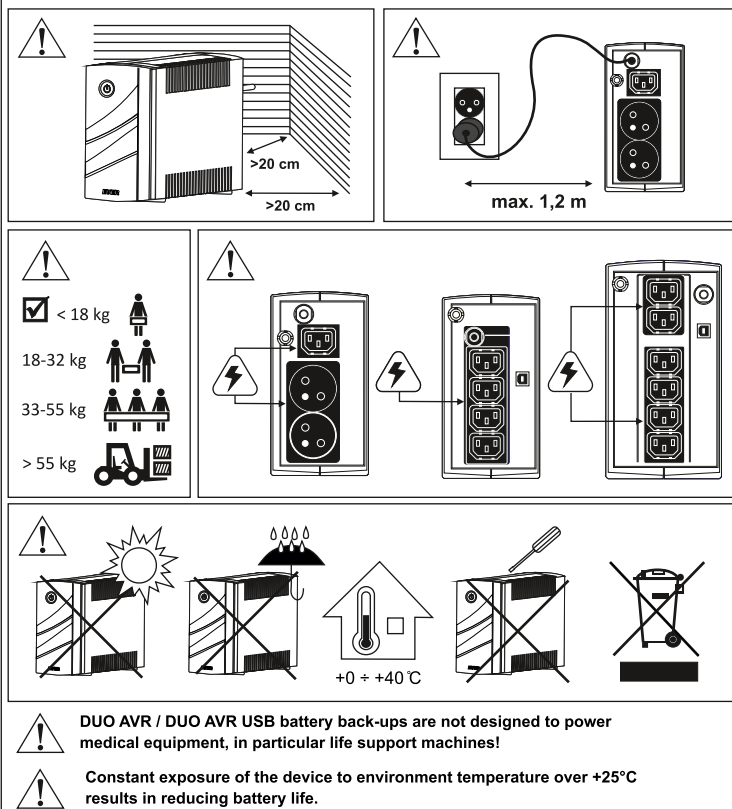


4. INSTALATION AND CONNECT

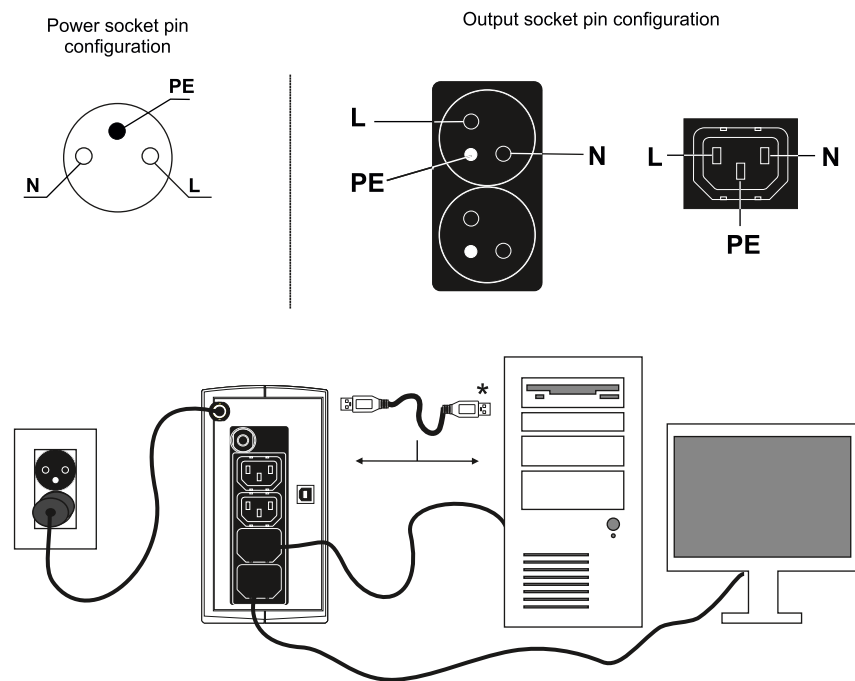

*For DUO AVR USB only


1. IN THE PACKAGING

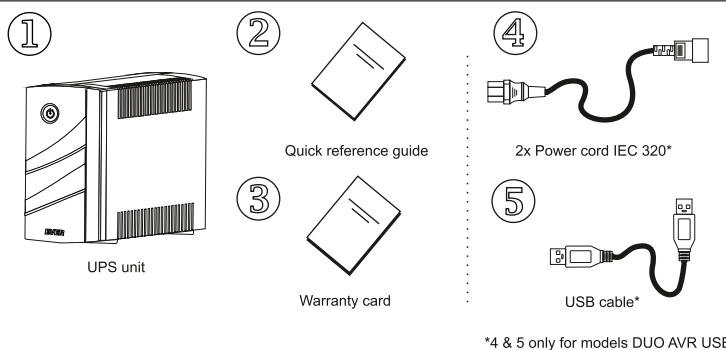

*4 & 5 only for models DUO AVR USE




3. ELEMENTS OF THE UPS

a. front panel

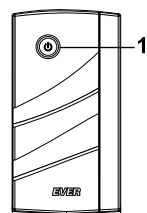

1) Power switch with signaling mode


b. back panel

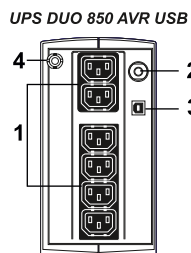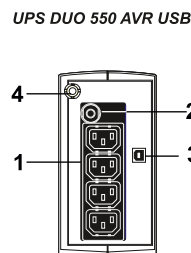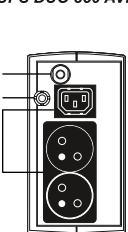

1) Output sockets:
2x PN-E-93201 (10 A)+ 1x IEC 320 C13 (10 A) - **DUO 350 AVR**
4x IEC 320 C13 (10 A) - **DUO 550 AVR USB**,
6x IEC 320 C13 (10 A) - **DUO 850 AVR USB**,

- 2) Automatic fuse
- 3) USB communication port
- 4) Power cord

5. FIRST START

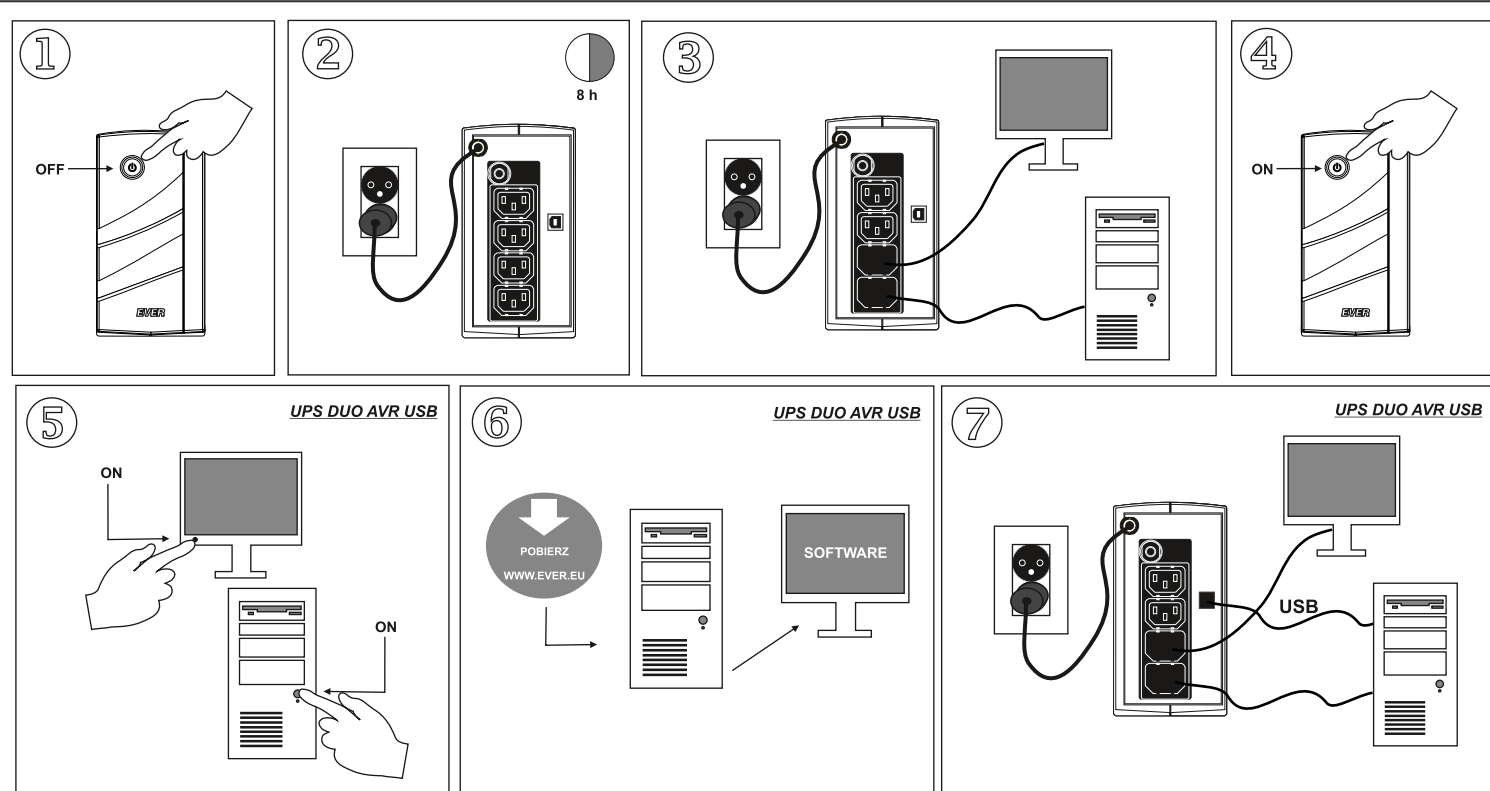

6. SOUND AND VISUAL SIGNALING OF SPECIFIC STATES OF THE UPS UNIT

Event	Sound signaling	Visual signaling
MAINS (normal) mode	No sound signal.	Green LED on.
BACK-UP (battery) mode	Short sound every 30 seconds. Frequency increases proportionally to the level of discharging of the batteries. The audible alarm can be turned OFF or ON by quickly pressing the POWER switch twice.	Yellow LED blinking 1 time every 30 seconds
Low battery	Short sound every 2 seconds. The audible alarm can be turned OFF or ON by quickly pressing the POWER switch twice.	Yellow LED blinking every 2 second.
Overload	Short sound every 0,5 seconds.	RED LED blinking every 0,5 seconds
Fault mode	Continuous signal.	Red LED on.

7. CONTACT



EVER Sp. z o.o.

ups@ever.eu | www.ever.eu

Company Service: +48 61 6500 419 | serwis@ever.eu