

Controller key	Switch	PC Input
X	Y	X
A	B	A
B	A	B
Y	X	Y
+	+	Start
-	-	Back
L-Stick	L-Stick	L-Stick
R-Stick	R-Stick	R-Stick
L	L	LB
R	R	RB
LZ	LZ	LT


Controller key	Switch	PC Input
RZ	RZ	RT
L3	L3	L3
R3	R3	R3
	Turbo	Turbo
	Screenshot	N/A
Up	Up	Up
Down	Down	Down
Left	Left	Left
Right	Right	Right
	Home	Guide

MUTA USER GUIDE CONTROLLER


Bedienungsanleitung | Mode d'emploi | Gebruikershandleiding | Manuale utente | Manual del usuario | Guia do utilizador | Brukerveiledning | Bruksanvisning | Käyttöopas | Brugsvejledning | Instrukcja obsługi | Návod k použití | Návod na používanie | Használati útmutató | Manual de utilizare | Ръководство за потребителя | Εγχειρίδιο χρήσης | Kullanıcı kılavuzu | Руководство пользователя | Uporabniški priročnik | Korisnički priručnik | Guia do usuário | Посібник користувача | مودختسملا لي لى



1.

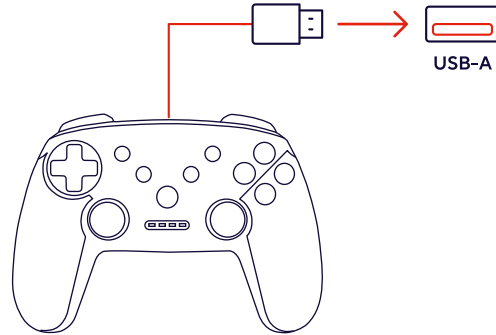

2

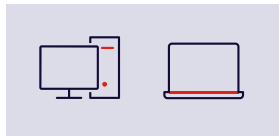


1




100%, 75%, 50%, OFF

2

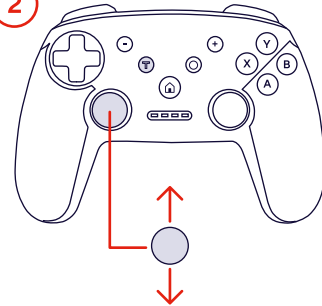

3

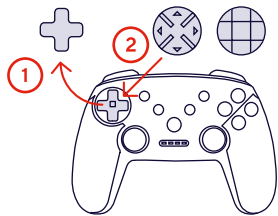

Y/A/B/X + T = TURBO