

Electric Oil Filled Radiator

User's manual

EN



SENCOR®

SOH 2107BK

This product is only suitable for well insulated spaces or occasional use.

Information relating to local electric heaters according to Commission Directive EU 2015/1188 is provided in the attachment to this user's manual.

Prior to using this appliance, please read the user's manual thoroughly, even in cases where you have previously familiarised yourself with the operation of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.

We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	3
DESCRIPTION OF THE HEATER	6
ASSEMBLING THE HEATER	7
USING THE HEATER	7
THERMAL PROTECTION	8
MAINTENANCE AND CLEANING	8
TECHNICAL SPECIFICATIONS	8
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS ..	9
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT	9

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use this product in a safe manner and understand the potential dangers. Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- Children from 3 to 8 years of age may only turn this appliance on and off under the condition that it is located or installed in its intended normal operating position and that they are under supervision or were informed about the safe operation of the appliance and understand the potential hazards. Children from 3 to 8 years of age must not insert the plug into the power socket or clean the appliance or carry out maintenance performed by the user.
- Children younger than 3 years of age should be prevented from accessing the appliance unless they are under constant supervision.
- Children must not play with the appliance.
- This appliance is designed for use in households, offices and similar types of areas. We do not recommend using this appliance in rooms measuring less than 5 m².
- Before connecting the appliance to a power socket, check that the rated voltage on its rating label matches the electrical voltage in the power socket.
- Connect the appliance only to a properly grounded socket.
- Do not use the appliance in the near vicinity of a bath, shower or swimming pool. Do not use it in very dusty or humid rooms such as laundries, in areas where flammable chemicals are stored, in industrial surroundings or outdoors!
- Do not place the appliance directly underneath a power socket or in the vicinity of an open flame.

Electric Oil Filled Radiator

SOH 2107BK

- Do not place the appliance on unstable surfaces such as carpets with very long and thick fibres, couches, etc. Only place the appliance on an even, dry and stable surface.
- This appliance is not intended to be mounted on a wall.
- Do not use the appliance without the feet being installed.
- Do not insert any items through the ventilation slots. Otherwise the appliance may be damaged.
- When in operation, there must be a clearance of at least 50 cm around the appliance to ensure air circulation and a clearance of 1 m from flammable materials must be maintained.

**Attention:**

To prevent the appliance from overheating, do not cover it with any items.

**Attention:**

Certain parts of this appliance may become very hot and cause burns. Special attention should be paid when children and handicapped people are present.

- Do not leave the appliance in operation while sleeping.
- Always turn off the appliance and disconnect it from the power socket when not in use, before removing the feet, moving or cleaning it. Allow it to cool down before removing the feet, moving or cleaning it.
- To prevent potential injury by electrical shock, do not submerge any part of the appliance in water or any other liquid.
- Make sure the power cord does not hang over the edge of a table and that it is not touching a hot surface.
- Do not disconnect the appliance from the power socket by pulling on the power cord. This could damage the power cord or the socket. Disconnect the cord from the power socket by gently pulling the plug of the power cord.
- It is forbidden to use the appliance if it has a damaged power cord or plug. If the power cord is damaged, it must be replaced


by an authorised service centre or by another similarly qualified person, this will prevent the creation of a dangerous situation.

- This appliance is filled with a precise amount of special oil. In the event of an oil leak, please contact an authorised service centre.
- All repairs, including repairs requiring the oil tank to be opened, must be performed only by an authorised service centre.
- In order to prevent a hazardous situation arising, do not repair the appliance yourself or modify it in any way. By tampering with the appliance, you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.
- When putting the appliance out of operation, follow regulations governing the handling of oil.
- The manufacturer is not responsible for any damages caused by the incorrect use of this appliance.

Electric Oil Filled Radiator

SOH 2107BK

DESCRIPTION OF THE HEATER

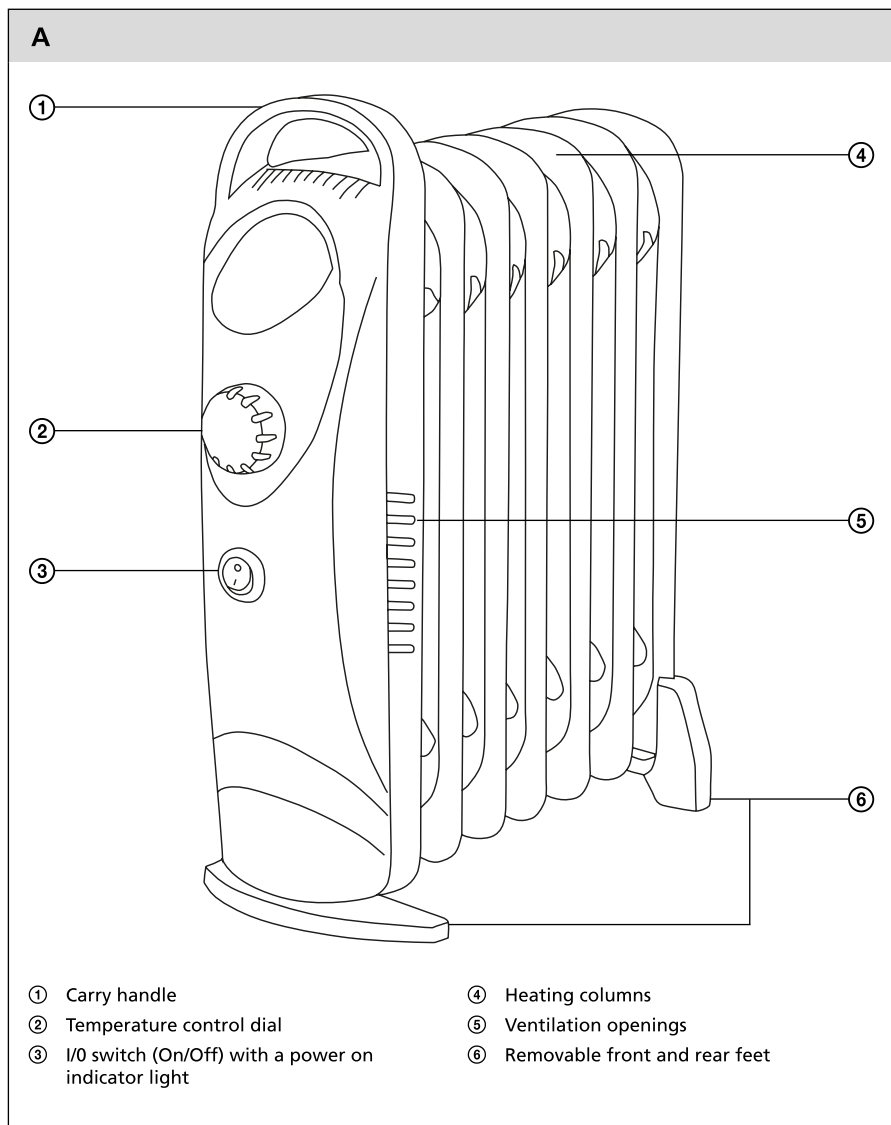


Electric Oil Filled Radiator

SOH 2107BK

EN

ASSEMBLING THE HEATER

- Before using it, attach the feet A⑥ to the heater. Attach the front feet to the bottom part of the control panel, and insert the rear feet from underneath on to the last heating column, see figure B.

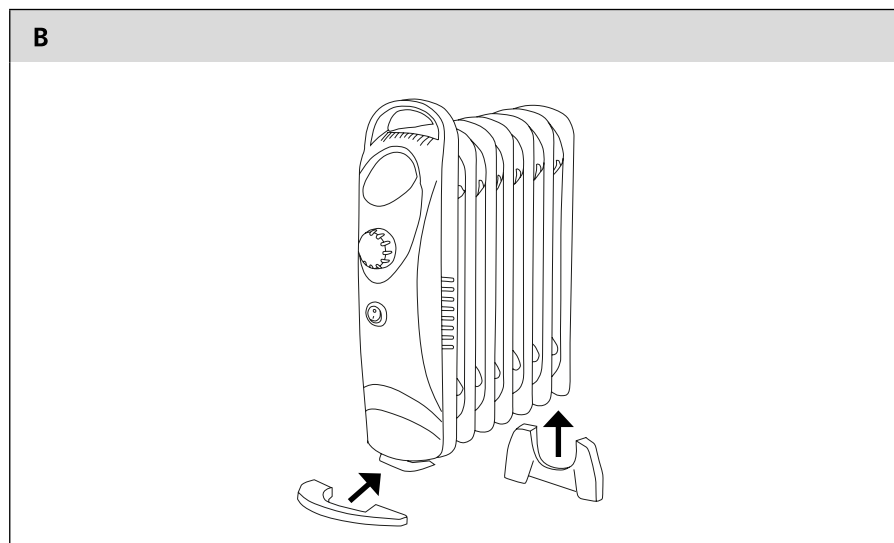

- After attaching the feet A⑥, check the stability of the heater on an even, dry and firm surface.

USING THE HEATER

1. Place the heater on an even, dry and firm surface and plug it into a power socket. Turn the temperature control dial A② clockwise to maximum, and to turn it on, set the power switch A③ to position I (On). The indicator light turns on to indicate that the heating element is turned on.



Note:

Upon first use or after it has not been used for an extended period of time, a slight odour may be sensed from the heater. This is completely normal and will quickly disappear.

2. When the required room temperature is reached, it is necessary to set the thermostat to maintain this temperature. To set the thermostat, slowly turn the control dial A② anticlockwise until a click is heard and the indicator light turns off. The built-in thermostat will maintain the set temperature by automatically switching the heating element on and off. This is indicated by the indicator light turning on and off. You can increase or decrease the temperature at any time by turning the control dial A② clockwise or anticlockwise.
3. When you have finished using the heater, set the control dial A② to minimum and turn off the heater by setting the power switch A③ to position 0 (Off). Disconnect the power cord from the power socket.

Electric Oil Filled Radiator

SOH 2107BK

THERMAL PROTECTION

- The heater is equipped with two-step thermal protection – a resettable and non-resettable thermal fuse. The resettable thermal fuse will turn off the heating element when it overheats and the temperature of the internal electronics reaches 100 °C. If this happens, turn off the heater, disconnect it from the power socket and allow it to cool down. When it has cooled down, you may continue using it.
- The non-resettable thermal fuse is activated in the event that the resettable fuse fails and the temperature of the internal electronics reaches 140 °C. After cooling down, the heater cannot be started again. In such an event, please contact an authorised service centre.

MAINTENANCE AND CLEANING

- Before cleaning, turn off the appliance, disconnect it from the power socket and allow it to cool down.
- Use a dry or lightly dampened wiping cloth for cleaning. Do not use chemicals, abrasive cleaning products, solvents etc. Otherwise, the surface of the appliance may be damaged.
- Do not submerge the appliance or its power cord in water or any other liquids.

TECHNICAL SPECIFICATIONS

Rated voltage range 220–240 V
Rated frequency 50/60 Hz
Rated power input 700 W

We reserve the right to change text and technical specifications.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This appliance meets all the basic requirements of EU directives related to it.

Electric Oil Filled Radiator

SOH 2107BK