



EN ■ Vita fryer

Translation of the original manual

READ CAREFULLY AND STORE FOR FUTURE USE.**General warnings**

- This appliance must not be used by children 0 to 8 years of age. This appliance may be used by children 8 years old and older when under continuous supervision. This appliance may be used by persons with physical, sensory or mental impairments or by persons with insufficient experience and knowledge, if they are properly supervised or have been informed about how to use the appliance in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- Cleaning and maintenance performed by the user must not be performed by children unless they are older than 8 years of age and under supervision.
- Keep children younger than 8 years of age away from the appliance and its power cord.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.
- The surfaces of the appliance that come into contact with food must always be cleaned according to the instructions in this user's manual.
- This appliance is not designed to be controlled using a programmed device, external timer switch or remote control.



Attention: Hot surface.

Electrical safety

- Before connecting this appliance to a power socket, make sure that the voltage stated on its rating label corresponds to the voltage in your power socket.
- Connect the appliance only to a properly grounded socket. Do not use an extension cord.
- Do not connect and disconnect the power cord to and from the power socket with wet hands.
- Ensure that the power plug contacts do not come into contact with water or moisture.
- Do not disconnect the appliance from the power socket by pulling on the power cord. This could damage the power cord or the power socket. Disconnect the cord from the power socket by gently pulling the plug of the power cord.
- Do not place heavy items on the power cord. Make sure the power cord does not hang over the edge of a table and that it is not touching a hot surface or sharp objects.
- To avoid the danger of injury by electrical shock, do not repair the appliance yourself or make any adjustments to it. Have all repairs or adjustments of the appliance performed at an authorised service centre. Tampering with the appliance during the warranty period may void the warranty.
- To prevent the risk of injury by electrical shock, never submerge the air fryer unit, the power cord or the power plug in water or any other liquid.
- Always turn off the appliance and disconnect it from the power socket when you have finished using it.

Correct use of the appliance

- This appliance is used for frying food. It is not intended for bringing liquids to a boil. Do not use it for any other purpose than for which it was designed.
- This appliance is designed for use in indoor areas only. Never use it in an outdoor or industrial environment.
- This appliance is designed for standard household use only. It is not intended to be used in environments such as staff kitchens in stores, offices or farms, or other work environments. Nor is the appliance intended to be used by clients of hotels, motels, bed and breakfast establishments, and other accommodation facilities.
- This appliance must be used only in accordance with the instructions contained in this user's manual.
- Only use the appliance with the original accessories that came with it.



Attention:

Using non-original accessories may result in a dangerous situation arising.

- Do not use the appliance for indoor heating purposes!
- Always turn off and disconnect the appliance from the mains power socket when not using it, when leaving it without supervision, before cleaning, maintenance or moving it. Never move the appliance during operation.
- Do not use the appliance when it is not functioning correctly or after it has fallen on the floor, been submerged in water or is damaged in any other way. Hand it over to an authorised service centre for inspection or repair.
- Do not turn on the appliance without the frying basket being filled with food.
- Do not place any items into the frying area except for the frying basket.
- It is forbidden to modify the surface of the appliance in any way, e.g. using self-adhesive wallpaper, foil, etc.

Installation location of the appliance

- Only use the appliance on an even, dry, clean, stable surface and heat resistant surface.
- Do not use the appliance near flammable materials such as curtains, kitchen towels, etc.
- Do not place the appliance on the edge of a table, on a drainboard, on unstable, inclining or uneven surfaces, on an electric or gas stove and other sources of heat, or in their vicinity.
- The appliance must be located in a stable position with the handles positioned in such a way as to prevent spilling hot foods.
- To ensure sufficient air circulation during operation, there must be a clearance of at least 15 cm on all sides of the appliance. Do not place any items on to the appliance and do not cover the ventilation openings.
- Do not place the appliance in the vicinity of items, surfaces or under items that may become damaged, for example walls, kitchen cabinets, cupboards, paintings, curtains. The escaping steam could damage them.

Safety during use

- Always insert the ingredients that you wish to fry into the frying basket so that they do not come into contact with the heating elements.
- Never place baking parchment paper, aluminium foil or similar materials on the heating elements inside the frying area.
- Never fill the frying basket with oil or any other liquid as this presents a fire hazard.
- The appliance must not be left without supervision when it is in operation.
- The frying basket, the removable bottom and parts inside the fryer heat up and become extremely hot during use. When handling them, be exceptionally careful.
- When the appliance is in operation, the temperature of accessible surfaces may be higher. Do not touch the hot surface. Otherwise, this could cause burns. Use the handle to remove and carry the hot frying basket.
- During operation there needs to be sufficient area for air circulation above the appliance and around it. Do not cover the appliance or block its vent/s.
- Make sure that the steam exhaust outlet does not point towards heat sensitive materials or you or other people. Hot steam may cause serious scalding.
- While frying, do not touch places where hot steam is being emitted as this may cause burns or scalding.
- In the event that during use, you slide the frying basket out to inspect or stir the ingredients, never place your hands into the internal area of the fryer.
- Avoid contact with hot steam, which is released from the vents while the appliance is running.
- Make sure that no water or any other liquid splashes on the power plug or the power socket, and that the hot steam emitted from the appliance is also kept away. If this, nevertheless, occurs, disengage the circuit breaker of the power socket and then carefully dry the power socket and the power plug before further use.


Handling the appliance and its parts

- When you have finished using the appliance, disconnect it from the power source always handle it in such a way as not to touch its inner parts and other parts that may still be hot as a result of residual heat.
- Do not touch the hot surfaces of the appliance. After turning off and unplugging the appliance from the power socket, allow the appliance to cool down sufficiently (ideally 30 minutes).
- It is necessary to pay exceptional care when moving the frying basket when it is filled with hot food.
- Do not place the hot frying basket on heat sensitive surfaces.


Safety during maintenance

- Allow the appliance to always fully cool down before cleaning it.
- Regularly clean the appliance after each use according to the instructions in chapter Maintenance and cleaning. Do not perform any maintenance on the appliance apart from the maintenance procedure described in chapter Maintenance and cleaning.
- The outer body of the appliance is not intended to be washed in a dishwasher.
- Never wash the appliance under running water or submerge it in water or another liquid.

A

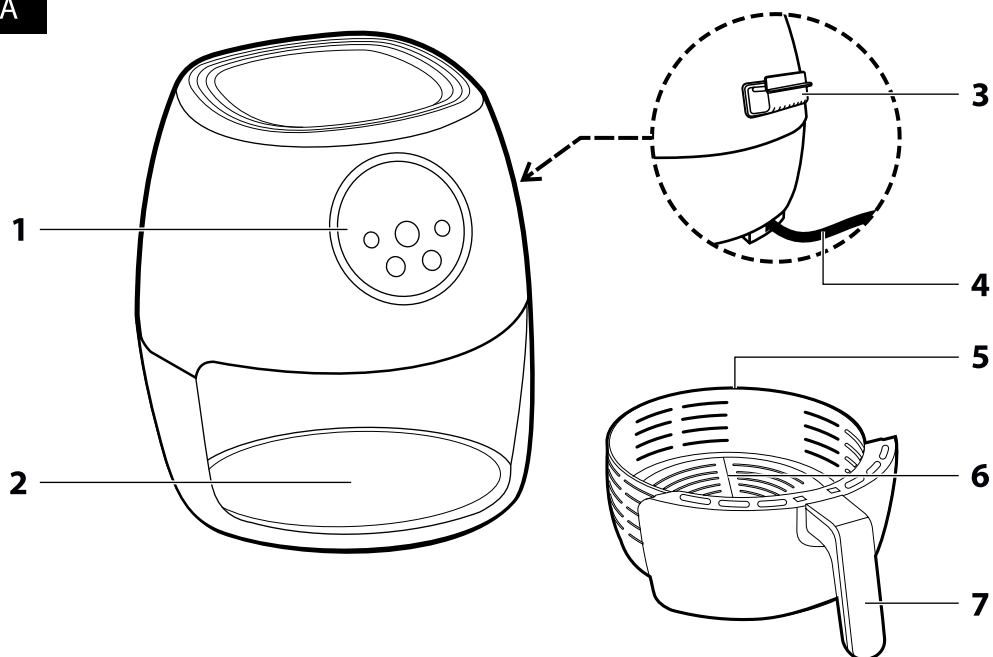

B

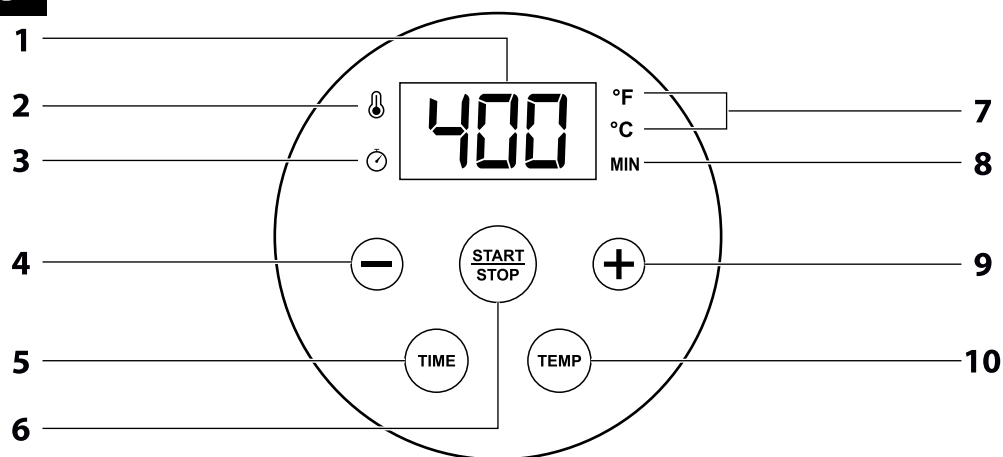

EN Air fryer

User's manual

- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use. In the event that you hand this appliance over to somebody else, make sure to also include this user's manual.
- We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.
- Carefully unpack the appliance and take care not to throw away any part of the packaging before you find all the parts of the appliance.

DESCRIPTION OF THE APPLIANCE

A1 Control panel	A7 Fixed frying basket handle
A2 Hotplate	It is heat-resistant, prevents burns and enables the handling of the hot basket during use without the need for protective gloves
A3 Hot air outlet	
A4 Power cord	
A5 Frying basket	
A6 Removable trivet	
B1 Display	B6 Power/Start/Pause button
B2 Temperature symbol	B7 Temperature unit symbol
B3 Time symbol	B8 Time unit symbol
B4 Reduce temperature or time button	B9 Increase temperature or time button
B5 Frying time setting button	B10 Frying temperature setting button

INTENDED USE OF THE AIR FRYER

- This air fryer is intended for standard household use only. It is used for preparing fried and non-fried meals without any added oil or with a small amount of oil. It is suitable for preparing foods such as pre-fried or homemade French fries, potatoes, schnitzels, chicken thighs, fish pieces and fish fingers, vegetables and much more. The fryer can also be used as a mini oven for baking cookies, cupcakes, muffins, etc.
- The fryer functions on the basis of circulation of hot air. The meal is evenly cooked, has that freshly fried taste and is far healthier. Compared to foods fried in oil, it also has far less calories and cholesterol.
- This air fryer is not intended for heating water, frying oil or other liquids.

BEFORE FIRST USE

- Before using it for the first time, wash the frying basket and the removable trivet using a hot detergent solution. Then rinse all these parts with clean water and dry them thoroughly with a fine wiping cloth. The removable trivet can also be washed in a dishwasher.
- Also clean out the inner and outer parts of the air fryer unit using a lightly dampened wiping cloth and then wipe it dry.



Attention:

Do not rinse the fryer or its power cord under water or submerge it in water. Neither the fryer nor the frying basket are intended for washing in a dishwasher.

OPERATION

OPERATING LOCATION

- Position the fryer on a stable, horizontal, heat resistant surface. Always position it in a way that children cannot reach it. After inserting the frying basket into the fryer, always point the its basket handle so that nobody can graze against it and pull the fryer down.



Warning:

Do not place the fryer on or in the vicinity of flammable materials, for example table cloths or near drapes. Also do not place it in the vicinity of objects or under objects, which may be damaged by steam, for example walls and cupboards.

Do not place any items directly next to the fryer. This could impair the air current and affect the frying results.

- If you wish to place the air fryer on a cooktop underneath a range hood, ensure that the cooktop is turned off.

INSERTING FOOD

- Pull out the handle to slide out the fryer basket. First, insert the removable trivet into the basket and then the food that you wish to cook. To achieve optimal results, when putting ingredients into the fryer, adhere to the minimum and maximum food amounts indicated in the table below.



Warning:

This fryer functions on the basis of hot air. Never fill the basket with oil, shortening or any other liquid. Also, do not place backing parchment paper into it.

When inserting food, do not exceed the MAX. mark.

- If you wish to add a little oil to your food, mix in the oil in a separate bowl and only then tip it into the frying basket.
- After filling, clean the top edge of the basket and any other parts, which have been soiled while the frying basket was being filled.
- Insert the frying basket back into the fryer.



Note:

If the fryer is very cold or if any food types require it, it is possible to preheat the fryer. Proceed according to the chapter AIR FRYING.

Recommended cooking time and food amounts

Food	Amount min-max (g)	Frying time (min)	Temperature (°C)	Note
Frozen French fries	100-500	9-20	200	Mix in.
Homemade French fries	100-500	12-20	200	Add ½ a tablespoon of oil. Mix in.
Chicken pieces	100-400	10-15	200	
Chicken fillets	100-350	18-24	200	Turn over if necessary.
Poultry thighs.	100-400	18-24	180	Turn over if necessary.
Steak	100-400	8-12	180	Turn over if necessary.
Hamburger	100-400	7-14	180	Add ½ a tablespoon of oil.
Frozen fish fingers	100-300	10-14	200	Add ½ a tablespoon of oil.
Cheese in breadcrumb batter.	100-400	7-14	180	Add ½ a tablespoon of oil.
Cupcakes, muffins	4 pcs	13-15	180	Use muffin moulds.



Note:

The time indicated in the table are only indicative in nature and may differ depending on the size and amount of food, and your personal taste. Cake dough for muffins, etc. must first be placed into an appropriate baking pan that will sit on to the trivet of the frying basket.

TURNING ON

- Connect the power cord plug to a power socket. A warning sound will be made and button **B6 (START/STOP)** will start flashing. In this way, the air fryer enters the stand-by mode, meaning that it is ready for operation.



Note:

The fryer will automatically enter the stand-by mode when plugged into an el. power socket, after finishing frying or if no action is performed within 1 minute of it being plugged in the power socket.

- In the stand-by mode, only button **B6 (START/STOP)** is active; the other buttons do not react to being pressed. The stand-by mode at the same time also serves the role of a child safety lock, which prevents the fryer from being accidentally started by children.
- To cancel the stand-by mode and to switch to the operating mode, press button **B6 (START/STOP)**. When it is pressed, the other buttons and the display will light up, and the display will intermittently display the default temperature and time value.

CHANGING TEMPERATURE UNITS

- The fryer enables temperature to be shown in degrees Fahrenheit or degrees Celsius. To change the units, hold down button **B10 (TEMP)** for 5 seconds. A beep is made and the temperature switches from 400 °F to 200 °C and vice versa.

AIR FRYING

Preheating

- If the fryer is cold or if any foods require it, it is possible to preheat the fryer without food in the basket. In such a case, set the time to 3 minutes and set the temperature to 200 °C (400 °F). Start the fryer by pressing button **B6 (START/STOP)**.
- After preheating, carefully slide out the frying basket and place it on a heat resistant material. Be especially careful not to touch the hot surface of the basket. Fill the basket with food and slide it back into the fryer.

Fast frying without a temperature or time setting

- If you wish to start frying without setting the temperature or time, press button **B6 (START/STOP)**. The frying process will start, during which the default temperature is preset to 200 °C (400 °F) and the frying time is preset to 10 minutes.

Frying with temperature and time settings



Note:
Information about the appropriate temperature and time is available in the table "Recommended cooking time and food amounts" or also on the food label.

- To set the temperature, press button **B10** (TEMP) and using buttons **B9** (PLUS) and **B4** (MINUS) increase or decrease the value in increments of 10 °C (20 °F). The minimum value is 60 °C (140 °F), the maximum value is 200 °C (400 °F). Hold down the button to speed up the setting process.
- To set the time, press button **B5** (TIME) and using buttons **B9** (PLUS) and **B4** (MINUS) increase or decrease the value in 1-minute increments. The minimum time is 1 minute, the maximum is 59 minutes. Hold down the button to speed up the setting process.
- Press button **B6** (START/STOP). This button will change its backlight colour, the other buttons will turn off and frying will start.
- If you wish to temporarily pause the frying process, press button **B6** (START/STOP). To resume, press the button again.



Note:
When air frying food with a greater fat content, then it is possible that more steam will be emitted from the air fryer. This is normal and does not constitute a fault.

Stirring or turning food during the air frying process

- It is appropriate to stir or turn over certain types of food during the air frying process. In such a case, slide the frying basket out of the air fryer and place it on a heat resistant material. Be especially careful not to touch the hot surface of the basket or to scald yourself on the hot steam that is released from the food.



Note:
When the frying basket is pulled out during operation, the display will turn off and frying will stop. When the basket is reinserted, the display will light up again and the frying process will continue from the time of the interruption. We recommend returning the basket into the fryer as quickly as possible to prevent a large drop in temperature in the frying area.

- Stir the food in the basket with either a suitable wooden spoon or carefully shake the basket from side to side. If you wish to just flip food over, use a silicone or wooden spatula or tongs.
- Insert the basket back into the fryer.

Finishing frying

- At the end of the set time a sound is made and frying will turn off automatically. The air fryer will switch to the stand-by mode.
- Slide the frying basket out of the air fryer and place it on heat resistant material. Be especially careful not to touch its hot surface or to scald yourself on the hot steam that is released from the food. Check that the food is ready. If the food is not yet finished, simply slide the basket back in, set a few minutes more and then start frying again by pressing button **B6** (START/STOP).
- Empty the contents of the basket on to a suitable plate or bowl. Silicone or wooden kitchen utensils may also be used for removing food from the basket. To prevent scratching the non-stick surface of the basket, we do not recommend using metal kitchen utensils.



Warning:

When you have finished frying, never touch the frying basket or the inside of the fryer, they are very hot! Only handle the basket using the handle. We recommend also using kitchen gloves or other forms of protection.

- When you have finished using it, disconnect the fryer from the power socket, allow it and the basket to cool down, and clean everything out according to the instructions contained in the chapter Cleaning and maintenance.

CLEANING AND MAINTENANCE



Attention:

Prior to any cleaning or maintenance, always disconnect the air fryer from the power grid and allow it and the basket to cool down completely.

To clean the outer parts of the air fryer, its insides and the basket, never use chemicals, dishwashing abrasive wool, steel wool or cleaning products with abrasive components.



Attention:

Neither the fryer, its power cord nor the frying basket are intended for washing in a dishwasher. Never spray the fryer and its power cord with water or any other liquid or submerge it in water or any other liquid.

- We recommend cleaning the inside of the air fryer and the the hotplate and the frying basket immediately after they have cooled down, before the food remains dry on. These are harder to remove later.

Air fryer

- Clean the outer surface of the fryer using a soft, damp cloth and then wipe dry. Wipe the power cord using a dry cloth.



Attention:

When cleaning the outer surface of the fryer, ensure that the control panel remains dry.

- First clean the hotplate using a soft brush to remove any food remains. Then clean it and the inside area using a sponge dampened in a solution of warm water and neutral kitchen detergent. After applying the kitchen detergent, wipe everything with a lightly damp cloth and then thoroughly wipe everything dry.

Frying basket and removable trivet

- Remove the trivet out of the frying basket. Wash the basket and the trivet using a soft dishwashing sponge under running water with the addition of neutral dishwashing detergent. Then rinse these parts under clean water, dry thoroughly, and put them back in their place. The removable trivet can also be washed in a dishwasher.
- If you are unsuccessful in removing baked on food remains, which are stuck on the surface of the basket, then fill the basket with warm water with an addition of neutral dishwashing detergent and put the trivet into it. Allow the water and detergent solution to act for approximately 10 minutes in order to soak the food remains.. Then clean both parts in the usual manner.
- Ensure that baked on food remains do not accumulate on the removable basket and on the bottom. Prior to further use, both parts must be clean.

STORAGE

- Before storing it, the air fryer must be completely cool, disconnected from the power supply, clean and dry.
- Insert the frying basket into the air fryer. Then store the air fryer in a clean, dry and well-ventilated place out of children's reach.



Attention:

Keep the stored air fryer away from extreme temperatures, direct sunlight and excessive humidity and do not store it in an overly dusty environment. Do not place any items on the stored air fryer.

TECHNICAL SPECIFICATIONS

Rated voltage range	220–240 V AC
Rated frequency	50/60 Hz
Rated power input	1,300 W
Volume of the frying basket	3.5 l
Temperature range	60–200 °C
Weight	3 kg
Noise level	70 dB(A)

The declared noise emission level of the appliance is 70 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.

Changes to text and technical parameters are reserved.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling, hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance.

Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details.

In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic equipment, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.