
FIRMWARE UPDATE PROCEDURES

1. FIRMWARE

1-1. OVERVIEW

Confirm the current firmware version and update the firmware.

2. HOW TO UPDATE MAIN FIRMWARE VIA USB FLASH DRIVE

2-1. USB FLASH DRIVE

Use the USB flash drive which supports the following standard.

- Format : FAT32
- USB : 2.0

<Caution>

- Set the proper volume label name.
- It does not correspond to SD card reader.
- It does not correspond to USB HUB.
- Do not use the USB Flash Drive enciphered.


2-2. FIRMWARE UPDATE PROCEDURE

1) Insert the USB flash drive into the PC and copy the update file to root folder.


The name of update file is as follows.

File name : PNLA2.pac

2) Insert USB flash drive in 1) to USB (SERVICE) terminal on the back of monitor when monitor is power on.

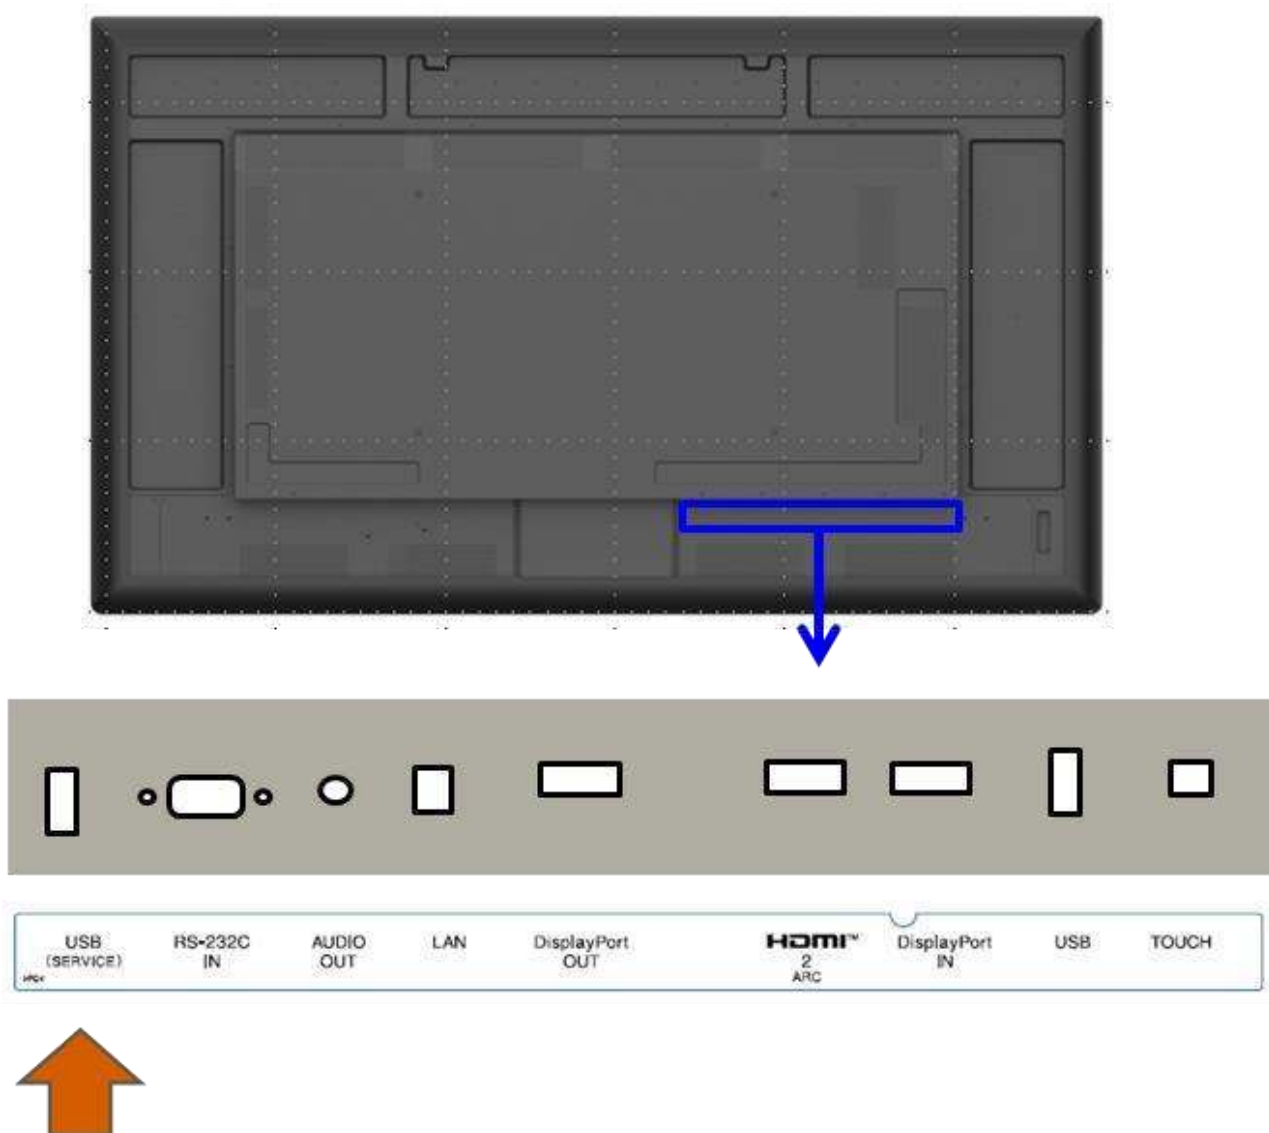

3) When the following screen is displayed, press [ENTER] on remote control or wait for 30 seconds, the firmware update will start.

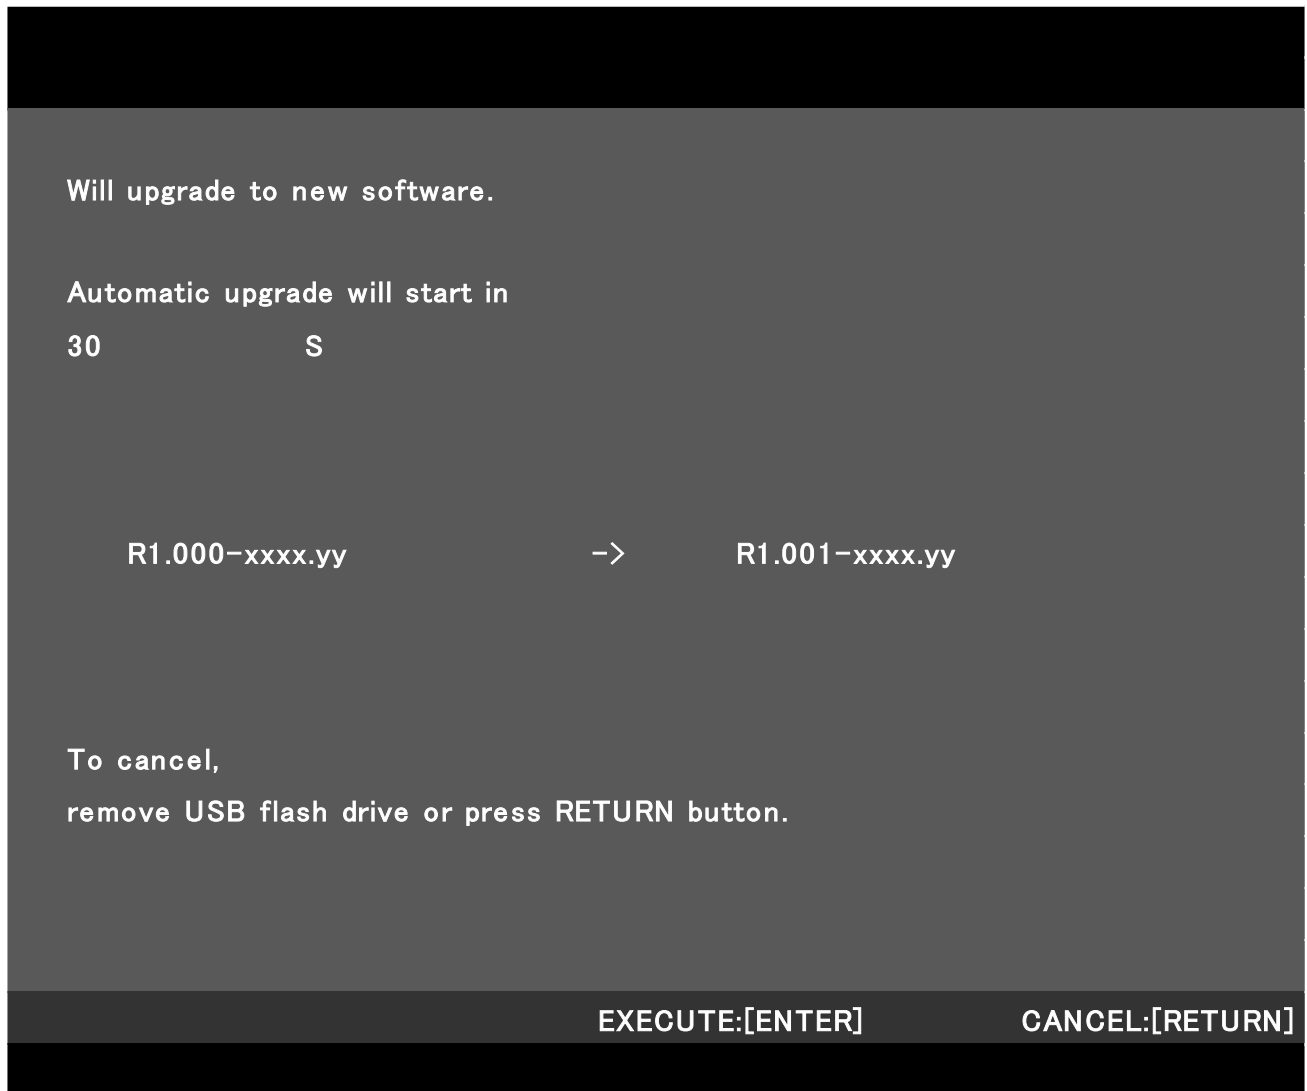


4) The monitor displays the following screen and reboots automatically.


The LED blinks blue during firmware update.

Wait until the LED turns blue stable.

(Caution) Do not perform any operations such as remote control, keys, command, etc, while updating the firmware.

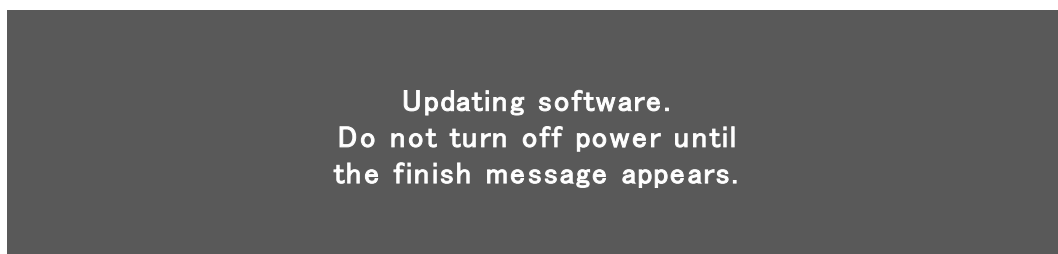

5) When the LED turns blue stable and the monitor displays the following complete screen, the firmware update is completed.

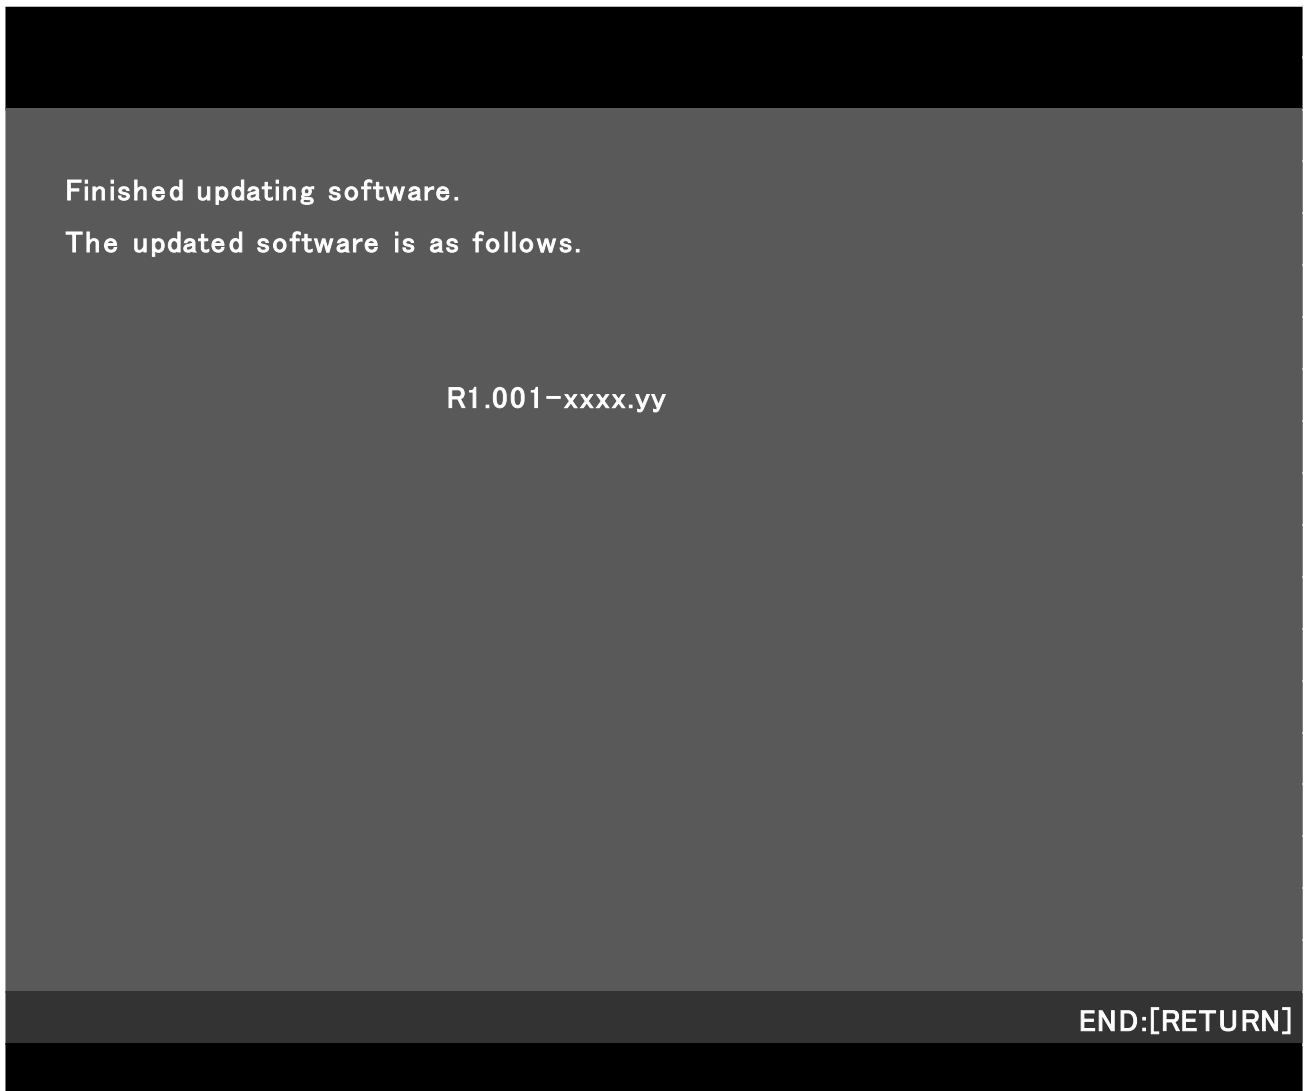

2-3. CAUTION

- It is not possible to use the USB flash drive with the security function with this procedure.
- When the file name of the created updater file, it is not possible to carry out the update.
- When the firmware version before updating is the same or above as the after updating, update does not start.
- **Do not turn off the monitor during updating.**

2-4. NOT NEED UPDATE

If the current monitor firmware is the same or higher than update file, the monitor displays the following screen and the firmware update does not start.

The current software is the latest version.

You do not need to update.


R1.001-xxxx.yy

To close the screen,
remove USB flash drive or press RETURN button.

END:[RETURN]

2-5. UPDATE FAILED

If firmware update is failed, the monitor displays the following error screen and the LED blinks orange.

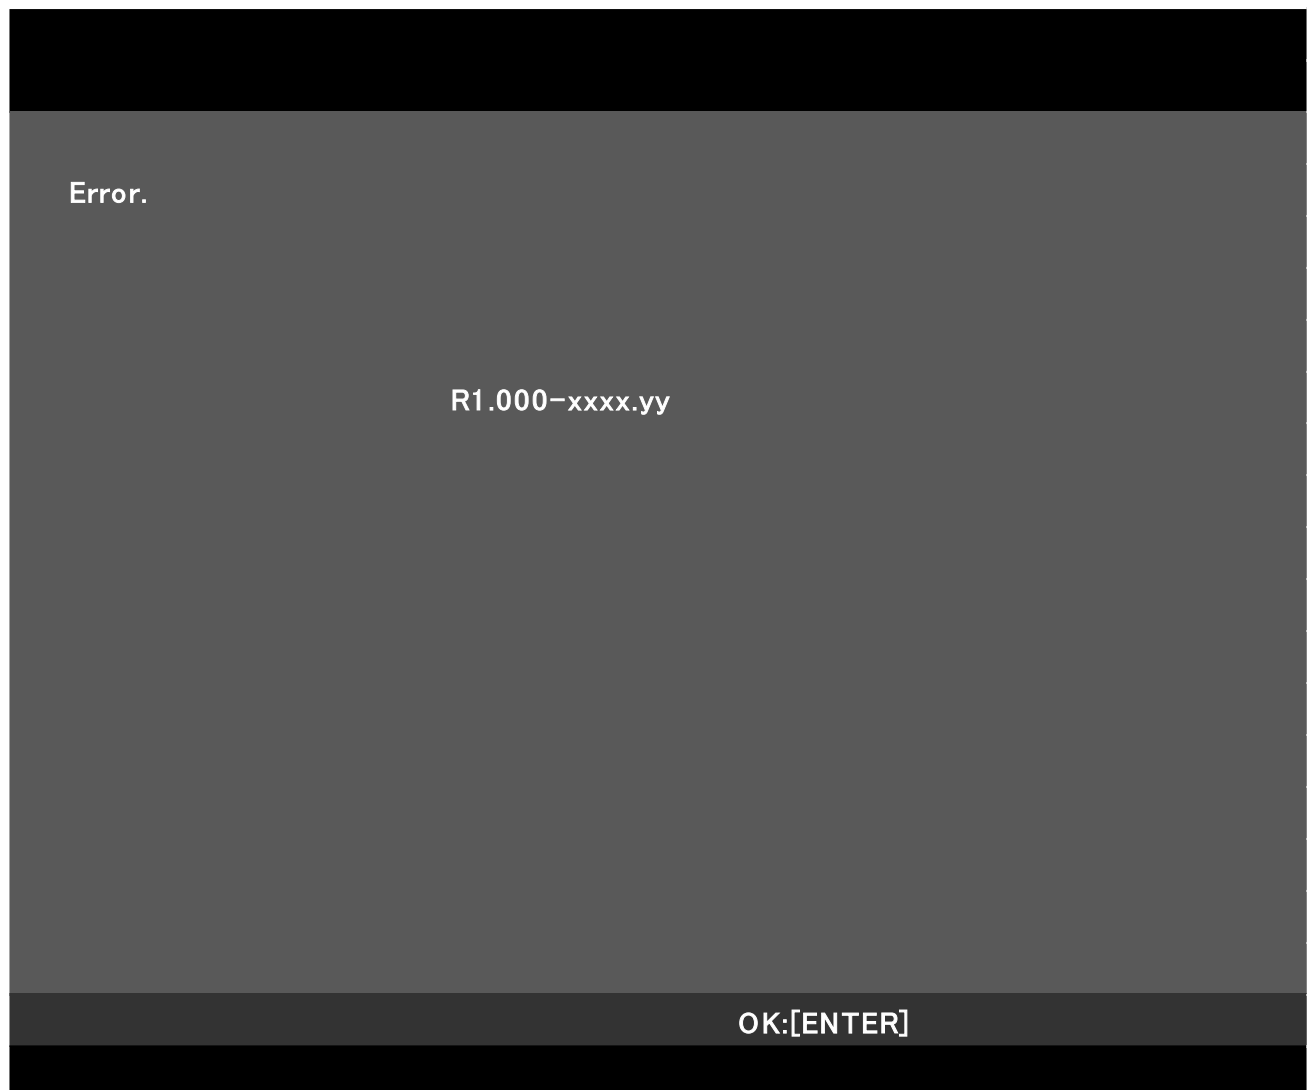


3. HOW TO UPDATE MAIN FIRMWARE FROM WEB UPLOAD

3-1. ENVIRONMENT

In order to update the firmware from web page(file upload), inter/intranet access between monitor and PC is needed.

3-2. FIRMWARE UPDATE PROCEDURE

- 1) Login the monitor web page from PC
(MEMO) When the administrator password lock is enabled, enter the password.
- 2) Click "FIRMWARE UPDATE" on the left list menu.

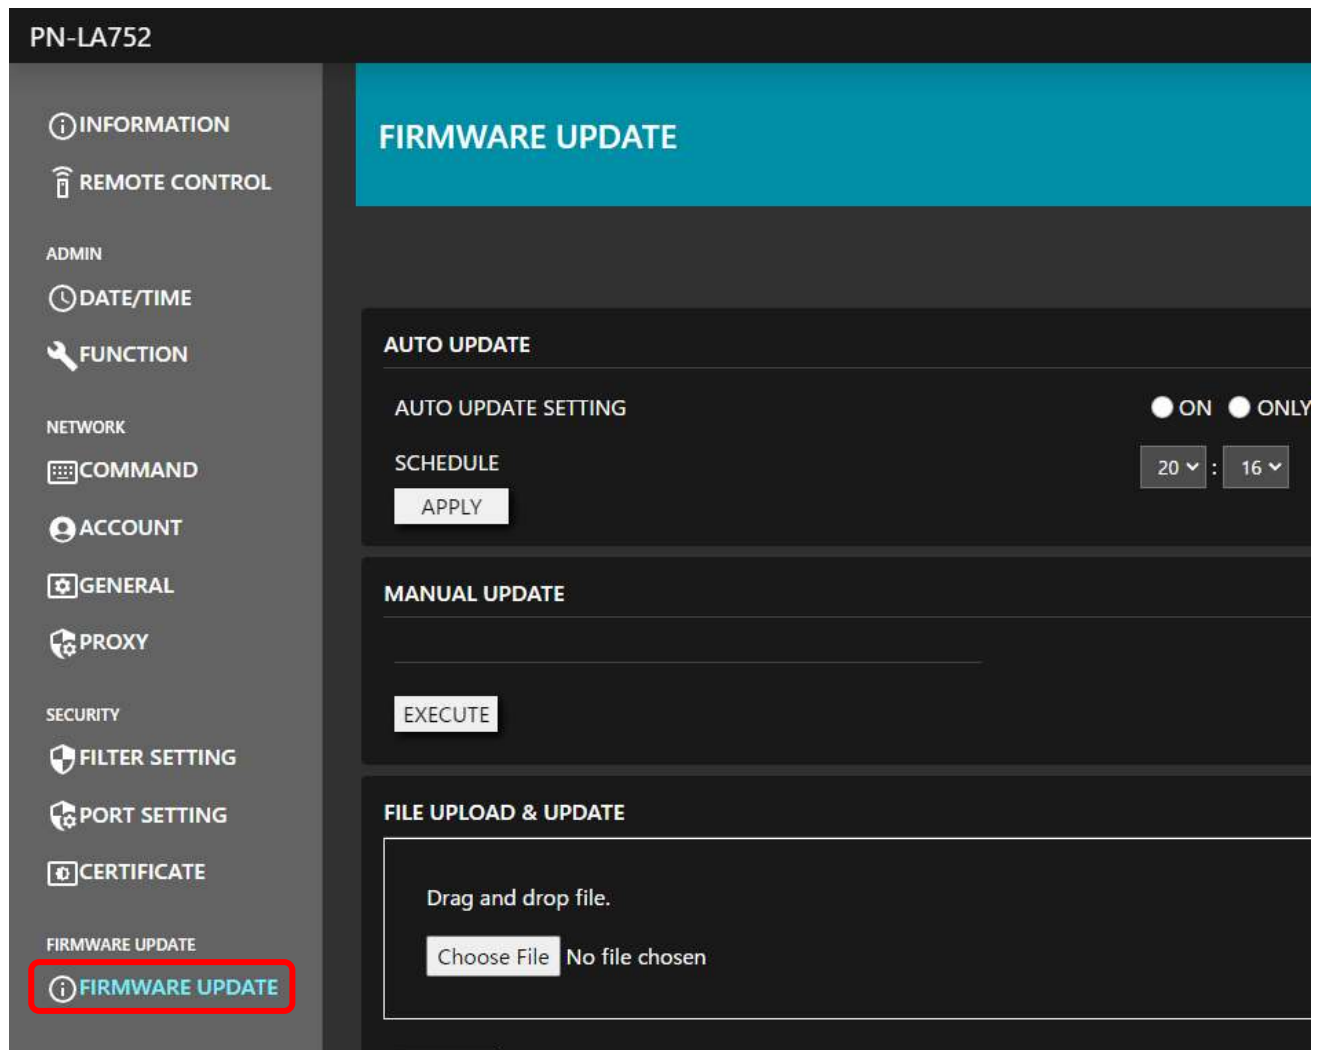

3) Drag and drop update file from file explorer to the following area.

Or, choose update file on the "Choose File" button.

FIRMWARE UPDATE HDMI2 3840x2160

LOGOUT

AUTO UPDATE

AUTO UPDATE SETTING ☐ ON ☐ ONLY CHECK ☒ OFF

SCHEDULE 20 : 16

APPLY

MANUAL UPDATE

EXECUTE

FILE UPLOAD & UPDATE

Drag and drop file.

Choose File No file chosen

UPLOAD

4) Press UPLOAD button and wait until the LED turns blue.

(Caution) Do not perform any operations such as remote control, keys, command, etc, while updating the firmware.

5) When the LED turns blue and display complete screen, the F/W update is complete.

3-3. CAUTION

- The connection between monitor and PC disconnects by reboot for update.
- When the firmware version before updating is the same or above as the after updating, update does not start.
- **Do not turn off the monitor during updating.**

4. HOW TO UPDATE MAIN FIRMWARE FROM INTERNET

4-1. ENVIRONMENT

In order to update the firmware from internet, the environment with internet access is needed.

4-2. FIRMWARE UPDATE PROCEDURE

1) Login the monitor web page from PC

(MEMO) When the administrator password lock is enabled, enter the password.

2) Click "FIRMWARE UPDATE" on the left list menu.

The screenshot displays the web interface for the PN-LA752 device. The left sidebar contains a menu with the following items: INFORMATION, REMOTE CONTROL, ADMIN, DATE/TIME, FUNCTION, NETWORK, COMMAND, ACCOUNT, GENERAL, PROXY, SECURITY, FILTER SETTING, PORT SETTING, CERTIFICATE, and FIRMWARE UPDATE. The 'FIRMWARE UPDATE' item is highlighted with a red box. The main content area is titled 'FIRMWARE UPDATE' and is divided into three sections: 'AUTO UPDATE', 'MANUAL UPDATE', and 'FILE UPLOAD & UPDATE'. The 'AUTO UPDATE' section includes 'AUTO UPDATE SETTING' with radio buttons for 'ON' and 'ONLY', a 'SCHEDULE' section with dropdown menus for '20' and '16', and an 'APPLY' button. The 'MANUAL UPDATE' section has an 'EXECUTE' button. The 'FILE UPLOAD & UPDATE' section contains a 'Drag and drop file.' instruction, a 'Choose File' button, and the text 'No file chosen'.

3) Press EXECUTE button and wait until the LED turns blue.

(Caution) Do not perform any operations such as remote control, keys, command, etc, while updating the firmware.

FIRMWARE UPDATE HDMI2 3840x2160

LOGOUT

AUTO UPDATE

AUTO UPDATE SETTING ☐ ON ☐ ONLY CHECK ☒ OFF

SCHEDULE 20 : 16

APPLY

MANUAL UPDATE

EXECUTE

FILE UPLOAD & UPDATE

Drag and drop file.

Choose File No file chosen

UPLOAD

4) When the LED turns blue and display complete screen, the F/W update is complete.

4-3. CAUTION

- The connection between monitor and PC disconnects by reboot for update.
- When the firmware version before updating is the same or above as the after updating, update does not start.
- **Do not turn off the monitor during updating.**