



---

## **USER MANUAL**

Dishwasher

EN

DWC6433FIXXL

# Contents


|                                                |           |                                                   |           |
|------------------------------------------------|-----------|---------------------------------------------------|-----------|
| <b>Your dishwasher .....</b>                   | <b>3</b>  | <b>ASKO Connect Pro &amp; ConnectLife .....</b>   | <b>26</b> |
| <b>Safety instructions .....</b>               | <b>4</b>  | ASKO Connect Pro .....                            | 26        |
| Sani lock .....                                | 5         | ConnectLife .....                                 | 26        |
| Lock .....                                     | 5         | Remote control the dishwasher .....               | 26        |
| Installation .....                             | 5         | Remote start the dishwasher .....                 | 26        |
| Overflow guard .....                           | 5         | <b>Settings .....</b>                             | <b>28</b> |
| Packaging .....                                | 5         | <b>Care and cleaning .....</b>                    | <b>33</b> |
| Disposal .....                                 | 6         | Top up rinse aid .....                            | 33        |
| Symbols on the appliance .....                 | 6         | Top up salt .....                                 | 33        |
| <b>Before washing for the first time .....</b> | <b>7</b>  | Top up auto dose .....                            | 33        |
| Water hardness .....                           | 7         | Clean the filters .....                           | 33        |
| Basic settings .....                           | 8         | Cleaning the spray arms and spray pipes ...       | 35        |
| Top up rinse aid .....                         | 10        | Clean the outside of the dishwasher .....         | 36        |
| Top up salt .....                              | 10        | Run Self-cleaning .....                           | 36        |
| Automated dosage .....                         | 11        | Remove blockages .....                            | 36        |
| <b>Greener dishwashing .....</b>               | <b>12</b> | Winter storage/Transport .....                    | 37        |
| Save energy and water .....                    | 12        | <b>Troubleshooting .....</b>                      | <b>39</b> |
| <b>Loading the dishwasher .....</b>            | <b>13</b> | General .....                                     | 40        |
| Fragile dishes .....                           | 13        | WiFi .....                                        | 46        |
| Loading affects the results .....              | 13        | <b>Installation .....</b>                         | <b>47</b> |
| The dishwasher's baskets .....                 | 14        | Safety instructions .....                         | 47        |
| Upper basket .....                             | 14        | Setup .....                                       | 48        |
| Middle basket .....                            | 15        | Connection to an automatic dosing<br>system ..... | 48        |
| Lower basket .....                             | 16        | Drainage connection .....                         | 51        |
| Cutlery basket .....                           | 17        | Connection to water supply .....                  | 51        |
| <b>Using the dishwasher .....</b>              | <b>19</b> | Electrical connection .....                       | 52        |
| Add detergent .....                            | 19        | Push to open .....                                | 52        |
| On/Standby mode .....                          | 20        | <b>Service .....</b>                              | <b>53</b> |
| Select program .....                           | 20        | Information about your product .....              | 53        |
| Start/Stop .....                               | 21        | Contact your nearest service centre .....         | 53        |
| Status light floor projection .....            | 22        | Spare parts .....                                 | 53        |
| If you want to load more dishes .....          | 22        | Number of cycles .....                            | 53        |
| Power failure .....                            | 23        | <b>Technical data and energy labelling .....</b>  | <b>54</b> |
| Once the program has finished .....            | 23        | Technical data .....                              | 54        |
| The best drying results .....                  | 23        | Information for consumers .....                   | 54        |
| Unloading the dishwasher .....                 | 24        | Information for test institute .....              | 54        |
| <b>Program chart .....</b>                     | <b>25</b> | Declaration of conformity .....                   | 54        |

# Your dishwasher

*Welcome to our growing ASKO family!*

*We are proud of our appliances. We hope that this appliance will be an appreciated and dependable aid for many years to come.*

*Please read the operating instructions before use. They include general tips, information about the settings and adjustments you can make, and the best way to take care of your appliance.*

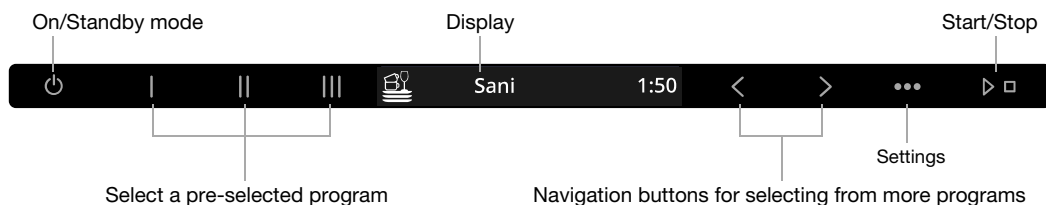

Symbols on the display:


- 🔌 Automatic door opening
- ✳️ Top up rinse aid
- 🧂 Top up salt
- 💧 Auto dose
- ⚖️ Top up auto dose

- 📶 WiFi status Connected
- (Flashes when connecting)
- 🔋 Remote control active

Text on the display:

- Clean the filters
- Run Self-cleaning
- See the chapter *Care and cleaning*.

Install the dishwasher, see the chapter *Installation*. Then open the door and press .

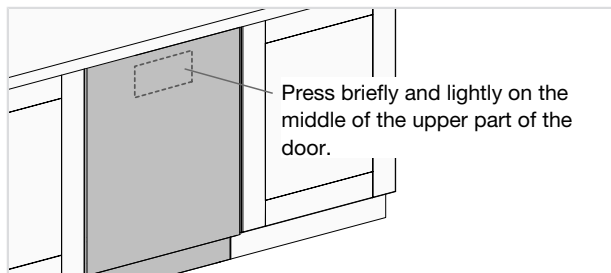

**"Welcome to your new ASKO dishwasher. This is a first time setup."** is shown on the display the first time the dishwasher is switched on. It is important that you choose the right settings to ensure good dishwashing results. See page 7.

The dishwasher can be connected to one or more systems for the automated dosage of commercial detergent and rinse aid, which simplifies everyday operation and reduces the risk of overdosing.

ASKO Connect Pro is a web-based platform that enables you to organise, manage and monitor all your professional ASKO appliances regardless of where they are installed. Once you have connected a professional appliance in the ConnectLife app, a link to ASKO Connect Pro is shown. For more information, please see <https://professional.asko.com/>.

# Safety instructions

- Read the user manual and keep it in a safe place!
- Number of standard place settings: 14
- Never use the dishwasher for any purpose other than that specified in these operating instructions.
- Do not load the dishwasher door or dishwasher baskets with anything other than dishes.
- Never leave the dishwasher door open as someone may trip on it. Push the baskets in to avoid risking the dishwasher tipping over.
- Only use regular dishwasher detergent in the dishwasher's detergent compartment. (If a system for the automated dosage of commercial detergent has been connected, the dishwasher's detergent compartment is not to be used.)
- Use external containers for the automated dosage of commercial detergent and rinse aid. (Commercial detergent and rinse aid for automated dosage must not be used in the dishwasher's dispensing compartments for detergent and rinse aid.)
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Damaged supply cord must only be replaced by the manufacturer's service centre or someone similarly professionally qualified.
- This dishwasher is for household or similar use, such as:
  - staff kitchens in shops, offices and other workplaces.
  - farms.
  - for guests at hotels, motels and other types of accommodation.
  - bed & breakfast hotels.

- Never place dishes with solvent residues in the dishwasher due to the risk of explosion. Nor may dishes that contain ash, wax or lubricants be washed in the dishwasher.
- Children must be watched. Do not allow children to use or play with the dishwasher. Be especially vigilant when the door is open. Some detergent may remain inside! After adding detergent, always start the dishwasher immediately.
- For repairs and maintenance, original spare parts must be used.

## WARNING!

Knives and other pointed items must be placed with the points down in the cutlery basket or horizontally in other baskets.

## WARNING!

Children must be supervised – dishwasher detergent is corrosive!

## Sani lock

To prevent the risk of burn injuries, the door cannot be opened while the dishwasher temperature exceeds 65 °C.

## Lock

You can activate the Lock setting to prevent children or persons with reduced mental capabilities from starting the dishwasher. See the chapter *Settings*. You can temporarily deactivate the Lock function – place your foot over the status light floor projection and open the dishwasher door with the Push to open function.

## Installation

See the chapter *Installation*.

## Overflow guard

The overflow guard starts pumping out the water and turns off the water supply if the water level in the dishwasher exceeds the normal level. If the overflow guard is triggered, F54 (Overfilling water) appears on the display. Turn off the water tap and contact your nearest service centre. (To avoid water leakage outside the dishwasher, do not remove the plug from the wall socket until the water tap on the supply line has been turned off!)

## Packaging

The outer packaging protects the product during transport. The packaging material is recyclable. Separate the different packaging materials to help reduce raw material use and waste. Your dealer

# Safety instructions

can take the packaging for recycling or direct you to the nearest recycling centre. The packaging is comprised of:

- Corrugated cardboard made from up to 100% recycled material.
- Expanded polystyrene (EPS) with no added chlorine or fluorine.
- Supports made from untreated wood.
- Protective plastic made from polyethylene (PE).

## Disposal

The dishwasher is manufactured and labelled for recycling. When the dishwasher has reached the end of its service life and is to be disposed of, it should immediately be made unusable. Pull out the power cable and cut it as short as possible. Remove the light source/light sources.

Contact your local authority for information about where and how your dishwasher should be correctly recycled.

## Symbols on the appliance



Read the user manual.



Recycle as electrical waste.



Approved in accordance with the relevant EU directives.



Approved in accordance with the relevant UK legal requirements.

## NOTE!

Follow the instructions carefully to avoid injury to persons and damage to property, and to maintain the warranty.

# Before washing for the first time

## Water hardness

In order to achieve good dishwashing results, the dishwasher needs soft water (water with low mineral content). Hard water leaves a white coating on dishes and the dishwasher.

### Checking water hardness

Water hardness is specified using German degrees of water hardness (°dH), French degrees of water hardness (°fH), English degrees of water hardness (°eH) or millimoles per litre (mmol/l).

A water supply with a water hardness in excess of 5°dH (9°fH / 6°eH / 0.9 mmol/l) must be softened. This is done automatically with the aid of the built-in water softener. In order for the water softener to function properly, its settings must be adjusted to the hardness of the water supply. Once you have adjusted the water softener settings, add detergent and rinse aid in doses suitable for soft water.

Contact the local waterworks to check the water hardness in your area.

Make a note of the water hardness: \_\_\_\_\_

| German water hardness scale | French water hardness scale | Recommended setting |
|-----------------------------|-----------------------------|---------------------|
| 0-3°dH                      | 0-5°fH                      | 0                   |
| 4-5°dH                      | 6-9°fH                      | 1                   |
| 6-8°dH                      | 10-14°fH                    | 2                   |
| 9-11°dH                     | 15-20°fH                    | 3                   |
| 12-14°dH                    | 21-25°fH                    | 4                   |
| 15-19°dH                    | 26-34°fH                    | 5                   |
| 20-24°dH                    | 35-43°fH                    | 6                   |
| 25-29°dH                    | 44-52°fH                    | 7                   |
| 30-39°dH                    | 53-70°fH                    | 8                   |
| 40°dH                       | 71°fH                       | 9                   |

If the water hardness exceeds 20°dH (36°fH), we recommend connecting an external water softener.

### Increased consumption during regeneration

The dishwasher's built-in water softener is regularly regenerated to maintain its function. Regeneration extends the dishwashing program and increases energy and water consumption. Just how often the dishwasher's water softener is regenerated depends on the selected setting.

Example: If the Eco program is run with a water hardness of 14°dH (25°fH / 18°eH / 2.5 mmol/l), the water softener is regenerated at regular intervals (after 5 dishwashing cycles), energy consumption increases by 0.015 kWh, and water consumption increases by 2.3 litres, while the program time is extended by 3 minutes. Regeneration takes place during the program's main wash.

# Before washing for the first time

## WARNING!

Hard water leaves a white coating on dishes and inside the dishwasher. It is therefore important that you select the right setting for the water softener! See Water hardness.

Never run the dishwasher with an empty salt compartment if the water supply has a water hardness in excess of 5°dH (9°FH / 6°eH / 0.9 mmol/l).

## Basic settings

Open the door. Press .

"**Welcome to your new ASKO dishwasher. This is a first time setup.**" is shown on the display. It is important that you choose the right settings to ensure good dishwashing results.

Select setting with < or >. Confirm selected setting with .

| Settings                                                                           |                                                                                                                                                                                                                                                                                                                                                                                                                            |
|------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Language</b>                                                                    | Select the language to be shown on the display.                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Power</b> 10 A/16 A<br><i>Pre-selected at factory: 16 A</i>                     | <p>This dishwasher has been designed to be able to be connected to an electrical supply network with fuses for 10 A or 16 A.</p> <p>The water in the dishwasher will be heated more quickly, and the dishwashing program will run more quickly, if you select 16 A.</p> <p>Select 10 A or 16 A according to the electrical supply network in your property.</p>                                                            |
| <b>Rinse aid</b> 0/1/2/3/4/5 <sup>1)</sup><br><i>Pre-selected at factory: 4</i>    | <p>Drying is faster and a better result is achieved if you use rinse aid. You will also achieve a better dishwashing result with clear and spotless dishes.</p> <p>The rinse aid dispenser can be adjusted between 0 (Off) and 5 (High dosage).</p>                                                                                                                                                                        |
| <b>Water hardness</b> 0/1/2/3/4/5/6/7/8/9<br><i>Pre-selected at factory: 6</i>     | <p>Adjusting the water softener. Select a setting depending on the hardness of the water supply. It is important that this setting is correct!</p> <p>For a water supply with a hardness above 5 °dH (9 °fH / 6 °eH / 0.9 mmol/l), fill with salt.</p> <p><i>For a water supply with a hardness below 6°dH (10°FH / 7°eH / 1.0 mmol/l), select 0. The water softener is deactivated and no salt needs to be added.</i></p> |
| <b>TAB</b> On/Off<br>(All-in-one detergent)<br><i>Pre-selected at factory: Off</i> | <p>Activate this setting when using an all-in-one detergent that contains rinse aid.</p> <p><i>This setting reduces the rinse aid dosage and affects how often the dishwasher's built-in softener is regenerated.</i></p>                                                                                                                                                                                                  |
| <b>WiFi</b><br>WiFi status                                                         | Connect the dishwasher to your wireless network to be able to remote control the dishwasher using the <i>ConnectLife</i> app.                                                                                                                                                                                                                                                                                              |

# Before washing for the first time

| Settings                      |                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| WiFi connection <i>On/Off</i> | After connecting the dishwasher to your local network, you can select <i>WiFi connection Off</i> to deactivate the connection. Select <i>WiFi connection On</i> to reconnect to the same network.                                                                                                                                                                                                                                        |
| Connection setup              | <p>Connect the dishwasher to your wireless network and pair with your smartphone/tablet.</p> <ul style="list-style-type: none"> <li>• In the ConnectLife application, go to the »Add devices« menu and select the appropriate type of device. Then scan the QR code (it can be found on the serial number plate of the appliance; you can also enter the AUID/SN number manually).</li> <li>• Select <i>Connection setup</i>.</li> </ul> |
| Add device                    | <p>Pair more devices/users with the dishwasher.</p> <ul style="list-style-type: none"> <li>• In the ConnectLife application, go to the »Add devices« menu and select the appropriate type of device. Then scan the QR code (it can be found on the serial number plate of the appliance; you can also enter the AUID/SN number manually).</li> <li>• Select <i>Add device</i>.</li> </ul>                                                |
| Remove all devices            | Select <i>Remove all devices</i> to remove all connected devices/users.                                                                                                                                                                                                                                                                                                                                                                  |
| WiFi factory reset            | Select <i>WiFi factory reset</i> to restore the default factory settings.                                                                                                                                                                                                                                                                                                                                                                |
| Exit                          | Select <i>Exit</i> to exit the menu for WiFi, press <b>...</b> .                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Save and exit</b>          | Select <i>Save and exit</i> , press <b>...</b> .                                                                                                                                                                                                                                                                                                                                                                                         |

<sup>1)</sup> The setting will be deactivated following the activation of automated dosage of commercial rinse aid. Rinse aid will not then need to be refilled.


To change the selected setting, see the chapter *Settings*.

# Before washing for the first time

## ✳ Top up rinse aid

Add rinse aid to the container for rinse aid (if the dishwasher has not been connected to a system for the automated dosage of rinse aid).

Top up the rinse aid compartment with rinse aid if you have selected Rinse aid 1 - 5.

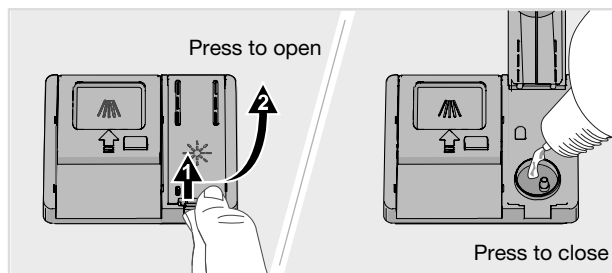


1. Open the rinse aid compartment lid.
2. Carefully top up with rinse aid to the level marked **MAX**.
3. Wipe up any splashes of rinse aid around the compartment.
4. Close the lid firmly.

## ⌘ Top up salt

For a water supply with a hardness above 5 °dH (9 °fH / 6 °eH / 0.9 mmol/l), fill with salt.

Add salt to the salt compartment if you have selected Water hardness 1 - 9.

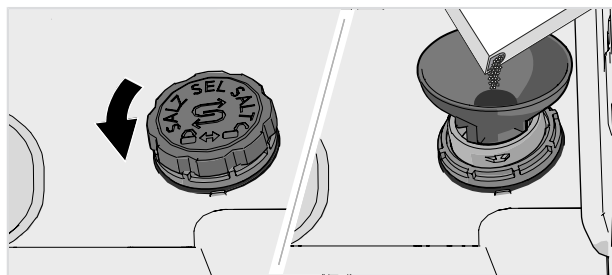

1. Remove the salt compartment lid by turning it anticlockwise.
2. Place the funnel supplied with the dishwasher in the salt compartment top-up hole. Before washing for the first time, pour in about 1 l of water. (Water is only needed the first time.)
3. Add enough salt to fill the salt compartment (max. 750 gram). Use special dishwasher salt.
4. Wipe away excess salt and turn the lid clockwise until in the closed position.

## ⚠ WARNING!

In order to avoid rust stains a dishwashing program must be started immediately after adding salt.

Never pour dishwasher detergent into the salt compartment. This destroys the water softener!

## Automated dosage

The dishwasher can be connected to one or more systems for the automated dosage of commercial detergent and rinse aid, which simplifies everyday operation and reduces the risk of overdosing.

### Step by step

- Connect the external cables for the automated dosage of commercial detergent and rinse aid. Also connect the hoses supplied. See the *Installation* chapter.
- Activate Auto dose in the dishwasher menu for Settings. See the chapter *Settings*.
- Add commercial detergent and rinse aid intended for automated dosage to the appropriate external compartments.
- Select Vent the hose to dispense detergent and rinse aid. See the chapter *Settings*.

### Diluting detergent and rinse aid

To correctly dilute detergent and rinse aid, calculate the dose based on the amount of water in the machine.

Amount of water in the machine:

- 3.5 liter for detergent dose
- 3.5 liter for rinse aid dose

### NOTE!

Add the commercial detergent and rinse aid in the appropriate external containers in advance, to prevent air from entering the system.

### WARNING!

Note that there are risks involved in handling commercial detergent and rinse aid. Protective gloves and goggles must be used when handling these products.

Follow the supplier's safety regulations concerning the handling and storage of detergent and rinse aid.

# Greener dishwashing

## Save energy and water

When using a dishwasher in a residential setting, less energy and water are generally used compared to washing the dishes by hand.

### **Do not rinse under running water**

Do not rinse the dishes under running water as this will lead to increased energy and water consumption. Simply scrape off large food particles before loading the dishwasher.

### **Choose a green detergent**

Read the environmental declaration on the packaging!

Too much detergent, rinse aid and salt can result in less effective dishwashing and also entail greater environmental impact.

### **Run a fully loaded dishwasher**

Save energy and water by waiting until the dishwasher is full before running a program (see number of standard place settings). Use the Rinse and hold program to rinse the dishes if there are any unpleasant odours.

### **Run programs at a lower temperature**

If the dishes are only slightly dirty, you can select a program with a low temperature.

### **Select dishwashing program – Eco**

This program is suitable for washing normally soiled dishes and is the most effective program in terms of combined energy and water consumption. This program is used to assess compliance with EU legislation on ecodesign.

The dishwashing program is designed for an effective wash using as little energy and water as possible. The program washes at a low temperature for a long time.

### **Select setting – Automatic door opening**

Better drying results are achieved if you use the Automatic door opening option, which automatically opens the dishwasher door. Wait until the dishwasher indicates that the program has ended and the dishes have cooled before unloading the dishwasher. (If the dishwasher is built-in, the surrounding furnishings must be resistant to any condensation from the dishwasher.)

## Fragile dishes

Some cookware is not dishwasher safe. This can be for several reasons. Some materials cannot withstand high heat, others can be damaged by dishwasher detergent.

Exercise caution with, for example, handmade items, fragile decoration, crystal/glassware, silver, copper, tin, aluminium, wood and plastic. Look for the "Dishwasher safe" marking.

### **Fragile decoration**

Porcelain with decoration on top of the glazing (the items feel rough) should not be washed in a dishwasher.

### **Crystal/Glass**

Wash fragile items made of crystal/glass using the gentle dishwashing program Crystal glass. Remember to use a small amount of detergent and to place items so that they do not touch each other during the wash.

Drying is faster and a better result is achieved if you use rinse aid. You will also achieve a better dishwashing result with clear and spotless dishes.

*Hand-painted glassware, as well as antique and very fragile items, should not be washed in a dishwasher.*

### **Silver**

Silver and stainless steel items should not come into contact, as the silver can become discoloured.

In order to avoid marks and tarnishing, separate dishes made from different metals, such as silver, stainless steel and aluminium.

### **Aluminium**

Aluminium can lose its shine if washed in a dishwasher. However, good quality aluminium pans can be washed in a dishwasher, even if some of the shine will be lost.

### **Cutlery with glued handles**

Some types of glue are not dishwasher safe. In such cases, the handles may loosen.

## Loading affects the results

Load the dishes carefully to ensure the best washing and drying results with the lowest possible energy and water consumption. Give your dishwasher the best chance to reach and clean all surfaces, as well as to dry the dishes as thoroughly as possible.

- All dirty surfaces should face inwards and downwards!
- Dishes should not be placed in or on each other.
- Angle dishes with hollows, such as cups, so that the rinse water will run off. This is also important for plastic items.
- Make sure small items cannot fall through the dishwasher basket; place them in the cutlery basket.

### **NOTE!**

Check that the spray arms can rotate freely.

# Loading the dishwasher



## The dishwasher's baskets

The dishwasher is equipped with an upper basket, a middle basket and a lower basket with a cutlery basket.

*The appearance of the baskets may differ depending on the dishwasher setup.*

## Upper basket

Place glasses, cups, bowls, side plates and saucers in the upper basket. All dirty surfaces should face inwards and downwards! Wine glasses are placed on the wine glass shelf and knives are placed in the knife stand on the right.

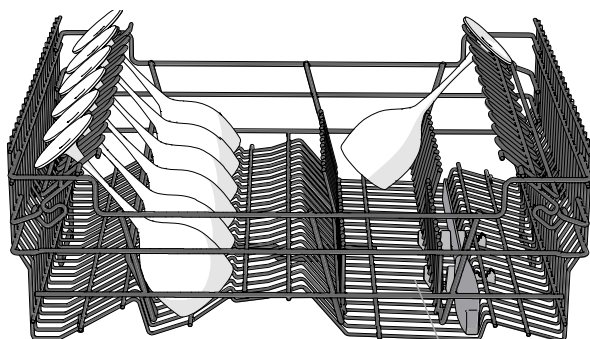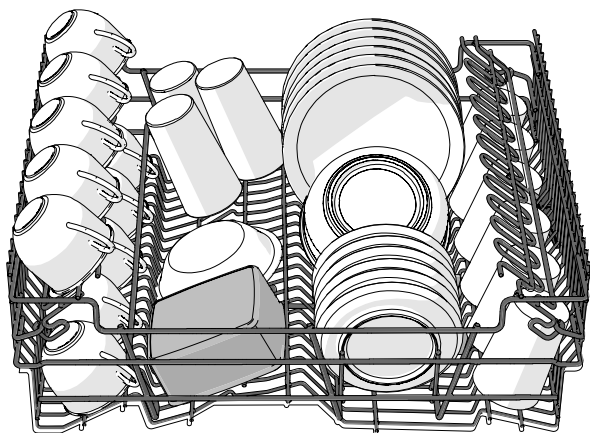


Knife stand

## Raising the upper basket

1. Pull out the upper basket.
2. Grab the sides of the upper basket with both hands and lift it up.


## Lowering the upper basket

1. Pull out the upper basket.
2. Grab the sides of the upper basket with both hands and push in the two locking handles to lower the upper basket.

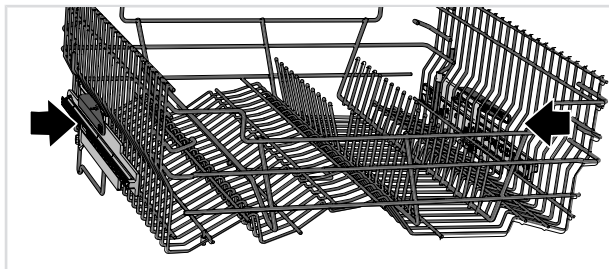


## Middle basket

The middle basket is fitted with two cutlery inserts. Place ladles, whisks, serving cutlery and similar items in the middle basket.

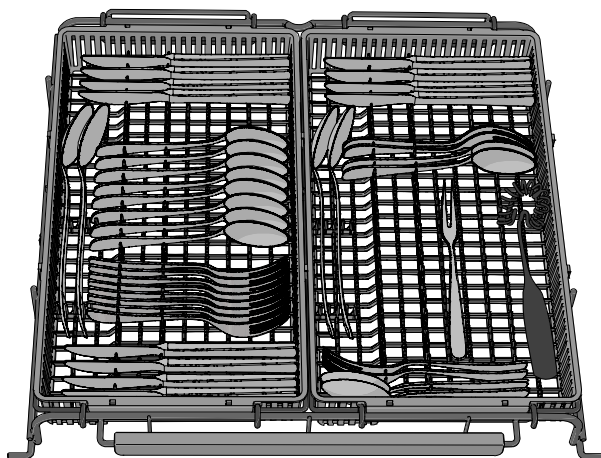

## Washing larger items

If large items are to be washed in the lower basket, either the middle basket's two inserts can be removed or the entire middle basket can be lifted out. To remove the entire middle basket, grab the sides of the middle basket with both hands and lift both sides at the same time. To refit, simply reverse the procedure.

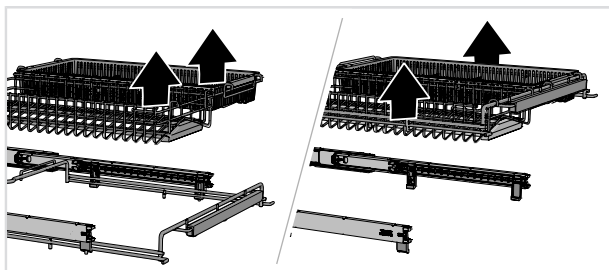


# Loading the dishwasher

## Lower basket


Place plates, side plates, serving dishes, pots and cutlery (in the cutlery basket) in the lower basket.

Place pots and pans in the rear of the lower basket to best utilise dishwashing performance from the two spray nozzles.

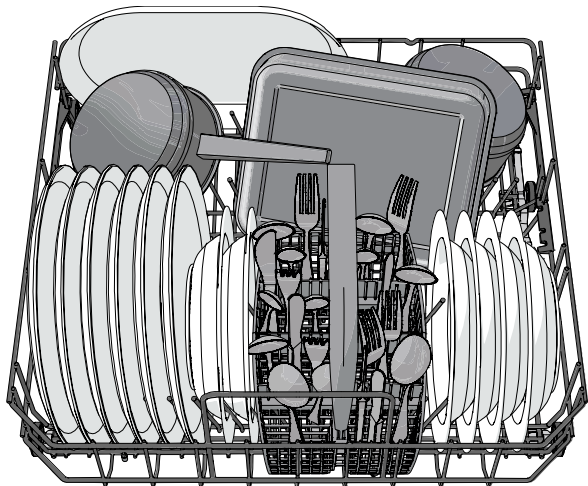


## Adjustable plate supports

The adjustable plate supports can be adjusted to suit the dishes. Release the plate supports by pushing them inwards before repositioning them. The plate supports can also be folded down to make it easier to load pots and bowls.

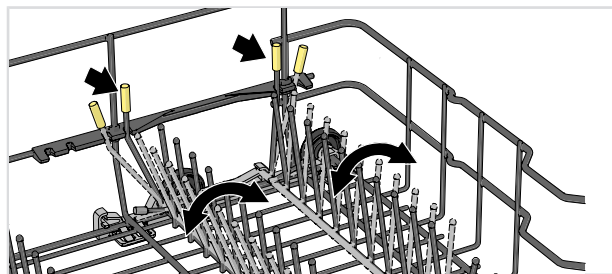

## Vase and bottle holder

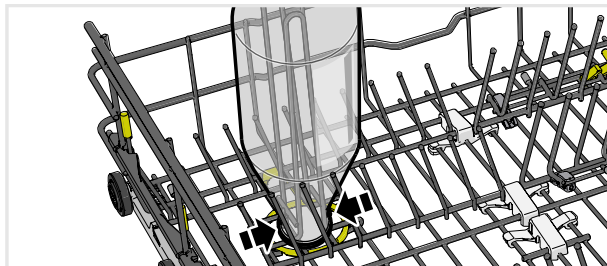

Install the vase and bottle holder above the left spray nozzle. (Found in the enclosed plastic bag.)

## Washing large plates

You can adjust the lower basket for plates with a diameter of 25-29 cm by moving the adjustable plate supports and their fixtures to increase the distance between the tine rows.

## Cutlery basket

Place cutlery with the handles facing down, except for knives, and spread them out as much as possible. Ensure that spoons do not stack inside each other.


The cutlery basket is best placed in the middle at the front of the lower basket to best utilise dishwashing performance from the unique spray zone intended for the cutlery basket.

## ⚠ WARNING!

Knives and other pointed items must be placed horizontally in the dishwasher's special cutlery baskets.

## Fold-down section for small items


The cutlery basket has a fold-down section in the middle for small items or small shafts (such as electric whisk attachments).

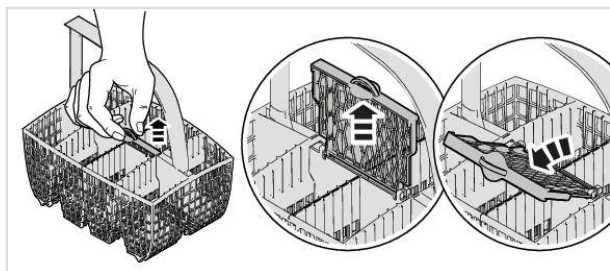

# Loading the dishwasher

## Accessory

Buy a mini cutlery basket. The extra cutlery basket is flexible and can be dismantled and attached to the lower basket or the large cutlery basket to make an extra large cutlery basket. This accessory is available where you bought the dishwasher.

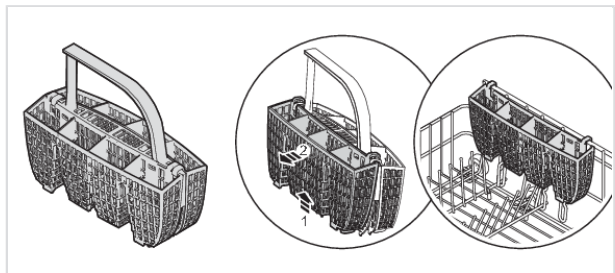

## Add detergent


Add detergent to the detergent compartment (if the dishwasher has not been connected to a system for the automated dosage of commercial detergent).

Follow the instructions on the detergent packaging. This dishwasher is fitted with a water softener, so use detergent and rinse aid doses suitable for soft water.

### Detergent compartment

Choose a detergent intended for professional dishwashers to ensure optimal dishwashing results.

Too much detergent can result in less effective dishwashing and also entails greater environmental impact.

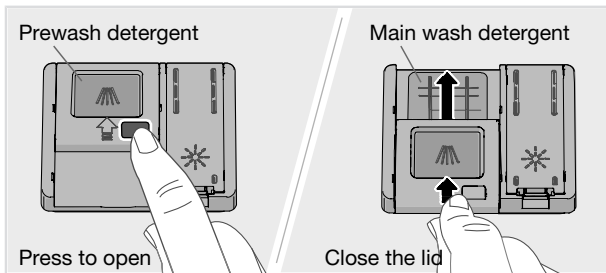

The detergent compartment must be dry when adding detergent. There is one compartment for the prewash and one for the main wash. If dishwasher detergent powder or dishwasher detergent gel is used, you can add a small amount of the detergent to the prewash compartment. Contact the detergent manufacturer if you have questions about the detergent.

### NOTE!

Use only dishwasher detergent! Washing up liquid must not be used as the foam that forms prevents the dishwasher from operating effectively.

### All-in-one detergent

There are many types of all-in-one detergents on the market. Read through the directions for these products carefully.

Activate the TAB setting when using an all-in-one detergent that contains rinse aid.

Dishwasher tablets are not recommended for programs lasting less than 75 minutes. Use dishwasher detergent powder or dishwasher detergent gel instead.

### NOTE!

Optimal washing and drying results are achieved by using dishwasher detergent together with separately dispensed rinse aid and salt.

# Using the dishwasher



## On/Standby mode

Open the door and press . Also turn on the water tap if it is turned off.

## Select program

Eco is always pre-selected. To select another program, press I, II or III. You can also select a program by pressing < or > until the desired program is shown on the display.

Select a program to suit the type of dishes and how dirty they are.

### **Eco**<sup>1)</sup>

This program is suitable for washing normally soiled dishes and is the most effective program in terms of combined energy and water consumption. This program is used to assess compliance with EU legislation on ecodesign.

### **Crystal glass**

A gentle dishwashing program with a low temperature for washing fragile items made of crystal/glass. Remember to use a small amount of detergent and to place items so that they do not touch each other during the wash. See also *Fragile dishes* in the chapter *Loading the dishwasher*. Porcelain that has just been used without dried leftovers can also be washed using this program.

### **Intensive**

A program with a high temperature for dissolving grease on very dirty dishes, such as pans, casserole dishes and oven dishes. If these dishes do not completely fill the dishwasher, you can add plates and other dishes.

### **Quick**

This program is used for glasses and porcelain that is slightly dirty, such as coffee cups.

### **Rinse and hold**

Used to rinse dishes while you wait for the dishwasher to become fully loaded.

### **Universal**

Powerful program for daily use that can remove dried leftovers, but is not intended for burnt food, such as on oven dishes.



## **Sani<sup>1)</sup>**

An ideal program when hygiene demands are set high. The temperature of the main wash is 60 °C. The final rinse is 85 °C for 4 minutes.

 To prevent the risk of burn injuries, the door cannot be opened while the dishwasher temperature exceeds 65 °C.



## **Sani quick<sup>1)</sup>**

A quick program when hygiene demands are set high. The temperature of the main wash is 50 °C. The final rinse is 85 °C for 4 minutes.

 To prevent the risk of burn injuries, the door cannot be opened while the dishwasher temperature exceeds 65 °C.



## **Self-cleaning**

Self-cleaning program for hygienic cleaning of the dishwasher tub, spray arms and spray pipes.

This program should be run (with no dishes in the machine) using dishwasher detergent or citric acid. Special dishwasher cleaners are also available on the market. For the removal of limescale deposits, see *Dishwasher tub* in the chapter *Care and cleaning*.

## **▶ □ Start/Stop**

Press ▶ □ until the display shows "Program started, close door". This indicates that the dishwasher is ready to start. Close the door properly, otherwise the dishwasher will not start.

If the dishwasher is not started or the door is not closed within 2 minutes of the last time the control panel was pressed, the machine switches off.

To remote start the dishwasher, see the chapter *ASKO Connect Pro & ConnectLife*.

## **Stopping or changing a program**

If you want to change program after starting the dishwasher, open the door then press and hold ▶ □ for three seconds. Add more detergent if the lid of the detergent dispenser has opened (this happens automatically if an automated dosage system has been connected). Then select a new program, press ▶ □ and close the door.

## **Remaining time**

Once you have chosen a program, the time the program took when last used is displayed.

Once you have started the dishwasher, the display shows the remaining program time. The remaining time is updated during the drying phase.

This may differ somewhat from time to time depending on the temperature of the water supply, the amount of dishes, the ambient temperature and other factors.

<sup>1)</sup> Program button I / II / III.


*To change which pre-selected programs are assigned to the program buttons (I / II / III), select the desired program in the menu and then press and hold the desired program button for five seconds.*

# Using the dishwasher

During the first run of each program, the remaining time displayed can be slightly misleading, as the dishwasher is estimating the time. When you run the program a second time, the dishwasher will calculate the remaining time based on the previous duration of the program.

## Status light floor projection

The remaining time and temperature of the cleaning cycle and whether the machine is locked are projected onto the floor. The colour indicates the current status.

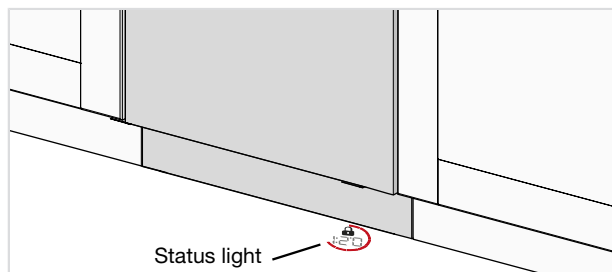

### **Blue - Load more**

The program has started, but you can still load more dishes.

### **Red - Do not load**

You should not load more dishes (risk of poorer dishwashing result).

### **Green - Unload**

The dishwashing program is finished. The status light stays on for 15 minutes.

### **Flashing red**

A flashing light indicates that the door has been opened while a program is in progress. If it flashes when the door is closed, an error has occurred. See the chapter *Troubleshooting*.

### **Flashing blue/green**

The status light flashes blue/green to indicate that remote start is activated.

## If you want to load more dishes<sup>2)</sup>

Open the door. The dishwasher stops automatically. Add the dishes and close the door. After a while, the dishwasher continues the program.

If the dishwashing program was remote started, the interrupted program will continue once the door is closed. You can monitor the dishwasher using the *ConnectLife* app and remote stop the program, although you will not be able to remote start it again.

<sup>2)</sup> You should not load more dishes if the status light is red.

## Power failure

If the dishwasher is turned off due to a power failure when a dishwashing program is running, the program continues when power is restored. If the power is cut during drying, the program is interrupted.

If the dishwashing program was remote started and has not ended, the program will continue once the power is restored. You can monitor the dishwasher using the *ConnectLife* app and remote stop the program, although you will not be able to remote start it again.


If you open the door for more than 2 minutes during drying, the program will be interrupted.

If the dishwasher loses power without Sani lock or Lock activated, the door can be opened manually. Grasp the door high up on both sides and pull straight back towards you.

## Emergency opener

If the dishwasher loses power when Sani lock or Lock is activated, the door can be opened with the emergency opener.

Push the emergency opener into the bottom edge of the door. Pull the emergency opener until the dishwasher door opens. Then refit the emergency opener.

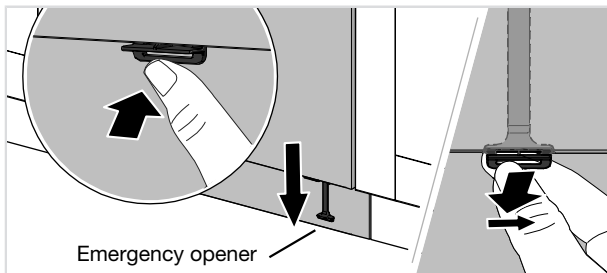

## ⚠ WARNING!

To prevent the risk of burn injuries, wait until the dishwasher has cooled before opening the door with the emergency opener!

Exercise caution! The edges may be sharp. Wear protective gloves!

## Once the program has finished

The end of the program is indicated by one short signal from the buzzer. The chapter *Settings* describes how to change this function.

Moreover, the end of the program is indicated by the status light turning green.

Once the dishwasher door is opened and the program has finished "Program done" appears on the display.

The dishwasher automatically enters standby mode after the program has finished. Shut off the water tap after each use (if required by your insurance company).

## The best drying results

- Fully load the dishwasher.

# Using the dishwasher

- Angle dishes with hollows, such as cups, so that the rinse water will run off. This is also important for plastic items.
- Top up with rinse aid or increase the rinse aid dosage setting.
- Activate the Automatic door opening option.
- Activate the Automatic door opening setting.
- Allow the dishes to cool before unloading the dishwasher.

## Unloading the dishwasher

Hot porcelain is more fragile. Leave the dishes to cool in the dishwasher before unloading them.

Unload the lower basket first to avoid any water drops from the upper basket falling onto the dishes in the lower basket.

| Program                                                                                                                                                                               | Number of prewashes | Main wash | Number of rinses | Final rinse | Consumption values <sup>1)</sup>   |                      |                                    |                      |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|-----------|------------------|-------------|------------------------------------|----------------------|------------------------------------|----------------------|
|                                                                                                                                                                                       |                     |           |                  |             | Cold water <sup>2)</sup>           |                      | Hot water <sup>3)</sup>            | Water cons. (liter)  |
|                                                                                                                                                                                       |                     |           |                  |             | Dishwashing time (approx. hrs:min) | Energy (approx. kWh) | Dishwashing time (approx. hrs:min) | Energy (approx. kWh) |
|  Eco 4),  5)    |                     | 50 °C     | 2                | 48 °C       | 3:15                               | 0.84                 | 3:00                               | 0.5                  |
|  Crystal glass                                                                                     |                     | 45 °C     | 2                | 50 °C       | 1:30                               | 0.8                  | 1:20                               | 0.3                  |
|  Intensive                                                                                         | 2                   | 70 °C     | 2                | 70 °C       | 2:35                               | 1.7                  | 2:25                               | 1.0                  |
|  Quick                                                                                             |                     | ≤60 °C    | 2                | ≤60 °C      | 0:25                               | 0.9                  | 0:17                               | 0.3                  |
|  Rinse and hold                                                                                    |                     |           | 1                |             | 0:07                               | 0.01                 | 0:07                               | 0.01                 |
|  Universal,  5) | 1                   | 60 °C     | 2                | 60 °C       | 2:00                               | 1.2                  | 1:50                               | 0.6                  |
|  Sani                                                                                              | 1                   | 60 °C     | 2                | 85 °C       | 1:10                               | 1.8                  | 1:00                               | 0.9                  |
|  Sani quick                                                                                        | 1                   | 50 °C     | 3                | 85 °C       | 0:45                               | 1.6                  | 0:29                               | 0.8                  |
|  Self-cleaning                                                                                     |                     | 70 °C     | 2                | 85 °C       | 1:05                               | 1.4                  | 1:05                               | 1.0                  |

1) Consumption values vary depending on the temperature of the incoming water, room temperature, load size, selected additional functions and more.

2) Connection to cold water, approx. 15 °C.

3) Connection to hot water, approx. 60 °C.

4) This program is suitable for washing normally soiled dishes and is the most effective program in terms of combined energy and water consumption. This program is used to assess compliance with EU legislation on ecodesign.

5) Option: Auto door open

# ASKO Connect Pro & ConnectLife

## ASKO Connect Pro

ASKO Connect Pro is a web-based platform that enables you to organise, manage and monitor all your professional ASKO appliances regardless of where they are installed. Once you have connected a professional appliance in the ConnectLife app, a link to ASKO Connect Pro is shown. For more information, please see <https://professional.asko.com/>.

## ConnectLife

ConnectLife is a smart home platform that connects people, devices and services. The ConnectLife application includes advanced digital services and carefree solutions that allow users to monitor and control appliances, receive notifications from a smartphone, and update software (supported features may vary depending on your appliance and the region/country in which you are located).

To connect your smart device, you need a home Wi-Fi network (only 2.4 GHz networks are supported) and a smartphone equipped with the application ConnectLife.



To download the ConnectLife application, scan the QR code or search for ConnectLife in your favourite app store.

1. Install the ConnectLife application and create an account.
2. In the ConnectLife application, go to the »Add devices« menu and select the appropriate type of device. Then scan the QR code (it can be found on the serial number plate of the appliance; you can also enter the AUID/SN number manually).
3. The application then guides you through the entire process of connecting the appliance to your smartphone.
4. After a successful connection, the appliance can be operated remotely via the mobile application.

## Remote control the dishwasher

The dishwasher's network symbol  is shown on the display when the dishwasher is paired with a smartphone/tablet. You can use the *ConnectLife* app to monitor the dishwasher and change settings.

### Network symbol on the display

*Flashing 0.5 sec on/off*

The dishwasher is ready to be connected to your wireless network or paired with your smartphone/tablet.

*Flashing 1.0 sec on/off*

The dishwasher is connected to your wireless network.

*Glow*

The dishwasher is connected to your wireless network and the cloud.

## Remote start the dishwasher

To remote start the dishwasher, press **...**. Select Remote start On. Close the door. The status light will flash blue/green to indicate that remote start is activated.

In the *ConnectLife* app, select and start a program.

If the door is not closed within 2 minutes, the machine switches off.

## NOTE!

The dishwasher can always be used without the app. When the dishwasher's control panel is pressed, commands from the *ConnectLife* app are blocked for 10 seconds.

If you have any questions, please visit us at [www.connectlife.io](http://www.connectlife.io).

# Settings

Open the door and press .

To open the Settings, press .



| Settings                                                                                                    | Alternatives                                                                                                                                                  |                                                                                                                                                                                                                                                                                                     |
|-------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Lock</b><br>             | <i>On/Off</i>                                                                                                                                                 | To prevent children or persons with reduced mental capabilities from starting the dishwasher, the Lock setting can be activated.<br>To temporarily deactivate the Lock setting, place your foot over the status light floor projection and open the dishwasher door with the Push to open function. |
| <b>Delayed start</b>                                                                                        | <i>Off/1-24 hours</i>                                                                                                                                         | When you select Delayed start, the dishwasher will start 1-24 hours after you have pressed  and closed the door.<br><i>This Delayed start function is available for some programs.</i>                             |
| <b>Remote start</b>                                                                                         | <i>On/Off</i>                                                                                                                                                 | Activate the setting to be able to remote start the dishwasher. Remote start On is shown on the dishwasher display.<br>Activate the setting each time you want to remote start the dishwasher.<br><i>The setting can be selected with WiFi status Connected.</i>                                    |
| <b>Auto door open</b><br> | <i>Eco On/Off</i><br><i>Crystal glass On/Off</i><br><i>Intensive On/Off</i><br><i>Quick On/Off</i><br><i>Rinse and hold On/Off</i><br><i>Universal On/Off</i> | The dishwasher door opens automatically, which shortens the program time and improves the drying results. Wait until the dishwasher indicates that the program has ended and the dishes have cooled before unloading the dishwasher.                                                                |

| Settings                             | Alternatives                                                              |                                                                                                                                                                                                                                                                              |
|--------------------------------------|---------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Auto dose</b>                     | Detergent:<br><i>Off, 1-40 ml</i>                                         | Activate this setting if you want to connect an automatic dosing system for detergent.<br><br>This dishwasher is fitted with a water softener, so use detergent and rinse aid doses suitable for soft water.<br><br><i>The exact dosage depends on the selected program.</i> |
|                                      | Rinse aid:<br><i>Off, 1-40 ml</i>                                         | Activate this setting if you want to connect an automatic dosing system for rinse aid.<br><br><i>The exact dosage depends on the selected program.</i>                                                                                                                       |
| <b>Vent the hose</b>                 | Select Detergent.<br>Press ► □ to activate.<br>Close the dishwasher door. | Activate Vent the hose to dispense detergent into the hose.<br><br>The dishwasher dispenses the detergent for 30 seconds.                                                                                                                                                    |
|                                      | Select Rinse aid.<br>Press ► □ to activate.<br>Close the dishwasher door. | Activate Vent the hose to dispense rinse aid into the hose.<br><br>The dishwasher dispenses the rinse aid for 30 seconds.                                                                                                                                                    |
| <b>TAB</b><br>(All-in-one detergent) | On/Off                                                                    | Activate this setting when using an all-in-one detergent that contains rinse aid.<br><br><i>This setting reduces the rinse aid dosage and affects how often the dishwasher's built-in softener is regenerated.</i>                                                           |
| <b>Feedback volume</b>               | 0/1/2/3                                                                   | A beep confirms that the control panel has been pressed.                                                                                                                                                                                                                     |
| <b>Exit</b>                          |                                                                           | Select <i>Exit</i> to exit the menu for Settings, press ●●.                                                                                                                                                                                                                  |

# Settings

To open the Advanced Settings, press < or > until Advanced Settings is shown on the display and confirm your selection with ...

Press: I, II, I, III

| Advanced Settings          | Alternatives                                                                                                                                                                                                                                                                                                                                                                                                                  |                                                                                                                                                                                                                                                                                                                     |
|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Language</b>            | You can choose the language used for the display.                                                                                                                                                                                                                                                                                                                                                                             |                                                                                                                                                                                                                                                                                                                     |
| <b>WiFi</b><br>WiFi status | The current WiFi status is shown on the display.<br>Connect the dishwasher to your wireless network to be able to remote control the dishwasher using the <i>ConnectLife</i> app.                                                                                                                                                                                                                                             |                                                                                                                                                                                                                                                                                                                     |
| WiFi connection            | <i>On/Off</i><br>After connecting the dishwasher to your local network, you can select <i>WiFi connection Off</i> to deactivate the connection. Select <i>WiFi connection On</i> to reconnect to the same network.                                                                                                                                                                                                            |                                                                                                                                                                                                                                                                                                                     |
| Connection setup           | Connect the dishwasher to your wireless network and pair with your smartphone/tablet. <ul style="list-style-type: none"> <li>In the ConnectLife application, go to the »Add devices« menu and select the appropriate type of device. Then scan the QR code (it can be found on the serial number plate of the appliance; you can also enter the AUID/SN number manually).</li> <li>Select <i>Connection setup</i>.</li> </ul> |                                                                                                                                                                                                                                                                                                                     |
| Add device                 | Pair more devices/users with the dishwasher. <ul style="list-style-type: none"> <li>In the ConnectLife application, go to the »Add devices« menu and select the appropriate type of device. Then scan the QR code (it can be found on the serial number plate of the appliance; you can also enter the AUID/SN number manually).</li> <li>Select <i>Add device</i>.</li> </ul>                                                |                                                                                                                                                                                                                                                                                                                     |
| Remove all devices         | Select <i>Remove all devices</i> to remove all connected devices/users.                                                                                                                                                                                                                                                                                                                                                       |                                                                                                                                                                                                                                                                                                                     |
| WiFi factory reset         | Select <i>WiFi factory reset</i> to restore the default factory settings.                                                                                                                                                                                                                                                                                                                                                     |                                                                                                                                                                                                                                                                                                                     |
| Exit                       | Select <i>Exit</i> to exit the menu for WiFi, press ...                                                                                                                                                                                                                                                                                                                                                                       |                                                                                                                                                                                                                                                                                                                     |
| <b>Select programs</b>     | Eco <i>On/Off</i><br>Crystal glass <i>On/Off</i><br>Intensive <i>On/Off</i><br>Quick <i>On/Off</i><br>Rinse and hold <i>On/Off</i><br>Universal <i>On/Off</i><br>Sani <i>On/Off</i><br>Sani quick <i>On/Off</i><br>Self-cleaning <i>On/Off</i>                                                                                                                                                                                | Programs can be shown or hidden in the menu. Choose between On and Off.<br>(Eco cannot be hidden in the menu.)<br>To change which pre-selected programs are assigned to the program buttons (I/II/III), select the desired program in the menu and then press and hold the desired program button for five seconds. |

| Advanced Settings              | Alternatives               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|--------------------------------|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Display Logotype</b>        | <i>On/Off</i>              | Setting to hide the logo shown on the display.                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Display Brightness</b>      | <i>1/2/3/4</i>             | For adjusting the brightness of the display.                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Notification volume</b>     | <i>0/1/2/3</i>             | The buzzer indicates when a dishwashing program has ended.<br><i>Error messages are always indicated by a loud buzzer.</i>                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Rinse aid</b> <sup>3)</sup> | <i>0/1/2/3/4/5</i>         | Setting for rinse aid dosage. The rinse aid dispenser can be adjusted between 0 (Off) and 5 (High dosage).<br>Increase the rinse aid dosage: <ul style="list-style-type: none"> <li>• If the dishes have water marks.</li> </ul> Decrease the rinse aid dosage: <ul style="list-style-type: none"> <li>• If the dishes have a sticky white/blue film.</li> <li>• If the dishes are streaked.</li> <li>• Build-up of foam. If you have very soft water, the rinse aid can be diluted 50:50 with water.</li> </ul> |
| <b>Water hardness</b>          | <i>0/1/2/3/4/5/6/7/8/9</i> | Adjusting the water softener. Select a setting depending on the hardness of the water supply. It is important that this setting is correct!<br><i>See Water hardness in the chapter Before washing for the first time.</i><br>For a water supply with a hardness above 5 °dH (9 °fH / 6 °eH / 0.9 mmol/l), fill with salt.<br><i>For a water supply with a hardness below 6°dH (10°fH / 7°eH / 1.0 mmol/l), select 0. The water softener is deactivated and no salt needs to be added.</i>                       |

<sup>3)</sup> The setting will be deactivated following the activation of automated dosage of commercial rinse aid. Rinse aid will not then need to be refilled.

# Settings

| Advanced Settings                         | Alternatives  |                                                                                                                                                                                                                                                                                                                                                          |
|-------------------------------------------|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Push to open</b>                       | <i>On/Off</i> | The dishwasher door can be opened without a handle.                                                                                                                                                                                                                                                                                                      |
| <b>Power</b>                              | 10 A/16 A     | <p>This dishwasher has been designed to be able to be connected to an electrical supply network with fuses for 10 A or 16 A.</p> <p>The water in the dishwasher will be heated more quickly, and the dishwashing program will run more quickly, if you select 16 A. Select 10 A or 16 A according to the electrical supply network in your property.</p> |
| <b>Interior light at power off</b>        | <i>On/Off</i> | Select whether the interior light is to be switched on when the dishwasher is turned off and the door is opened. (If  is turned on, the interior light is always switched on when the door is opened.)                                                                  |
| <b>Single color projection</b>            | <i>On/Off</i> | The status light can use 3 colours or white light only.                                                                                                                                                                                                                                                                                                  |
| <b>Failure readout</b>                    |               | <p>Any error messages.</p> <p><i>When contacting your service centre, you may be asked to provide the most recent error messages.</i></p>                                                                                                                                                                                                                |
| <b>Temperature unit</b>                   | <i>°C/°F</i>  | Temperatures can be displayed in °C (Celsius) or °F (Fahrenheit).                                                                                                                                                                                                                                                                                        |
| <b>Block start when softener is empty</b> | <i>On/Off</i> | <p>Setting to prevent a dishwashing program from starting when the salt compartment is empty.</p> <p><i>This setting is not active if Water hardness is set to 0.</i></p>                                                                                                                                                                                |
| <b>Factory reset</b>                      |               | <p>Restores all settings to the factory defaults.</p> <p>Select Factory reset and press .</p>                                                                                                                                                                         |
| <b>Exit</b>                               |               | Select <i>Exit</i> to exit the menu for Settings, press  .                                                                                                                                                                                                            |

## ✳ Top up rinse aid

When the rinse aid needs topping up, the symbol lights on the display.

See the chapter *Before washing for the first time*.

## ⚙ Top up salt

When the salt needs topping up, the symbol lights on the display. (You can run 3 programs before the compartment is completely empty.)

See the chapter *Before washing for the first time*.

## 💧 Top up auto dose


When the dishwasher detergent or rinse aid needs topping up, the symbol lights on the display.

See *Automated dosage* in the chapter *Before washing for the first time*.

## Clean the filters

### Coarse filter

The coarse filter traps larger food particles, which cannot get past the drainage pump. Empty the coarse filter when necessary. It should be cleaned at regular intervals depending on how often the dishwasher is used.

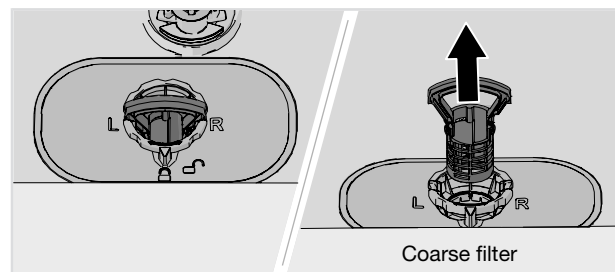


1. Lift the coarse filter by the handle.
2. Empty the coarse filter.
3. Refit the coarse filter. Press it down until it clicks into place.

# Care and cleaning

## Fine filter

Debris that collects on the fine filter is automatically rinsed away during each wash. Clean the fine filter when necessary. It should be cleaned at regular intervals depending on how often the dishwasher is used.

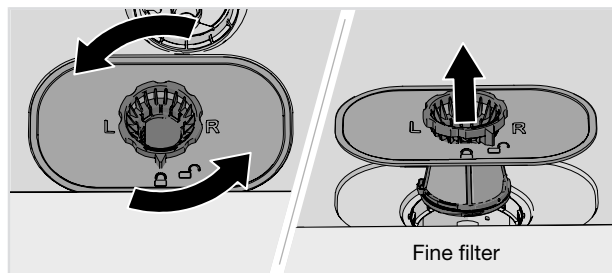


1. Turn the locking ring anticlockwise and lift the fine filter straight up.
2. Clean the fine filter.
3. Refit the fine filter and turn the locking ring clockwise to its stop position. Check that the edges seal properly.

Remember to refit the coarse filter!


## NOTE!

Dishwashing results may be affected if the coarse and fine filters are incorrectly fitted. The dishwasher must not be used without the filters in place!

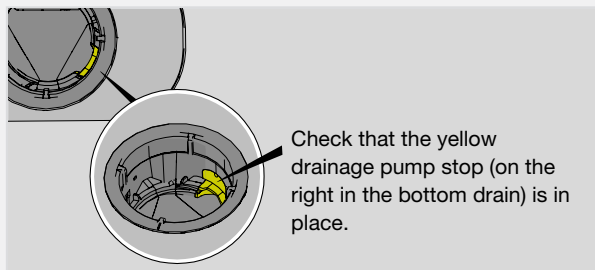

## Cleaning the spray arms and spray pipes


Holes and bearings can sometimes become blocked. Remove any debris using a pin or the like. The spray arms also have holes underneath.

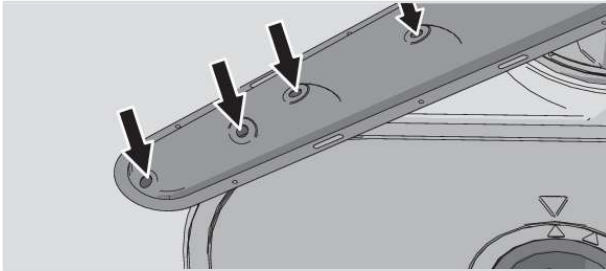

To facilitate cleaning you can remove the spray arms. Remember to fit them firmly back into place afterwards.


### Top spray arm

- Push up on the top spray arm while turning it anticlockwise to release it.

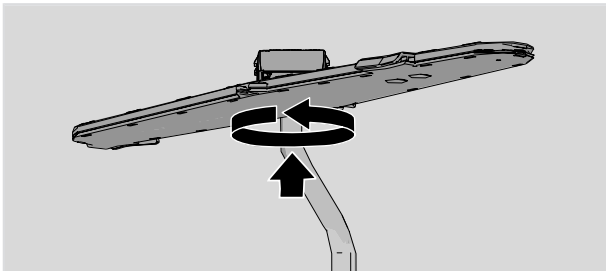

### Upper spray arm


- Pull out the upper basket.
- Unscrew the spray arm bearings anticlockwise to remove the spray arm from the upper basket.

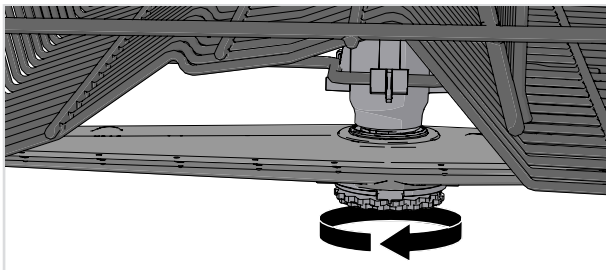

### Lower spray arm

- Pull the lower spray arm straight up to release it.

# Care and cleaning

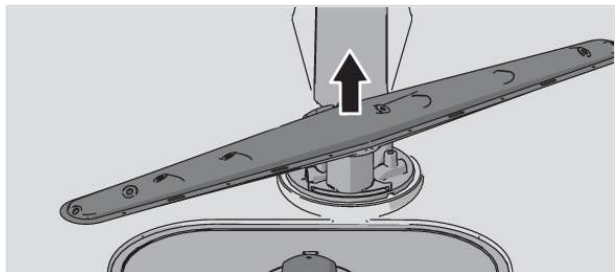

## Clean the outside of the dishwasher

### Door and door seal

Open the door. Clean the sides of the door and the door seal regularly with a slightly damp cloth. Clean the door seal at the lower front edge of the dishwasher with a washing-up brush.

### Control panel

Keep the control panel clean. If necessary, wipe it with a dry or slightly damp cloth. Never use cleaning products – they may scratch the surface.

### WARNING!

Do not clean the machine using a water jet, pressure washer or a steam cleaner.

## Run Self-cleaning

### Dishwasher tub

The dishwasher tub is made of stainless steel and is kept clean through normal use (when used regularly).

If you have hard water, limescale deposits may build up in the dishwasher. If this happens, run the Self-cleaning program with two tablespoons of citric acid in the detergent compartment (with no dishes in the machine). Special dishwasher cleaners are also available on the market.

For the best results when using citric acid, deactivate the automated dosage of commercial detergent. See the *Settings* chapter.


## Remove blockages

### Unblocking the drainage pump

If the dishwasher still contains water after the program has finished, something may be blocking the drainage pump, which results in the error message Water outlet fault or BLDC drain pump fault.

1. Turn off the machine using  and remove the plug from the wall socket.
2. Remove the coarse filter and the fine filter.
3. Scoop out the water from the dishwasher tub.
4. In order to inspect the drainage pump, remove the yellow drainage pump stop on the right in the bottom drain. (Use a pair of pliers if necessary.)
5. Turn the pump wheel located behind the drainage pump stop by hand. Carefully remove any sharp items, such as glass.

6. Refit the drainage pump stop along with the fine and coarse filters.
7. Plug the machine in again.

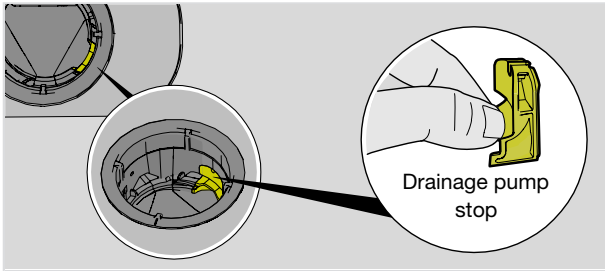


## NOTE!

Do not forget to refit the drainage pump stop.

### Unblocking the inlet hose filter

If the water supply contains small particles, the outer filter on the inlet hose may become blocked, which results in the Water inlet fault error message.

1. Turn off the machine using  $\text{⏻}$  and remove the plug from the wall socket.
2. Turn off the water tap.
3. Unscrew the inlet hose.
4. Carefully remove the outer filter from the inlet hose and clean it.
5. Refit the filter and check that the gasket is correctly positioned.
6. Screw the inlet hose firmly into place.
7. Plug the machine into the wall socket and turn on the water tap. Allow the pressure to settle for a while and check that the connection is watertight.

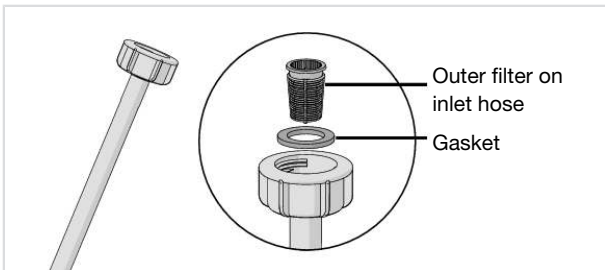

### Winter storage/Transport

Store the dishwasher above freezing temperature and avoid long transport distances in very cold weather. Transport the dishwasher upright or laying on its back.

Handle the front corners of the dishwasher with care so that they do not get bent, which can affect door opening.

## Care and cleaning

Before transporting a used dishwasher, or before prolonged storage, water must first be removed from the machine.

| Error messages |                        | Action                                                                                                                                                                                                                                            |
|----------------|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>F10</b>     | Overfilling water 1    | Unblocking the drainage pump. See the chapter <i>Care and cleaning</i> . If the problem persists, contact your nearest service centre.                                                                                                            |
| <b>F11</b>     | Water outlet fault     | See "Water remains in the dishwasher" under "Problem" in the table below. If the problem persists, contact your nearest service centre.                                                                                                           |
| <b>F12</b>     | Water inlet fault 1    | Check that the water tap is on. Check that the outer filter on the inlet hose is not blocked. See <i>Unblocking the inlet hose filter</i> in the chapter <i>Care and cleaning</i> . If the problem persists, contact your nearest service centre. |
| <b>F40</b>     | Inlet valve leakage    | Turn off the water tap and contact your nearest service centre.                                                                                                                                                                                   |
| <b>F41</b>     | Heater fault 1         | Turn off the water tap. Remove the plug from the wall socket and contact your nearest service centre.                                                                                                                                             |
| <b>F46</b>     | Heater fault 2         | Turn off the water tap. Remove the plug from the wall socket and contact your nearest service centre.                                                                                                                                             |
| <b>F52</b>     | Water level fault      | Clean the coarse and fine filters. Check that the outer filter on the inlet hose is not blocked. If the problem persists, contact your nearest service centre.                                                                                    |
| <b>F54</b>     | Overfilling water 2    | Turn off the water tap and contact your nearest service centre.<br>To avoid water leakage outside the dishwasher, do not remove the plug from the wall socket until the water tap on the supply line has been turned off!                         |
| <b>F56</b>     | Circulation pump fault | Run any dishwashing program. If the problem persists, contact your nearest service centre.                                                                                                                                                        |
| <b>F67</b>     | Water inlet fault 2    | Check that the water tap is on. Check that the outer filter on the inlet hose is not blocked. See <i>Unblocking the inlet hose filter</i> in the chapter <i>Care and cleaning</i> . If the problem persists, contact your nearest service centre. |
| <b>F68</b>     | BLDC drain pump fault  | See "Water remains in the dishwasher" under "Problem" in the table below. If the problem persists, contact your nearest service centre.                                                                                                           |
| <b>F70</b>     | Lock fault             | Close the dishwasher door. If the problem persists, contact your nearest service centre.                                                                                                                                                          |
| <b>F76</b>     | Sani lock fault        | Run any dishwashing program. If the problem persists, contact your nearest service centre.                                                                                                                                                        |

Press any button to clear the error message.

# Troubleshooting

## General

| Problem                                        | Possible causes                                                                                                 | Action                                                                                                                                                                                         |
|------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The control panel does not react when pressed. | You have pressed the control panel too soon after opening the door.                                             | Wait a moment then try again.                                                                                                                                                                  |
|                                                | Lock is activated.                                                                                              | See the chapter <i>Safety instructions</i> .                                                                                                                                                   |
|                                                | The door is closed.                                                                                             | Open the door. The control panel only reacts to use when the door is open.                                                                                                                     |
|                                                | Dirt on the control panel.                                                                                      | Clean with a dry or slightly damp cloth.                                                                                                                                                       |
|                                                | The control panel requires calibration.                                                                         | Turn off the water tap. Remove the plug from the wall socket and wait for 60 seconds. Then plug the appliance back into the wall socket and turn on the water tap.                             |
| Cannot close door.                             | The baskets are not correctly positioned.                                                                       | Check that the baskets are correctly positioned horizontally, and that the middle basket's water connector is in line with its spray pipe.                                                     |
|                                                |                                                                                                                 | Check that the dishes are not blocking the baskets from sliding properly into place.                                                                                                           |
|                                                | The door lock does not click into place and lock.                                                               | Open the door. Press and hold II and ●●● until "Auto door open recovery" is shown on the display, wait until the message disappears. Close the door, then check that the door lock is working. |
| The door cannot be opened.                     | Lock is activated.                                                                                              | See the chapter <i>Safety instructions</i> .                                                                                                                                                   |
|                                                | To prevent the risk of burn injuries, the door cannot be opened while the dishwasher temperature exceeds 65 °C. | Wait until the dishwasher indicates that the program has ended and the dishes have cooled before unloading the dishwasher.                                                                     |
|                                                | The dishwasher is/has been powerless while Sani lock or Lock is/has been activated.                             | See <i>Power failure</i> in the chapter <i>Using the dishwasher</i> or contact your nearest service centre.                                                                                    |

| Problem                        | Possible causes                                                | Action                                                                                                                                                                                         |
|--------------------------------|----------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The dishwasher does not start. | ▶ □ has not been pressed.                                      | Press ▶ □ until the display shows "Program started, close door".                                                                                                                               |
|                                | The door is not properly closed.                               | Check.                                                                                                                                                                                         |
|                                | Salt compartment empty.                                        | Top up with salt. See the chapter <i>Care and cleaning</i> .                                                                                                                                   |
|                                | The dishwasher has been opened while a program is in progress. | Close the door and wait. After a while, the dishwasher continues the program.                                                                                                                  |
|                                | The door lock has not clicked into place and locked.           | Open the door. Press and hold II and ●●● until "Auto door open recovery" is shown on the display, wait until the message disappears. Close the door, then check that the door lock is working. |
|                                | The plug is not plugged into the wall socket.                  | Check.                                                                                                                                                                                         |
|                                | A fuse/circuit breaker has been tripped.                       | Check.                                                                                                                                                                                         |

# Troubleshooting

| Problem                             | Possible causes                                                                                                                            | Action                                                                                                                                                              |
|-------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The dishes are not clean.           | The spray arms are not rotating freely.                                                                                                    | Check that the dishes are not blocking the spray arms.                                                                                                              |
|                                     | Spray arm holes or bearings blocked.                                                                                                       | Clean the spray arms and the middle basket's spray pipes. See the chapter <i>Care and cleaning</i> .                                                                |
|                                     | Unsuitable dishwashing program.                                                                                                            | Select a program with a high temperature to dissolve grease on very dirty dishes, such as Intensive.                                                                |
|                                     | Incorrect detergent dosage.                                                                                                                | Dose according to water hardness. Far too much or far too little detergent results in poorer dishwashing results.                                                   |
|                                     | Old detergent. Detergent is a perishable product.                                                                                          | Avoid large packages.                                                                                                                                               |
|                                     | Dishes loaded incorrectly.                                                                                                                 | Do not cover porcelain with large bowls or the like. Avoid placing very tall glasses in the corners of the baskets. See the chapter <i>Loading the dishwasher</i> . |
|                                     | Glasses and cups have toppled over during the program.                                                                                     | Place dishes to sit steady.                                                                                                                                         |
|                                     | The filters are clogged.                                                                                                                   | Clean the coarse and fine filters.                                                                                                                                  |
|                                     | The filters are not fitted correctly.                                                                                                      | Check that the filters are fitted correctly. See the chapter <i>Care and cleaning</i> .                                                                             |
|                                     | Drainage pump stop missing.                                                                                                                | Check that the yellow drainage pump stop (on the right in the bottom drain) is in place. See the chapter <i>Care and cleaning</i> .                                 |
| Spots on stainless steel or silver. | Some foodstuffs, such as mustard, mayonnaise, lemon, vinegar, salt and dressings, can cause spots on stainless steel if left for too long. | Rinse off these types of foodstuffs if not starting the dishwasher immediately. Use the Rinse and hold program.                                                     |
|                                     | All stainless steel can cause spots on silver if they come into contact during dishwashing. Aluminium can also cause spots on dishes.      | In order to avoid marks and tarnishing, separate dishes made from different metals, such as silver, stainless steel and aluminium.                                  |

| Problem                                                           | Possible causes                                                                                                                      | Action                                                                                                                                                                                                            |
|-------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Spots or films on the dishes.                                     | Incorrect rinse aid dosage setting.                                                                                                  | See the chapter <i>Settings</i> .                                                                                                                                                                                 |
|                                                                   | The setting TAB is activated and all-in-one detergent with insufficient drying effect is being used.                                 | Switch all-in-one detergents or deactivate the setting TAB and top up with salt and separate rinse aid. See Rinse aid in the chapter <i>Settings</i> .                                                            |
|                                                                   | Incorrect water softener setting.                                                                                                    | See Water hardness in the chapter <i>Settings</i> .                                                                                                                                                               |
|                                                                   | The water softener is leaking salt.                                                                                                  | Check that the salt compartment lid is tightened clockwise to its end position. Otherwise contact your nearest service centre.                                                                                    |
|                                                                   | Too high temperature and/or too much detergent can cause etching on crystal. Unfortunately, this cannot be repaired, only prevented. | Wash crystal at a low temperature and with a conservative amount of detergent. Contact the detergent manufacturer.                                                                                                |
| The dishes have a sticky white/blue film.                         | Rinse aid dosage setting too high.                                                                                                   | Reduce the dosage. See the chapter <i>Settings</i> . If you have very soft water, you may want to dilute the rinse aid 50:50 with water.                                                                          |
| Spots left after washing.                                         | Lipstick and tea/coffee stains can be difficult to remove.                                                                           | Use a detergent with a bleaching agent.                                                                                                                                                                           |
| Detergent residue in the detergent compartment after dishwashing. | The detergent compartment was damp when adding detergent.                                                                            | The detergent compartment must be dry when adding detergent.                                                                                                                                                      |
|                                                                   | The detergent compartment has been blocked.                                                                                          | Check that the dishes are not preventing the detergent compartment from opening.                                                                                                                                  |
| Rattling sound when dishwashing.                                  | The dishes are not correctly placed or the spray arms are not rotating freely.                                                       | Check that the dishes are placed securely. Spin the spray arms to make sure they can rotate.                                                                                                                      |
| "Block start when softener is empty" is shown on the display.     | Salt compartment empty.                                                                                                              | Top up with salt. See the chapter <i>Care and cleaning</i> . (The setting to prevent a dishwashing program from starting when the salt compartment is empty can be deactivated. See the <i>Settings</i> chapter.) |

# Troubleshooting

| Problem                            | Possible causes                                                     | Action                                                                                                                                                                                                                    |
|------------------------------------|---------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Water remains in the dishwasher.   | The filters are clogged.                                            | Clean the coarse and fine filters.                                                                                                                                                                                        |
|                                    | The filters are not fitted correctly.                               | Check that the filters are fitted correctly. See the chapter <i>Care and cleaning</i> .                                                                                                                                   |
|                                    | Debris in the drainage pump.                                        | Clean the drainage pump. See the chapter <i>Care and cleaning</i> .                                                                                                                                                       |
|                                    | Drainage pump stop missing.                                         | Check that the yellow drainage pump stop (on the right in the bottom drain) is in place. See the chapter <i>Care and cleaning</i> .                                                                                       |
|                                    | Kink in drainage hose.                                              | Check that the hose is free from kinks and sharp bends.                                                                                                                                                                   |
|                                    | Blocked drainage hose.                                              | Disconnect the drainage hose where it connects to the sink unit's water trap. Check that no debris has fastened and that the connection has an inner diameter of at least 14 mm.                                          |
| Bad odour in dishwasher.           | Dirt around the seals and in corners.                               | Clean with washing-up brush and low foaming cleaner.                                                                                                                                                                      |
|                                    | Low temperature programs have been selected for a prolonged period. | Run a program with a high temperature once or twice a month. Or run a self-cleaning program. See Self-cleaning in the chapter <i>Using the dishwasher</i> .                                                               |
| Grease deposits in the dishwasher. | Low temperature programs have been selected for a prolonged period. | Select a program with a high temperature to dissolve grease on very dirty dishes, such as Intensive. Or run a self-cleaning program once or twice a month. See Self-cleaning in the chapter <i>Using the dishwasher</i> . |


| Problem                        | Possible causes                                                                                      | Action                                                                                                                                                 |
|--------------------------------|------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| The dishes are not dry enough. | The Automatic door opening setting has not been activated.                                           | Activate the Automatic door opening setting.                                                                                                           |
|                                | The dishwasher is not fully loaded.                                                                  | Fully load the dishwasher.                                                                                                                             |
|                                | Rinse aid needs topping up or dosage is set too low.                                                 | Top up with rinse aid or increase the rinse aid dosage setting.                                                                                        |
|                                | The setting TAB is activated and all-in-one detergent with insufficient drying effect is being used. | Switch all-in-one detergents or deactivate the setting TAB and top up with salt and separate rinse aid. See Rinse aid in the chapter <i>Settings</i> . |

# Troubleshooting

## WiFi

| Problem                                                                                                                                           | Possible causes                                                                                                   | Action                                                                                                                                                                          |
|---------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The dishwasher's network symbol  does not appear on the display. | The dishwasher is not connected to your wireless network.                                                         | Connect the dishwasher to your wireless network. See the chapter <i>ASKO Connect Pro &amp; ConnectLife</i> .                                                                    |
|                                                                                                                                                   | WiFi connection is deactivated.                                                                                   | Activate WiFi connection. See WiFi connection <i>On/Off</i> in the chapter <i>Settings</i> .                                                                                    |
| Connection setup failed                                                                                                                           | The dishwasher cannot access your wireless network. Or the router is not connected to the internet.               | Check that the router is connected to the internet.                                                                                                                             |
|                                                                                                                                                   |                                                                                                                   | Make sure your wireless network is using 2.4 GHz and is visible. Try moving the router closer to the dishwasher if the signal is too weak.                                      |
|                                                                                                                                                   |                                                                                                                   | See also troubleshooting at <a href="http://www.connectlife.io">www.connectlife.io</a> . If the problem persists, contact your nearest service centre.                          |
| Add device failed                                                                                                                                 | Your smartphone/tablet is not connected to your wireless network. Or the router is not connected to the internet. | Check that the router is connected to the internet.                                                                                                                             |
|                                                                                                                                                   |                                                                                                                   | Check that your smartphone/tablet is connected to your wireless network.                                                                                                        |
|                                                                                                                                                   |                                                                                                                   | See also troubleshooting at <a href="http://www.connectlife.io">www.connectlife.io</a> . If the problem persists, contact your nearest service centre.                          |
| The dishwasher is shown as disconnected in the <i>ConnectLife</i> app.                                                                            | WiFi connection is deactivated.                                                                                   | Activate WiFi connection. See WiFi connection <i>On/Off</i> in the chapter <i>Settings</i> .                                                                                    |
|                                                                                                                                                   |                                                                                                                   | See also troubleshooting at <a href="http://www.connectlife.io">www.connectlife.io</a> . If the problem persists, contact your nearest service centre.                          |
| Software update failed.                                                                                                                           | The network connection was lost or the dishwasher lost power due to a power failure.                              | Make sure that the power supply is not interrupted and that the network connection is stable before trying again. If the problem persists, contact your nearest service centre. |

It is important that you read through and follow the instructions and directions below. Other directions for installation and connection can be found in the separate installation instructions.

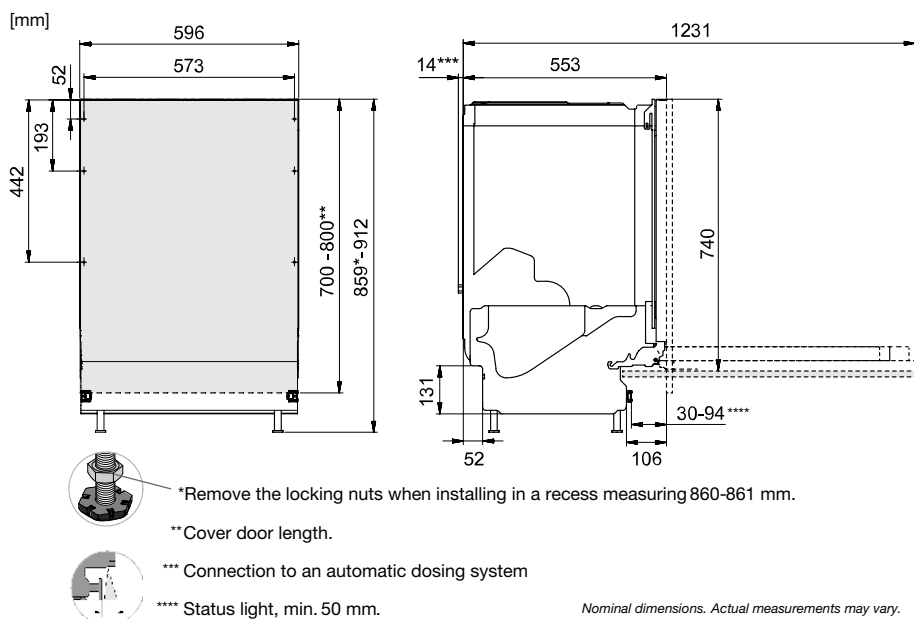

## Safety instructions

- Connections to electricity, water and drainage must be performed by a qualified professional.
- Always follow applicable regulations for water, drainage and electricity.
- Take care during installation! Wear protective gloves! There must always be two people!
- Place a drip tray on the floor beneath the dishwasher to prevent damage from any water leaks.
- Before fastening the dishwasher, test the dishwasher by running the Rinse and hold program. Check that the dishwasher fills with water and drains. Check also that none of the connections leak.

### WARNING!

The ventilation opening in the lower part of the door must not be blocked by a rug, carpet or similar furnishing.

### WARNING!

Turn off the water supply when installing the dishwasher!

During installation and the performance of any maintenance work, the plug must be removed from the wall socket, or the wall socket's power supply must be disconnected!

# Installation

## Setup

- The recess and connection dimensions are included in the separate installation instructions. Check that all dimensions are correct before starting the installation. Note that the height of the cover door can be adjusted to match other fittings.
- Handle the front corners of the dishwasher with care so that they do not get bent, which can affect door opening.
- Make sure the area on which the dishwasher is to be installed is firm. Adjust the adjustable feet so that the dishwasher is level. Tighten the lock nuts.
- If the dishwasher is built-in the surrounding furnishings must be resistant to any condensation from the dishwasher.
- Mount the protective film beneath the worktop and up around the edge. The function of the protective film is to protect the worktop from moisture. (The protective film is in the enclosed plastic bag.)
- Check that the machine is installed such that the door opens freely, otherwise door lock functionality may be disrupted.
- Note that the door springs may need adjusting after a cover door has been fitted. Adjust the left and right door springs equally until the door is evenly balanced.


## Connection to an automatic dosing system

The dishwasher can be connected to one or more systems for the automated dosage of commercial detergent and rinse aid, which simplifies everyday operation and reduces the risk of overdosing.

Connection to a system for automated dosage must be performed by the supplier of the system or by somebody with an equivalent professional qualification.

### WARNING!

Danger of contact with high voltage! Remove the plug from the wall socket.

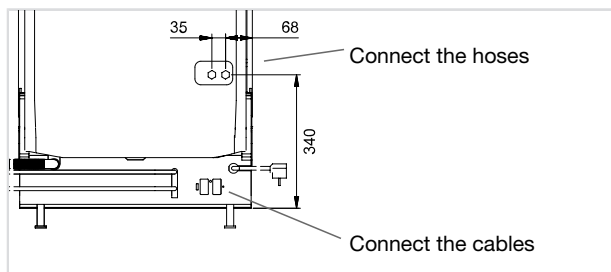


### Connect the cables


Connect the external cables for automated dosage to the back of the dishwasher.

The length of the external cables must not exceed 3.0 m.


1. Loosen the screw to remove the protective cover.

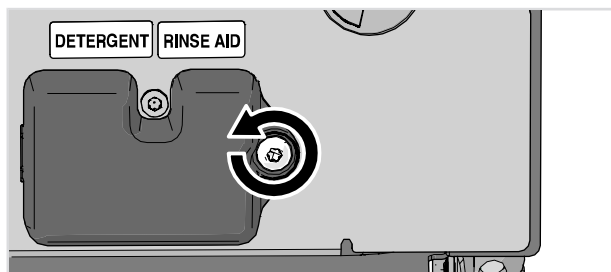

2. Connect the external cables for detergent to the auto dose connector.

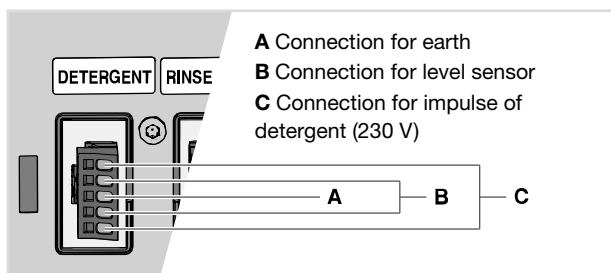

3. Connect the external cables for rinse aid to the auto dose connector.

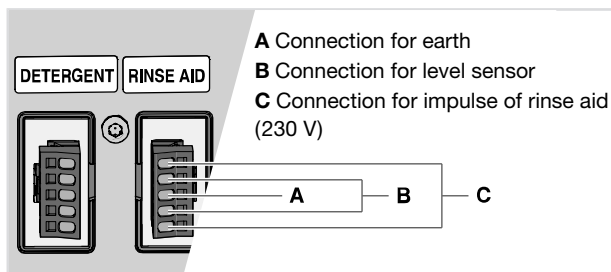

## Accessory


Buy an accessory kit, with nipples and hoses, for the connection to an automatic dosing system. Accessories can be purchased where you bought the dishwasher.

## Connect the hoses


Connect the hoses for automated dosage at the back of the dishwasher.

1. Remove plugs.


# Installation

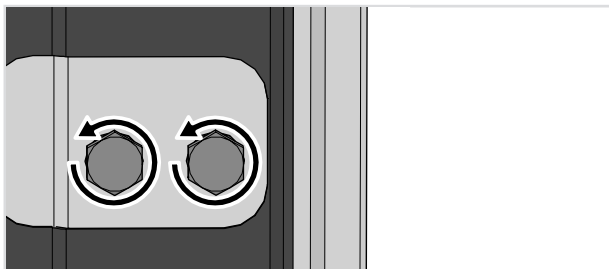

2. Attach the nipple and connect the hose for detergent.

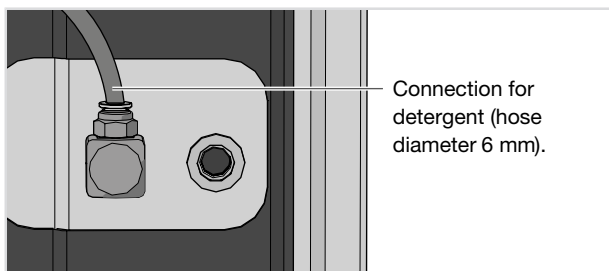

3. Attach the nipple and connect the hose for rinse aid.

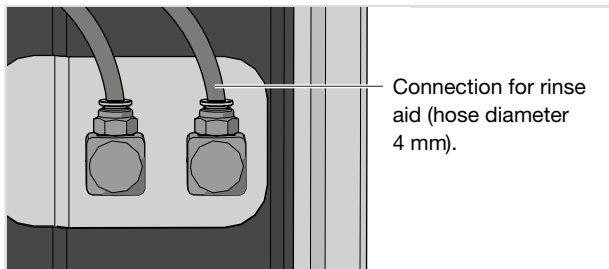

- Activate Auto dose. See the chapter *Settings*.
- Use the Vent the hose function to vent the system.

## WARNING!

Note that there are risks involved in handling commercial detergent and rinse aid. Protective gloves and goggles must be used when handling these products.

Follow the supplier's safety regulations concerning the handling and storage of detergent and rinse aid.

## WARNING!

Always install protective caps and plugs when disconnecting a system for automated dosage.

## Drainage connection

This dishwasher is suitable for installing in a raised recess (to attain an ergonomic working height). This means that the dishwasher can be placed so that the drainage hose runs to a lower level than the bottom of the dishwasher, such as by routing it directly to a floor drain.

The drainage hose can also be connected to a connection nipple on the sink unit's water trap. The connection nipple must have an internal diameter of at least 14 mm.

The drainage hose may be extended by a maximum of 2.5 m (the total length of the drainage hose must not exceed 4.5 m). Any joints and connecting pipes must have an internal diameter of at least 14 mm.

No part of the drainage hose may be more than 950 mm above the bottom of the dishwasher.

Attach the drainage hose with a hose clamp. Ensure that the drainage hose has no kinks.

## Connection to water supply

The dishwasher can be connected to hot (max. 70 °C) and/or cold water. The dishwasher adjusts automatically to the connected water in order to achieve the best dishwashing result. To achieve optimal short dishwashing time, the dishwasher should be connected to hot water.

The dishwasher comes with an extra inlet hose (packed inside dishwasher) to connect hot and cold water. Use only the fitted inlet hose and the enclosed inlet hose. Do not reuse old or other odd hoses.


The supply pipe must be fitted with a water tap (stopcock). The water tap must be easily accessible, so that the water can be shut off if the dishwasher has to be moved.

The water pressure must be between 0.1-1.0 MPa. To achieve optimal short dishwashing time, the water pressure must be at least 0.2 MPa.

Once the installation is complete, turn on the water tap and allow the pressure to settle for a while. Check that all connections are watertight.

### Connect an extra inlet hose


1. Loosen the screws to remove the protective cover.
2. Remove the plug.

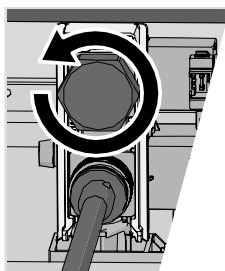

*(The connection must be sealed with a plug when not in use.)*

3. Fit the enclosed inlet hose.

# Installation

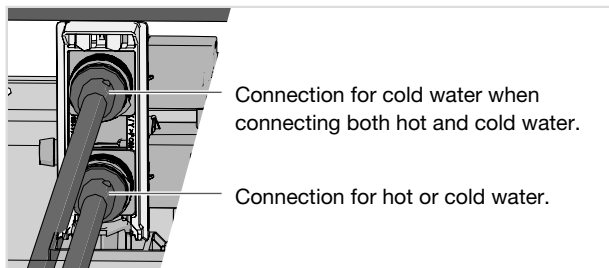

4. Refit the protective cover.

## Electrical connection

Information about the electrical connection can be found on the serial number plate. This specification must match the electricity supply.


The dishwasher must be connected to an earthed socket.

The electric wall socket must be placed outside of the installation area to be easily accessible after installing the dishwasher. Do not use an extension cord!

The dishwasher must be connected to residual current devices as per the relevant safety regulations.

## Push to open

The dishwasher door can be opened without a handle.

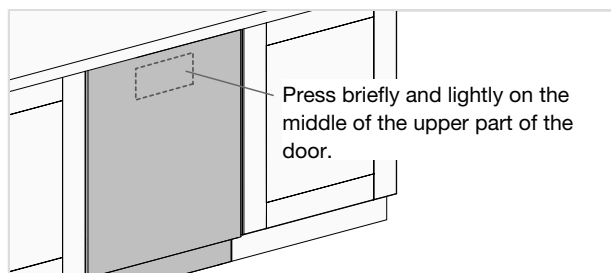

## NOTE!

The door can be opened manually if the dishwasher is not connected to the electrical supply. Grasp the door on both sides at the top and pull it straight out.

## Information about your product

There is a QR code on the serial number plate. Scan the code to view information about your product.

## Contact your nearest service centre

Read the chapter *Troubleshooting* before contacting the service centre. If you have encountered a problem that you cannot resolve, please contact your nearest service centre for professional help, see [www.asko.com](http://www.asko.com). Our website also has information about spare part availability and what you can repair yourself.

When making contact, provide the details on the serial number plate. Include the article number (1) and the serial number (2).

Please note that non-professional repairs may risk user safety and affect the warranty.



## Spare parts

The following spare parts are available for at least seven years after the model is no longer manufactured: Motor, circulation and drainage pump, heating element, pipes and hoses, valves, filters and aquastops, door attachment components, circuit boards, electronic display, pressure sensor, thermostats and sensors, software including restore programs.

The following spare parts are available for at least ten years after the model is no longer manufactured: Door hinges and seals, other seals, spray arms, drain filters, wire baskets and plastic accessories such as baskets and lids.

## Number of cycles

Press and hold > and ... for 3 seconds to show Number of cycles on the display.

# Technical data and energy labelling

## Technical data

|                                      |                             |
|--------------------------------------|-----------------------------|
| Height:                              | 859-912 mm                  |
| Width:                               | 596 mm                      |
| Depth:                               | 567 mm <sup>1)</sup>        |
| Weight:                              | 55 kg <sup>2)</sup>         |
| Number of standard place settings:   | 14 <sup>3)</sup>            |
| Water pressure:                      | 0.1-1.0 MPa                 |
| Electrical connection:               | See the serial number plate |
| Rated power:                         | See the serial number plate |
| Frequency band, WiFi module:         | 2.4 GHz                     |
| Maximum transmit power, WiFi module: | ≤ 1 W                       |

<sup>1)</sup> Including nipples for connection to an automatic dosing system.

<sup>2)</sup> Weight can vary due to different specifications.

<sup>3)</sup> In accordance with the EN 60436 standard.

## Information for consumers


Information about your appliance can be found at <https://global.asko.com/energy-label>. You can also find information in the EU Product Registration database for Energy Labelling, EPREL. Scan the QR code on the energy label supplied with the dishwasher (or go to <https://eprel.ec.europa.eu> and search for the model name).

This appliance contains a light source/light sources of energy efficiency class D. Light sources are available as spare parts and can be replaced, without damage to the dishwasher, by your nearest service centre or a similarly qualified professional.

## Information for test institute

Information about this product can be found in the European Product Database for Energy Labelling, EPREL, and can also be ordered by e-mail [dishwashers@appliance-development.com](mailto:dishwashers@appliance-development.com).

The request should include the details on the serial number plate. Include the article number (1), the serial number (2) and the model name (3).



## Declaration of conformity

The company declares that the device with the function Connectlife complies with the essential requirements and other relevant provisions of Directive 2014/53/EU. The detailed Declaration of Conformity can be found at the web address <https://aud.connectlife.io> on the page of your device among the additional documents.

# **ASKO** PROFESSIONAL

[WWW.ASKO.COM](http://WWW.ASKO.COM)



931343-a5

*Translation of the original instructions.  
We reserve the right to make changes.*