



User Guide

AC1200 Wi-Fi Range Extender with AC Pass-through
RE365

Contents

About This Guide	1
Chapter 1. Get to Know About Your Extender	2
1. 1. Product Overview.....	3
1. 2. Appearance	3
1. 2. 1.LED Explanation.....	4
1. 2. 2.Port and Button Description	4
Chapter 2. Set Up Internet Connection	5
2. 1. Quick Setup	6
2. 1. 1.Method 1: Via a Web Browser.....	6
2. 1. 2.Method 2: Via the TP-Link Tether App.....	10
2. 1. 3.Method 3: Via the WPS Button.....	11
2. 2. Position Your Extender.....	12
Chapter 3. Customize Your Network.....	13
3. 1. Check Internet Status.....	14
3. 2. Configure Wireless Network	14
3. 3. Change LAN Settings.....	16
3. 4. Specify DHCP Server Settings.....	17
3. 5. Adjust Wi-Fi Coverage	18
3. 6. Set Access Control	18
Chapter 4. More Features of Your Extender.....	21
4. 1. Use Your Extender as a Wireless Adapter.....	22
4. 2. Transform Your Existing Wired Network to a Wireless One	22
4. 2. 1.To Set Up the Extender as an Access Point	22
4. 2. 2.To Connect Your Wireless Devices to the Extender via WPS.....	24
Chapter 5. TP-Link Cloud Service	26
5. 1. Register a TP-Link ID.....	27
5. 2. Change Your TP-Link ID Information.....	27
5. 3. Manage the User TP-Link IDs	28
5. 4. Manage the Extender via TP-Link Tether App.....	30
Chapter 6. Manage Your Extender	31
6. 1. Set Up System Time	32
6. 2. Control LEDs	32
6. 3. Power Schedule	33

6. 4.	Upgrade the Firmware	34
6. 5.	Backup and Restore Configuration Settings.....	35
6. 6.	Change Login Password	36
6. 7.	System Log.....	36
FAQ.		38

About This Guide

This guide is a complement to Quick Installation Guide. The Quick Installation Guide provides instructions for quick internet setup, while this guide contains details of each function and demonstrates how to configure them.

When using this guide, please notice that features of the extender may vary slightly depending on the model and software version you have, and on your location, language, and internet service provider. All screenshots, images, parameters and descriptions documented in this guide are used for demonstration only.

Conventions

In this guide the following conventions are used:

Convention	Description
<u>Underlined</u>	Underlined words or phrases are hyperlinks. You can click to redirect to a website or a specific section.
Teal	Contents to be emphasized and texts on the web page are in teal, including the menus, items, buttons, and so on.
>	The menu structures to show the path to load the corresponding page. For example, Advanced > Wireless > MAC Filtering means the MAC Filtering function page is under the Wireless menu that is located in the Advanced tab.
 Note:	Ignoring this type of note might result in a malfunction or damage to the device.
 Tips:	Indicates important information that helps you make better use of your device.
symbols on the web page	 click to edit the corresponding entry.  click to delete the corresponding entry.

More Info

The latest software, management app and utility are available from the [Download Center](#) at www.tp-link.com/support.

The Quick Installation Guide can be found where you find this guide or inside the package of the range extender.

Specifications can be found on the product page at <http://www.tp-link.com>.

A Technical Support Forum is provided for you to discuss our products at <http://forum.tp-link.com>.

Our Technical Support contact information can be found at Contact Technical Support page at www.tp-link.com/support.

Chapter 1

Get to Know About Your Extender

This chapter introduces what the extender can do and its appearance.

It contains the following sections:

- [Product Overview](#)
- [Appearance](#)

1.1. Product Overview

Bring Dead Zones Back to Life

Tired of Wi-Fi “dead zones”? The TP-Link extender is connected to your router wirelessly, strengthening its signal and expanding its coverage into areas that could not otherwise be reached. The device also reduces signal interference to ensure reliable Wi-Fi coverage throughout your home or office.

Easy Installation & Quick Position

The extender works with any standard wireless router. Instantly connect the extender to a router by pressing the router’s WPS button (if available) followed by the extender’s RE/WPS button. Alternatively, follow the Quick Setup instructions on the extender’s web management page.

Once the extender is connected to a router, you can relocate it to your preferred location with no further configuration required. The intelligent signal light can help to find the best location.

Easy Management with the TP-Link Tether App

Tether provides a simple, intuitive way to access and manage your extender with your smart devices.

1.2. Appearance



■ Note: RE365 (UK version) is used for demonstration in this guide. Images may differ from actual products.

1.2.1. LED Explanation

You can check the extender's working status by following the LED Explanation table.

Name	Status	Indication
 (Signal)	Solid blue	The extender is connected to your router's wireless network and is in a suitable location.
	Solid red	The extender is experiencing poor signal strength. Try relocating it closer to your router.
	Flashing blue	WPS connection is in progress.
	Off	No wireless connection is established.
2.4GHz/5GHz	On	The extender is connected to the 2.4GHz/5GHz wireless network of your host router.
	Off	No wireless connection has been established.
Power	On	The extender is on.
	Flashing	The extender is starting up or firmware is being upgraded.
	Off	The extender is off.
Ethernet	On	A powered-on device is connected to the Ethernet port.
	Off	No powered-on device is connected to the Ethernet port.

1.2.2. Port and Button Description

Item	Description
WPS Button	Press the WPS button on your host router, and immediately press the WPS button on the extender. The Signal LED  of the extender should change to solid blue, indicating successful WPS connection.
Power Button	Press the Power button to turn on or off the extender.
LED Button	Press the LED button to turn on or off all the LEDs.
Reset (Hole)	Use a pin to press and hold the Reset button until all the LEDs turn on momentarily to reset the extender.
Ethernet Port	Connect your Ethernet-only device to the Ethernet port of the extender to join the Wi-Fi network.

Chapter 2

Set Up Internet Connection

This chapter informs you how to boost your host wireless coverage. Please follow the step-by-step instructions to set up the internet connection.

It contains the following sections:


- [Quick Setup](#)
- [Position Your Extender](#)

2.1. Quick Setup

Power on

Plug the extender into an electrical outlet **next to your host router**, and then wait until the Power LED is solid on.

■ Note: For safety, we suggest that you plug the extender in upright directions as shown below.

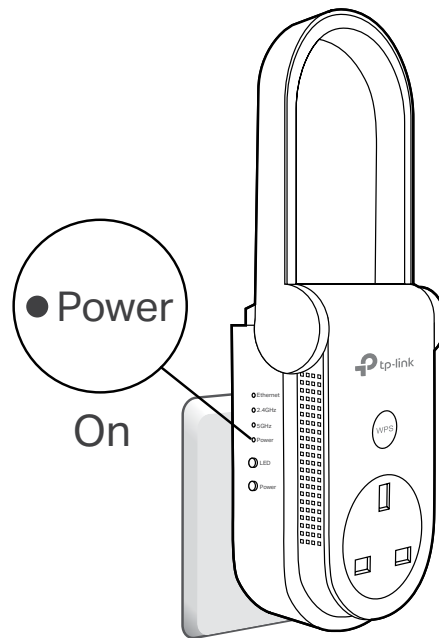

Connect to the host network

There are three ways to connect to the host network: via a web browser, via the Tether app, and via the WPS button.


2.1.1. Method 1: Via a Web Browser

1. Connect your computer to the extender's wireless network.

☞ **Tips:**


Before connecting, please find the SSID (network name) on the label of the extender.

- For Windows Users
 - 1) Unplug the Ethernet cable from your computer (if any).
 - 2) Click the Wi-Fi icon on the taskbar and connect to the extender's wireless network: [TP-Link_Extender_2.4GHz](#) or [TP-Link_Extender_5GHz](#).

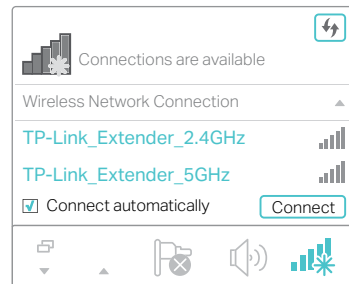

- For Mac OS X Users

- 1) Unplug the Ethernet cable from your computer (if any).
- 2) Click the Wi-Fi icon in the top right corner of the screen, and connect to the extender's network: [TP-Link_Extender_2.4GHz](#) or [TP-Link_Extender_5GHz](#).

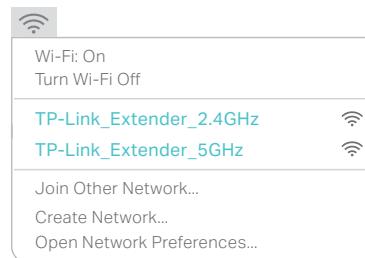

2. Follow the instructions of Quick Setup Wizard to connect the extender to your host router.

- 1) Launch a web browser, enter <http://tplinkrepeater.net> or <http://192.168.0.254> in the address field, and then create a password for future login attempts, and click [Start](#).

A screenshot of the Quick Setup Wizard password creation screen. It has a light gray background. There are two input fields: "Create Password" and "Confirm Password", both with a key icon on the left. Below these fields is a blue "Start" button.

💡 **Tips:** If the login window does not appear, please refer to [FAQ](#).

- 2) Select your host router's 2.4GHz SSID (network name), enter its password (NOT the password you just created for management), and click [Next](#).

Please select 2.4GHz host network or skip this network.

ID	SSID	Signal	MAC Address	Security
☒ 2	TP-Link_0969		00:0a:eb:13:09:69	

Host 2.4GHz Password:

[Next](#)

[Exit](#) [Other...](#) [Rescan](#) [Skip](#)

- 3) Select your host router's 5GHz SSID (network name), enter its password (NOT the password you just created for management), and click [Next](#).

Please select 5GHz host network or skip this network.

ID	SSID	Signal	MAC Address	Security
☐ 1	TP-Link_4530_5G		00:0a:eb:13:7b:01	
☒ 2	TP-Link_0969_5G		00:0a:eb:13:09:68	

Host 5GHz Password:

[Next](#)

[Back](#) [Other...](#) [Rescan](#) [Skip](#)

 **Tips:** If your host router does not support 5GHz wireless network, please click [Skip](#) to continue.

- 4) Either keep the default SSIDs (network names) or customize them for the extended networks, and then click [Next](#).

Extended 2.4GHz SSID: [Copy Host SSID](#)

☐ Hide SSID broadcast

[Note:](#) The extended 2.4GHz password is the same as your Host password.


Extended 5GHz SSID: [Copy Host SSID](#)

☐ Hide SSID broadcast

[Note:](#) The extended 5GHz password is the same as your Host password.

[Back](#) [Next](#)

- 5) Verify your wireless settings and click [Next](#). The corresponding LED(s) (2.4GHz or 5GHz) should turn on.

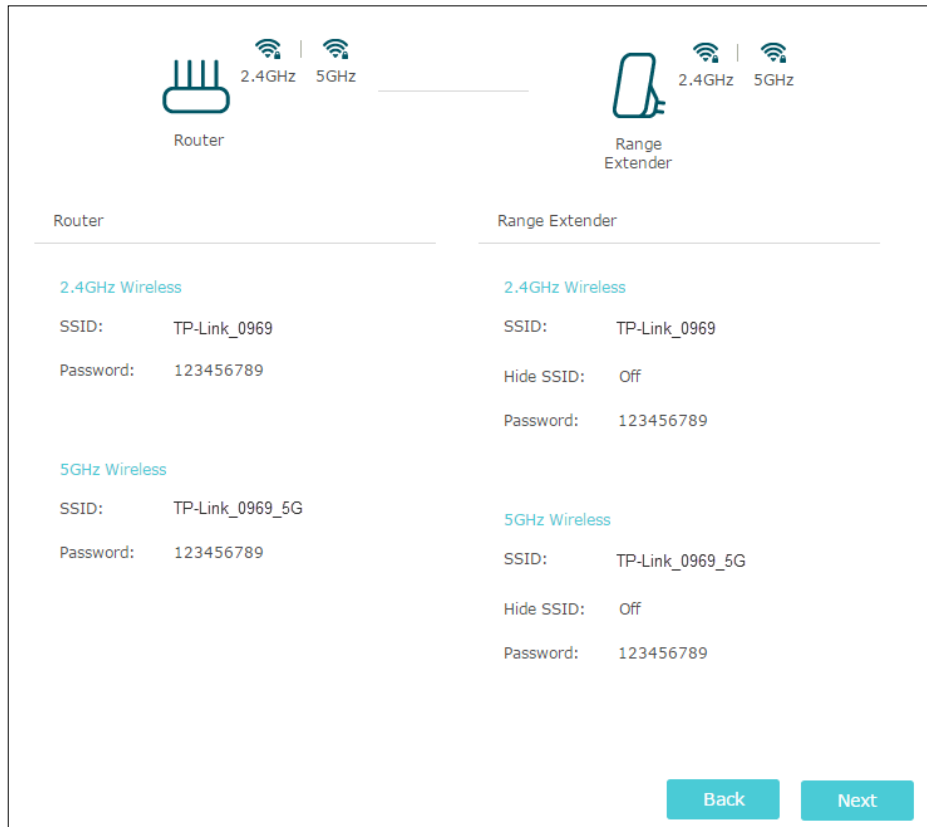


The screenshot shows the wireless settings for a Router and a Range Extender. Both devices have identical settings for 2.4GHz and 5GHz wireless networks.

Device	Band	SSID	Password	Hide SSID
Router	2.4GHz Wireless	TP-Link_0969	123456789	
	5GHz Wireless	TP-Link_0969_5G	123456789	
Range Extender	2.4GHz Wireless	TP-Link_0969	123456789	Off
	5GHz Wireless	TP-Link_0969_5G	123456789	Off

At the bottom right, there are two buttons: [Back](#) and [Next](#).

- 6) To enjoy a more complete service from TP-Link (remote management, TP-Link DDNS, etc.), log in with your TP-Link ID or click [Register Now](#) to get one. Then follow the instructions to bind the extender to your TP-Link ID.

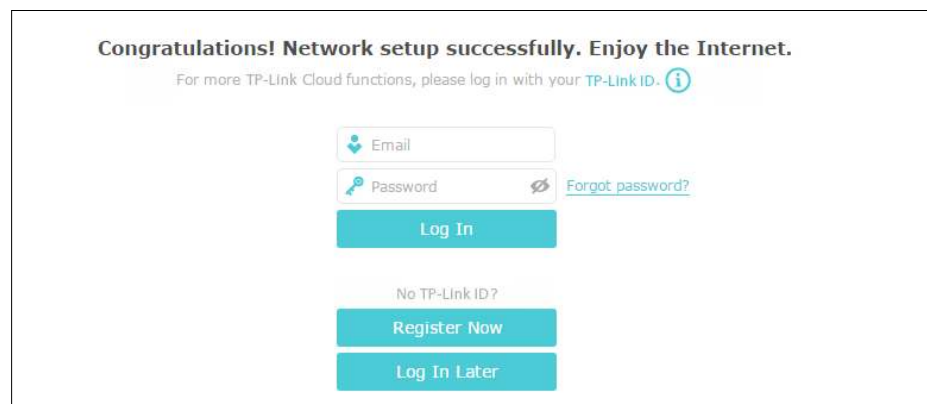

The screenshot shows a success message: "Congratulations! Network setup successfully. Enjoy the Internet." Below this, it says "For more TP-Link Cloud functions, please log in with your TP-Link ID." and provides a link to "Forgot password?".

There are three main options:

- Login:** Fields for Email and Password, with a [Forgot password?](#) link. A [Log In](#) button is below.
- Registration:** A [Register Now](#) button.
- Later:** A [Log In Later](#) button.

Note:

- To learn more about the TP-Link Cloud service, please refer to the [TP-Link Cloud Service](#) section.
- If you do not want to register a TP-Link ID for now, you may click [Log In Later](#) to proceed.

- 7) [Enjoy!](#) Connect to the extended network and enjoy the internet. Both extended networks share the same wireless passwords as those of your host networks,

but may have different network names if you have customized the SSIDs during the configuration.


🔗 **Tips:** Since the performance of the extended network will be affected by the distance between extender and host router, we highly recommend you to relocate your extender referring to [Position Your Extender](#).

2. 1. 2. Method 2: Via the TP-Link Tether App


1. Launch the Apple App Store or Google Play Store and search **TP-Link Tether** or simply scan the QR code to download and install the app.



2. Go to Wi-Fi Settings and connect your device to the extender's wireless network: **TP-Link_Extender_2.4GHz** or **TP-Link_Extender_5GHz**.

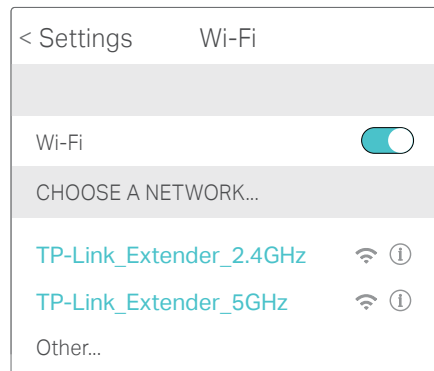

3. Launch Tether and select your extender from the Local Device list.

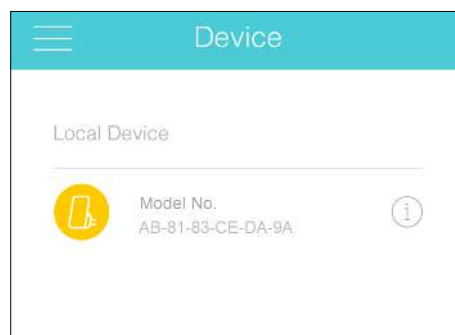

4. Create a password for future logins and click **Create**.

5. Follow the on-screen instructions to complete the configuration.


Tips: You can manage your extender via Tether, such as controlling LEDs, sharing passwords of your networks and blocking devices.

2. 1. 3. Method 3: Via the WPS Button

1. Press the WPS button on your host router. The button might look like one of these:



. Then press the WPS button on the extender within 2 minutes.

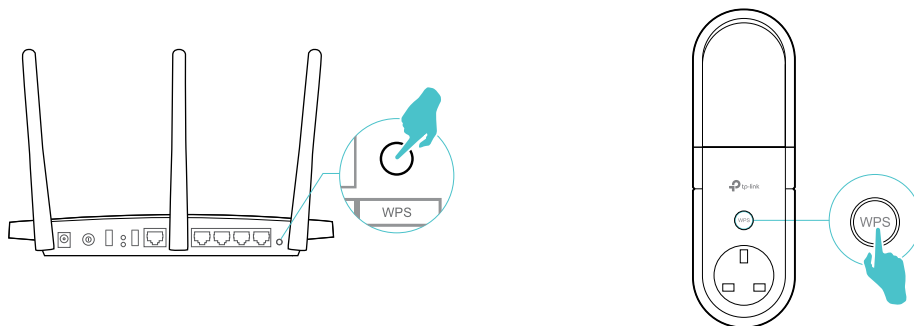

Tips:

- Some ISP gateways disable the WPS function by default. If the WPS connection fails, please refer to [Method 1: Via a Web Browser](#) or [Method 2: Via the TP-Link Tether App](#).
- For more information about using WPS button on your host router, please refer to the router manufacturer's user guide.

2. Wait until the Signal LED changes to solid blue, which indicates that the WPS connection is successful. If it doesn't, please refer to other methods.

3. If you are connecting the extender to a dual-band router but only the 2.4GHz or 5GHz LED is on, repeat Step 1 and 2 to connect to the other band.


4. **Enjoy!** Connect to the extended network and enjoy the internet. Both extended networks share the same SSIDs (network names) and passwords as those of your host networks.

🔗 **Tips:** Since the performance of the extended networks will be affected by the distance between extender and host router, we recommend that you relocate your extender by referring to [Position Your Extender](#).

2.2. Position Your Extender

Please follow the instructions below to achieve optimal performance of the extender.

1. Plug the extender into an electrical outlet between your host router and the Wi-Fi “dead” zone. The location you choose must be within the range of your existing host network.
2. Wait until the Signal LED is lit and solid blue. If not, relocate it closer to the host router to achieve better signal quality.

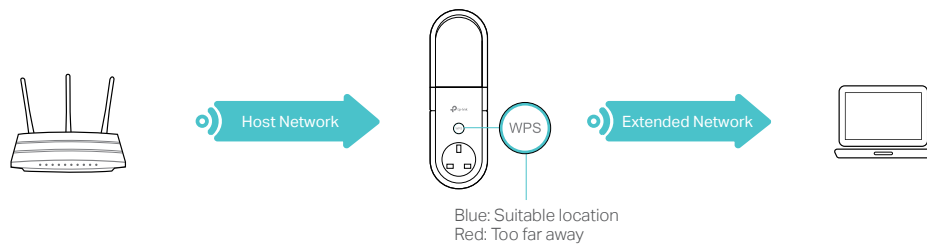

🔗 **Tips:** To minimize signal interference, please choose a location which is far away from Bluetooth devices and other household electronic devices, such as cordless phones, microwave ovens and baby monitors.

Chapter 3

Customize Your Network

This chapter guides you on how to configure network settings that are available for this extender.

It contains the following sections:

- [Check Internet Status](#)
- [Configure Wireless Network](#)
- [Change LAN Settings](#)
- [Specify DHCP Server Settings](#)
- [Adjust Wi-Fi Coverage](#)
- [Set Access Control](#)


3.1. Check Internet Status

You can view the internet status of your extender to check whether you have successfully set up the extended network(s).

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
2. Go to **Settings** > **Status** to view the internet status of your extender.
 - The extender is functioning normally.



- The extender is not connected to the host networks. Please go to **Settings** > **Wireless** > **Connect to Network** to check the passwords of the host networks. If the problem still exists, please refer to the [FAQ](#) section.

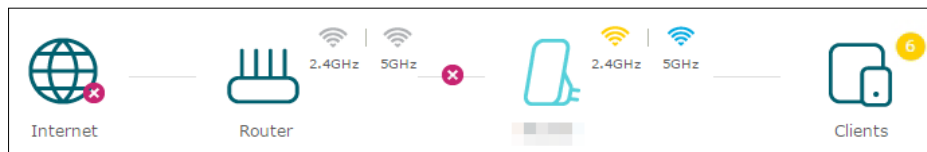

- The extender is connected to the host network, but is not transmitting data. Please check your router's internet connection.



- The extender is connected to the router abnormally. Please go to **Settings** > **Network** and try setting your extender to obtain an IP address automatically.



Click the Internet/Router/Range Extender/Clients icon to view corresponding information.

3.2. Configure Wireless Network

If you want to extend another host network after Quick Setup, you can refer to this section. Moreover, you can change the wireless settings for your extended networks.

Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.

■ **Note:** Here we take the configuration of the 2.4GHz network as an example. If the 5GHz network is available on your extender, please refer to the instructions to set your 5GHz network.

➤ **To extend another host network:**

1. Go to [Settings](#) > [Wireless](#) > [Connect to Network](#).
2. Enable [Connect to 2.4GHz Network](#) and click [Wireless Scanner](#) to find all available networks.

Connect to Host Network

2.4GHz Network: ☒ [Connect to 2.4GHz Network](#)

[Wireless Scanner](#)

Host 2.4GHz SSID:

Host 2.4GHz Security:

Host 2.4GHz Password:

5GHz Network: ☒ [Connect to 5GHz Network](#)

[Wireless Scanner](#)

Host 5GHz SSID:

Host 5GHz Security:

Host 5GHz Password:

[Save](#)

3. Select the 2.4GHz host network you want to extend.

■ **Note:**

If the network you want to extend is on but not listed, please try the following steps.

1. Move the extender closer to your router, and click [Rescan](#) in the top-right corner of the list.
2. You can manually enter the SSID (network name) and password of the network you want to extend, and click [Save](#).
4. Once a host network is selected, the SSID and security type will be automatically filled in. If the selected network is encrypted, enter the password in the [Password](#) field.
5. Click [Save](#).

➤ **To enable or disable the extended network:**

1. Go to [Settings](#) > [Wireless](#) > [Extended Network](#).
2. Extended networks are enabled by default. If you want to disable the wireless function of a certain band, just clear the [Enable](#) checkbox. In this case, all the wireless settings of this band will be invalid.

3. Click [Save](#).

➤ **To change the wireless network name (SSID):**

1. Go to [Settings](#) > [Wireless](#) > [Extended Network](#).
2. Create a new SSID in [Extended 2.4GHz SSID](#) or click [Copy Host SSID](#). The value is case-sensitive.
3. Click [Save](#).

■ **Note:** If you have changed the wireless settings via a wireless device, you will be disconnected after the settings are applied. Please write down the new SSID for future use.


➤ **To hide the SSID of the extended network:**

1. Go to [Settings](#) > [Wireless](#) > [Extended Network](#).
2. Select [Hide SSID broadcast](#), and the corresponding SSID will not be displayed when wireless devices scan for local wireless networks. Devices must join the network manually in order to connect.
3. Click [Save](#).

3.3. Change LAN Settings

The extender is preset with a default LAN IP 192.168.0.254, with which you can log in to the web management page. The LAN IP address, together with the Subnet Mask, also defines the subnet that the connected devices are on. If the IP address conflicts with another device on your local network or your network requires a specific IP subnet, you can change it.

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
2. Go to [Settings](#) > [Network](#).
3. Select [Use the following IP address](#).
4. Enter a new IP address as needed and leave the [Subnet Mask](#) as the default settings and enter the gateway that is in the same subnet as the IP address. The gateway is usually the LAN IP address of your extender.

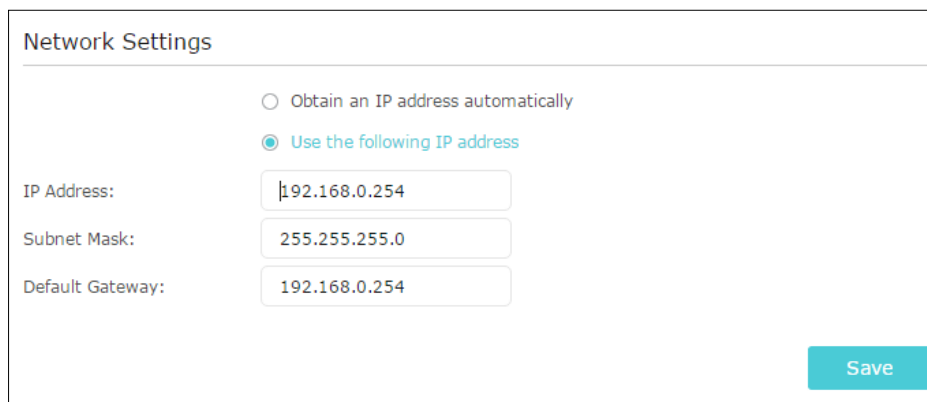

The Network Settings form has a title bar 'Network Settings'. Below it, there are two radio buttons: 'Obtain an IP address automatically' and 'Use the following IP address'. The second option is selected. Below the radio buttons are three text input fields: 'IP Address:' with the value '192.168.0.254', 'Subnet Mask:' with the value '255.255.255.0', and 'Default Gateway:' with the value '192.168.0.254'. A 'Save' button is located at the bottom right of the form.


5. Click [Save](#).

3. 4. Specify DHCP Server Settings

By default, the DHCP (Dynamic Host Configuration Protocol) Server is enabled and the extender acts as a DHCP server; it dynamically assigns TCP/IP parameters to client devices from the IP Address Pool. You can change the settings of the DHCP Server if necessary.

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
2. Go to [Settings](#) > [Network](#).

➤ To specify the IP address that the extender assigns:

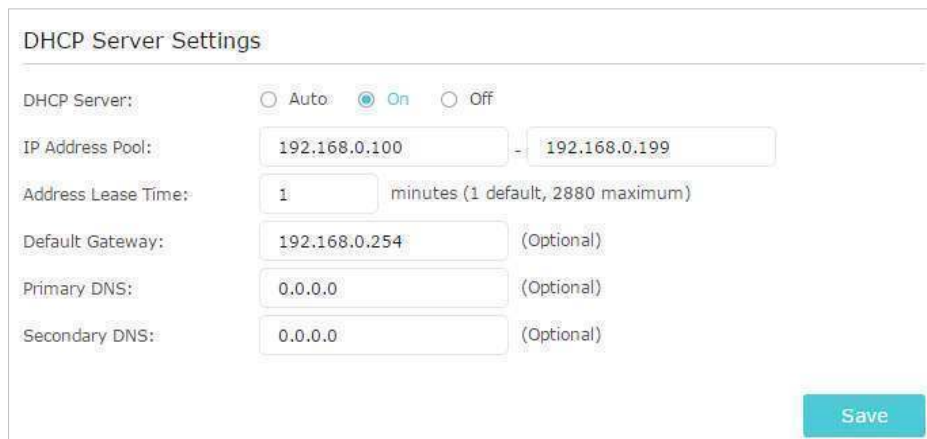

The DHCP Server Settings form has a title bar 'DHCP Server Settings'. Below it, there are three radio buttons: 'Auto', 'On', and 'Off'. The 'On' option is selected. Below the radio buttons are several text input fields: 'IP Address Pool:' with the value '192.168.0.100 - 192.168.0.199', 'Address Lease Time:' with the value '1' and the text 'minutes (1 default, 2880 maximum)', 'Default Gateway:' with the value '192.168.0.254' and the text '(Optional)', 'Primary DNS:' with the value '0.0.0.0' and the text '(Optional)', and 'Secondary DNS:' with the value '0.0.0.0' and the text '(Optional)'. A 'Save' button is located at the bottom right of the form.

1. Select [Auto](#) (recommended) or [On](#) to enable the DHCP Server.
2. Enter the starting and ending IP addresses in the [IP Address Pool](#).
3. Enter other parameters if the ISP requires them. The [Default Gateway](#) is automatically filled in and is the same as the LAN IP address of the extender.
4. Click [Save](#).

➤ **To view the DHCP Client List:**


You can view the information of the DHCP clients connected to the extender in the DHCP Client List.

DHCP Client List				
Client Number: 1			 Refresh	
ID	Client Name	MAC Address	Assigned IP Address	Lease Time
1		FC-AA-14-C4-3D-0C	192.168.0.100	00:00:43

3.5. Adjust Wi-Fi Coverage

You can set the extender's Wi-Fi coverage depending on how large you want your Wi-Fi area to be.

1. Visit <http://tplinkrepeater.net> and log in with the password you set for the extender.
2. Go to [Settings](#) > [Advanced Settings](#) > [Wi-Fi Coverage](#).
3. Select [Min](#), [Mid](#) or [Max](#) to adjust your Wi-Fi coverage of the extender.

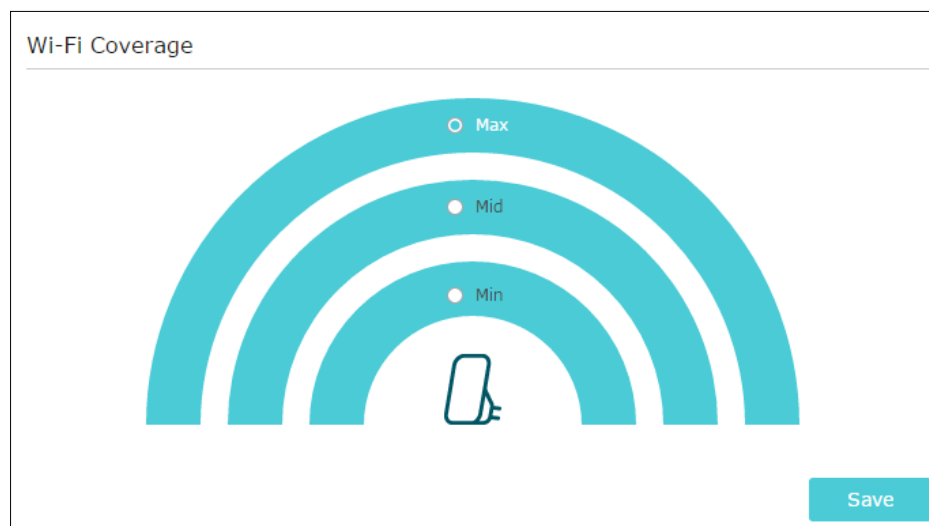

4. Click [Save](#).

3.6. Set Access Control

Access Control allows you to permit or block specific devices from accessing the internet for a specific period.

1. Visit <http://tplinkrepeater.net> and log in with the password you set for the extender.
2. Go to [Settings](#) > [Advanced Settings](#) > [Access Control](#).

3. Enable [Access Control](#).

Access Control

Access Control: ☒

➤ **To block specific device(s):**

■ **Note:** Devices connected to the extender via an Ethernet cable cannot be blocked.

1. Select [Blacklist](#) and click [Save](#).

Access Mode

Default Access Mode: ☒ [Blacklist](#) ☐ [Whitelist](#)

[Save](#)

2. Select the device to be blocked in the [Online Devices](#) table by ticking the corresponding checkbox.

3. Click [Block](#) and the selected device(s) will be added to the [Devices in Blacklist](#) table.

Online Devices

[Refresh](#) [Block](#)

☐	ID	Device Name	IP Address	MAC Address	Connection Type	Modify
☐	1		192.168.0.102		Wireless	Block

4. Click [Block](#) in the [Devices in Blacklist](#) table to set the [Effective Time](#) for a certain entry as needed.

Device Name:

MAC Address:

Effective Time: ☐ Cannot access at any time ☒ Cannot access based on the time schedule

Time: : - :

Day(s): ☐ Monday ☐ Tuesday ☐ Wednesday ☐ Thursday ☐ Friday ☐ Saturday ☐ Sunday

[Cancel](#) [OK](#)

5. Click **OK**.


➤ **To permit specific device(s):**

1. Select **Whitelist** and click **Save**.



The 'Access Mode' dialog box has a title bar 'Access Mode'. Below the title bar, it says 'Default Access Mode:'. There are two radio buttons: 'Blacklist' and 'Whitelist'. The 'Whitelist' radio button is selected. At the bottom right, there is a blue 'Save' button.

2. Click **Add** in the **Devices in Whitelist** table. Enter the **Device Name** and **MAC Address**. And you can set the **Effective Time** for a certain entry as needed.

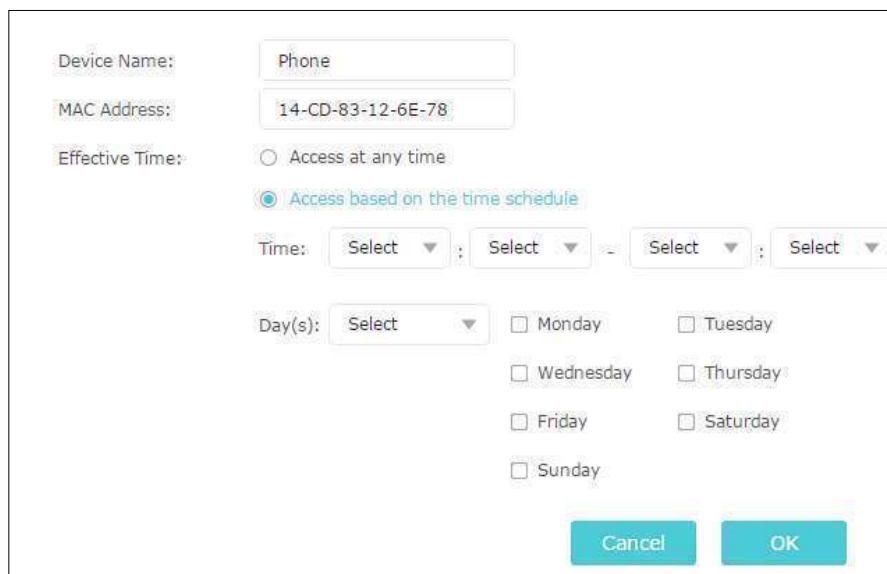

The dialog box for adding a device to the whitelist contains the following fields and options:

- Device Name:** A text input field containing 'Phone'.
- MAC Address:** A text input field containing '14-CD-83-12-6E-78'.
- Effective Time:** Two radio buttons: 'Access at any time' and 'Access based on the time schedule'. The 'Access based on the time schedule' option is selected.
- Time:** Four dropdown menus, each with 'Select' as the current value, separated by colons.
- Day(s):** A dropdown menu with 'Select' as the current value, followed by seven checkboxes for the days of the week: Monday, Tuesday, Wednesday, Thursday, Friday, Saturday, and Sunday. All checkboxes are currently unchecked.
- At the bottom right, there are two buttons: 'Cancel' and 'OK'.

3. Click **OK**.

Chapter 4

More Features of Your Extender

This chapter explains how to use the extender as a wireless adapter and as an access point.

It contains the following sections:


- [Use Your Extender as a Wireless Adapter](#)
- [Transform Your Existing Wired Network to a Wireless One](#)

4. 1. Use Your Extender as a Wireless Adapter

The extender can be used as a wireless adapter to connect any wired-only device, such as a Blu-ray player, game console, DVR, or smart TV, to your wireless network.

After configuration, you can connect an Ethernet-enabled device to the extender via an Ethernet cable.

■ **Note:** Extenders that have no Ethernet port do not support this feature.

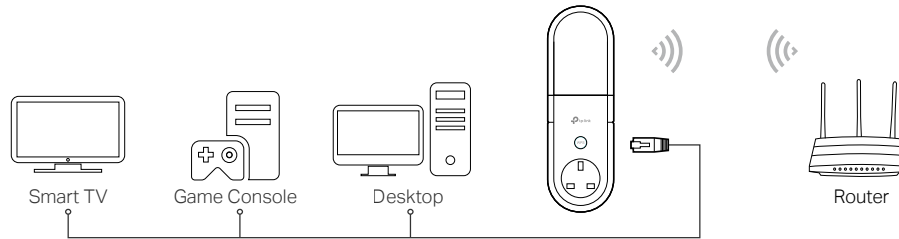

By default, the Ethernet port of the extender is connected to the 5GHz wireless network.

➤ **To change the connected wireless frequency:**

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
2. Go to **Settings > Network**.
3. Select **2.4GHz** or **5GHz** and click **Save**.

Ethernet Port

Host Network for the Ethernet port: ☒ 2.4GHz ☐ 5GHz


Save

4. 2. Transform Your Existing Wired Network to a Wireless One

The extender can work as an access point, transforming your existing wired network to a wireless one.

4. 2. 1. To Set Up the Extender as an Access Point

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
2. Click **Mode** in the top right corner of the page. Select **Access Point** and click **Save**.
The extender will reboot and switch to Access Point mode.

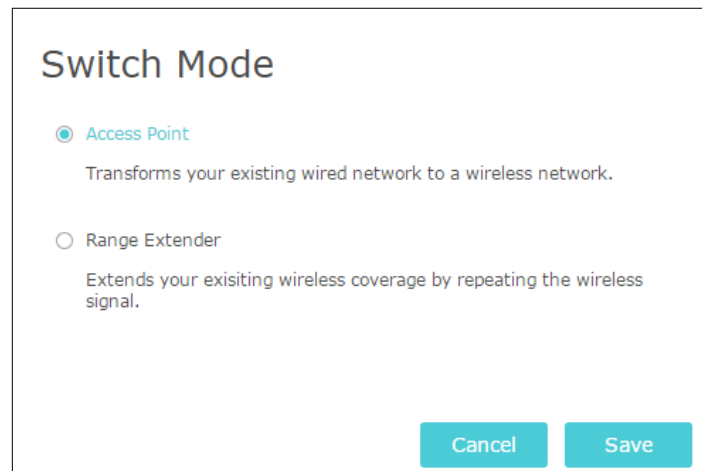

The 'Switch Mode' screen has a title 'Switch Mode' at the top. Below it are two radio button options. The first option, 'Access Point', is selected and has a description: 'Transforms your existing wired network to a wireless network.' The second option, 'Range Extender', is unselected and has a description: 'Extends your existing wireless coverage by repeating the wireless signal.' At the bottom right are two buttons: 'Cancel' and 'Save'.

Switch Mode


☒ Access Point
Transforms your existing wired network to a wireless network.

☐ Range Extender
Extends your existing wireless coverage by repeating the wireless signal.

Cancel Save

3. After rebooting, connect the extender to your modem or wired router via an Ethernet cable.
4. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
5. Go to **Quick Setup** to configure your extender.

1) Configure your wireless settings and click **Next**.

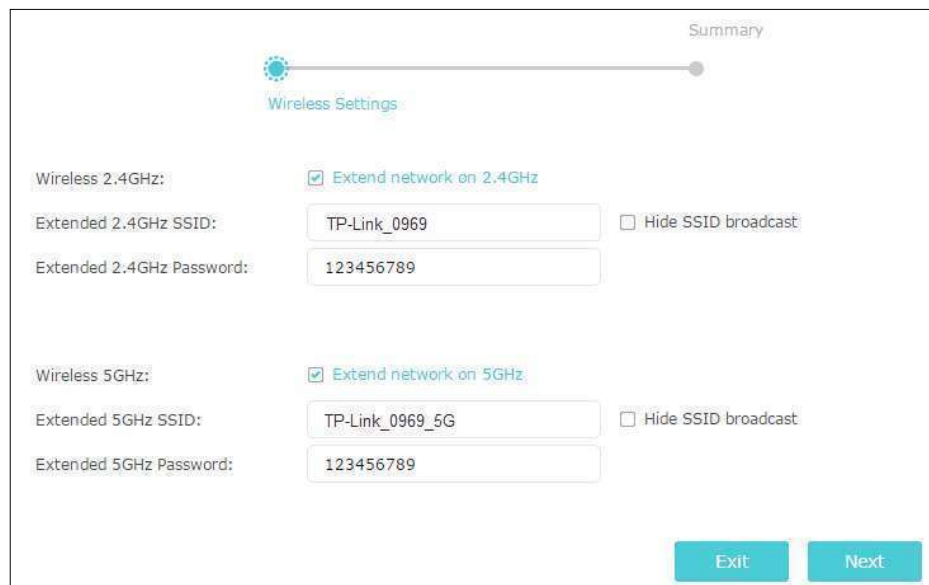

The 'Wireless Settings' screen is part of a multi-step setup process, indicated by a progress bar at the top with 'Wireless Settings' as the current step and 'Summary' as the next. The screen is divided into two sections for 2.4GHz and 5GHz wireless settings. Each section has a checkbox to 'Extend network on' the respective frequency, which is checked. Below each checkbox are input fields for 'Extended' SSID and Password, and a checkbox for 'Hide SSID broadcast' which is unchecked. At the bottom right are 'Exit' and 'Next' buttons.

Summary

Wireless Settings

Wireless 2.4GHz: ☒ Extend network on 2.4GHz

Extended 2.4GHz SSID: ☐ Hide SSID broadcast

Extended 2.4GHz Password:

Wireless 5GHz: ☒ Extend network on 5GHz

Extended 5GHz SSID: ☐ Hide SSID broadcast

Extended 5GHz Password:

Exit Next

2) Confirm the information and click **Finish**. Now, you can enjoy Wi-Fi.

[Summary](#)

Wireless Settings

2.4GHz Extended Network		5GHz Extended Network	
Extend network on 2.4GHz:	On	Extend network on 5GHz:	On
Extended 2.4GHz SSID:	TP-Link_0969	Extended 5GHz SSID:	TP-Link_0969_5G
Hide SSID:	Off	Hide SSID:	Off
Extended 2.4GHz Password:	123456789	Extended 5GHz Password:	123456789

[Back](#)
[Finish](#)

4.2.2. To Connect Your Wireless Devices to the Extender via WPS

Wi-Fi Protected Setup (WPS) provides an easier way to set up a secure Wi-Fi connection. Wireless devices that support WPS, including Android phones, tablets and most USB network cards, can be connected to your extender through this method (not supported by iOS devices).

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
2. Go to [Settings](#) > [Wireless](#) > [WPS](#).
3. Enable [WPS](#).

WPS

Enable WPS: ☒

4. Connect via WPS:

- AP's PIN: Enable [AP's PIN](#) and enter the PIN on your device. You can click [Generate](#) to get a new PIN or click [Default](#) to restore the PIN to its factory one.

AP's PIN

AP's PIN: ☒

PIN: 65214749

[Generate](#)
[Default](#)

- Push Button (Recommended): Click [Connect](#) and push the WPS button on the client device.

- PIN code: Enter the client's PIN, and click [Connect](#).

WPS Wizard

Select a WPS connection method: ☐ Push Button (Recommended) ☒ PIN code

Client's WPS PIN code:

[Connect](#)

Chapter 5

TP-Link Cloud Service

TP-Link Cloud service provides a better way to manage your cloud devices. Log in to your extender with a TP-Link ID, and you can easily monitor and manage your home network when you are out and about via the Tether app on your smartphone or tablet. To ensure that your extender stays new and gets better over time, the TP-Link Cloud will notify you when an important firmware upgrade is available. Surely you can also manage multiple TP-Link Cloud devices with a single TP-Link ID.

This chapter introduces how to register a new TP-Link ID, bind or unbind TP-Link IDs to manage your extender, and the Tether app with which you can manage your home network no matter where you may find yourself.


It contains the following sections:

- [Register a TP-Link ID](#)
- [Change Your TP-Link ID Information](#)
- [Manage the User TP-Link IDs](#)
- [Manage the Extender via TP-Link Tether App](#)

5.1. Register a TP-Link ID

If you have skipped the registration during the Quick Setup process, you can:

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
2. Go to **Settings > TP-Link Cloud**.
3. Click **Register Now** and follow the instructions to register a TP-Link ID.

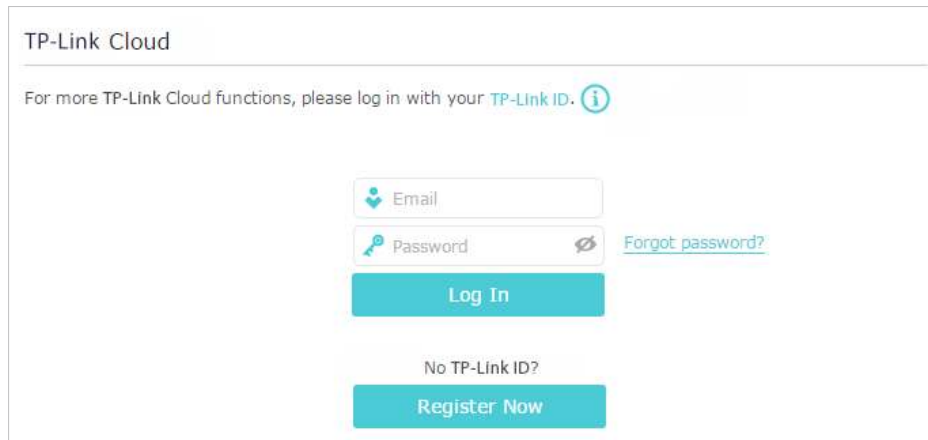

4. After activating your TP-Link ID, come back to the TP-Link Cloud page to log in. The first-time login TP-Link ID will be bound automatically to your cloud extender as an **Admin**.

■ Note:

- To learn more about the Admin and User TP-Link ID, refer to [Manage the User TP-Link IDs](#).
- Once the extender is bound to your TP-Link ID, you need to log in to the extender with the TP-Link ID.
- You can register another TP-Link ID via the Tether APP. Please refer to [Manage the Extender via TP-Link Tether App](#) to install the app and register a new one
- If you want to unbind the Admin TP-Link ID from your extender, please go to **Settings > TP-Link Cloud**, click **Unbind** in the **Device Information** section.


5.2. Change Your TP-Link ID Information

Follow the steps below to change your email address and password of your TP-Link ID as needed.

1. Visit <http://tplinkrepeater.net>, and log in with your TP-Link ID.
2. Go to **Settings > TP-Link Cloud**, and focus on the **Account Information** section.

➤ **Change your email address**


1. Click  behind the Email.
2. Enter the password of your TP-Link ID, then the new email address. And click **Save**.

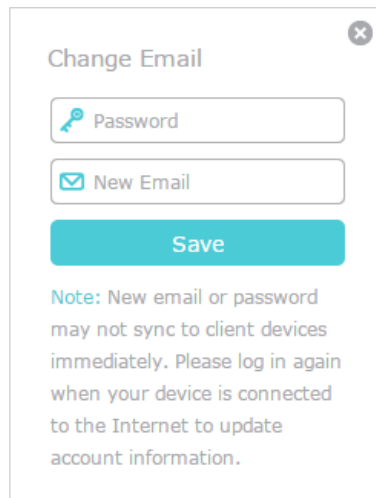

A dialog box titled "Change Email" with a close button (X) in the top right corner. It contains two input fields: "Password" with a key icon and "New Email" with an envelope icon. Below the fields is a teal "Save" button. At the bottom, a note states: "Note: New email or password may not sync to client devices immediately. Please log in again when your device is connected to the Internet to update account information."

➤ **Change your password**

1. Click  behind the Password.
2. Enter the current password, then a new password twice. And click [Save](#).

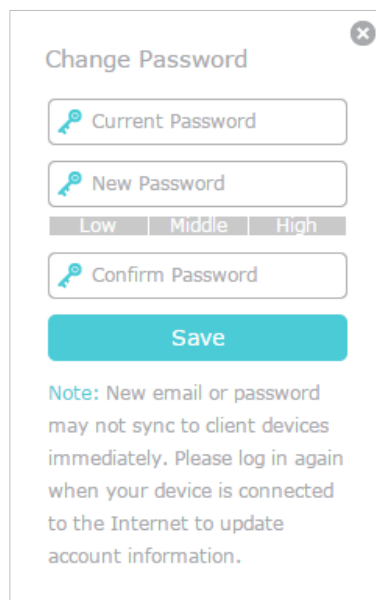

A dialog box titled "Change Password" with a close button (X) in the top right corner. It contains three input fields: "Current Password", "New Password", and "Confirm Password", each with a key icon. Between the "New Password" and "Confirm Password" fields is a strength indicator with three tabs: "Low", "Middle", and "High". Below the fields is a teal "Save" button. At the bottom, a note states: "Note: New email or password may not sync to client devices immediately. Please log in again when your device is connected to the Internet to update account information."

5.3. Manage the User TP-Link IDs

The first-time login TP-Link ID will be bound automatically to your extender as an [Admin](#) account. An Admin account can add or remove other TP-Link IDs to the same extender as [Users](#). Admin account and User accounts both can monitor and manage the extender locally or remotely, except that user accounts cannot:

- Reset the extender to its factory default settings from the web management page or the Tether app.


- Add/remove other TP-Link IDs to/from the extender.

5.3.1. Add an TP-Link ID to Manage the Extender

1. Visit <http://tplinkrepeater.net>, and log in with your TP-Link ID.
2. Go to **Settings > TP-Link Cloud**, and focus on the **Bound Accounts** section.
3. Click **+ Bind**, enter another TP-Link ID as needed and click **Save**.

Note:

If you need another TP-Link ID, please refer to [Manage the Extender via TP-Link Tether App](#) to install the app and register a new one.

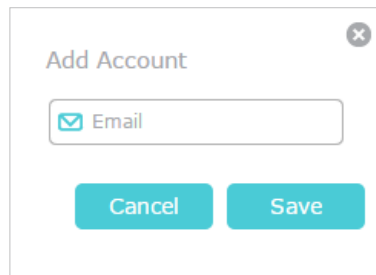

A modal dialog box titled "Add Account" with a close button (X) in the top right corner. Inside the dialog, there is a checkbox labeled "Email" which is checked. Below the checkbox are two buttons: "Cancel" and "Save".

4. The new TP-Link ID will be displayed in the Bound Accounts table as a **User**.

					+ Bind - Unbind	
☐	ID	Email	Binding Date	Role		
☐	1	zhengqi_zhang@163.com	16/11/2016	Admin		
☐	2	zhengqifighting@163.com	16/11/2016	User		

5.3.2. Remove TP-Link ID(s) From Managing the Extender

1. Visit <http://tplinkrepeater.net>, and log in with your TP-Link ID.
2. Go to **Settings > TP-Link Cloud**, and focus on the **Bound Accounts** section.
3. Check the box(es) of the TP-Link ID(s) you want to remove and click **Unbind**.

					+ Bind - Unbind	
☐	ID	Email	Binding Date	Role		
☐	1	zhengqi_zhang@163.com	16/11/2016	Admin		
☒	2	zhengqifighting@163.com	16/11/2016	User		

5. 4. Manage the Extender via TP-Link Tether App

The Tether app runs on iOS and Android devices like smartphones and tablets.

1. Open the Apple App Store or Google Play and search the key word **TP-Link Tether** or simply scan the QR code to download and install the app.



2. Connect your device to the extender's wireless network.
3. Launch the Tether app, select the model of your extender and log in with your TP-Link ID or the password you set for the extender.
4. Manage your extender as needed.

Chapter 6

Manage Your Extender

This chapter presents how to manage and maintain your extender.

It contains the following sections:

- [Set Up System Time](#)
- [Control LEDs](#)
- [Power Schedule](#)
- [Upgrade the Firmware](#)
- [Backup and Restore Configuration Settings](#)
- [Change Login Password](#)
- [System Log](#)


6.1. Set Up System Time

The System Time of the extender will be used for time-based functions such as the Power Schedule function. If you have enabled the Daylight Saving Time feature, the system time will be synchronized with the daylight saving time you configure.

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
2. Go to [Settings](#) > [System Tools](#) > [Time Settings](#).

➤ **To get system time:**

1. Select your local [Time Zone](#) from the drop-down list.

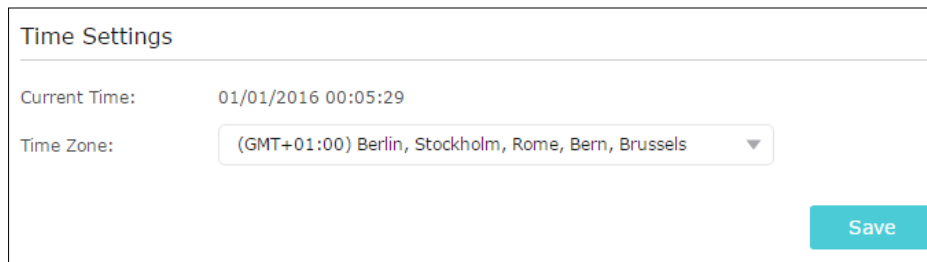

Time Settings

Current Time: 01/01/2016 00:05:29


Time Zone: (GMT+01:00) Berlin, Stockholm, Rome, Bern, Brussels ▼

Save

2. Click [Save](#).

➤ **To set up Daylight Saving Time:**

1. Select [Enable Daylight Saving Time](#).

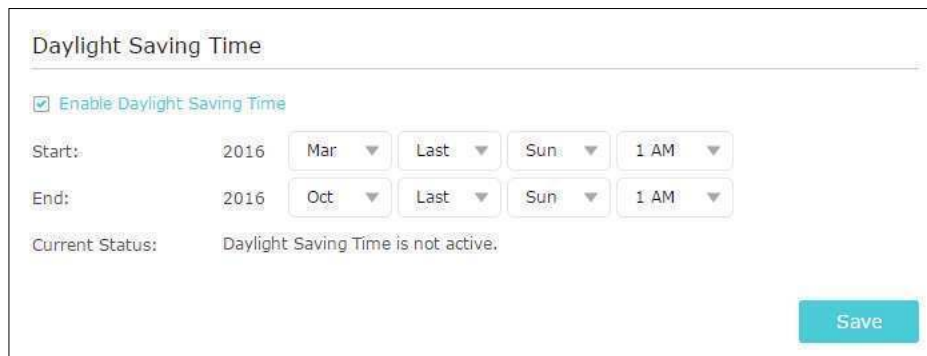

Daylight Saving Time

☒ [Enable Daylight Saving Time](#)

Start: 2016 Mar ▼ Last ▼ Sun ▼ 1 AM ▼

End: 2016 Oct ▼ Last ▼ Sun ▼ 1 AM ▼

Current Status: Daylight Saving Time is not active.

Save

2. Select the [Start](#) and [End](#) date and time of the daylight saving time at your local time zone.
3. Click [Save](#).

6.2. Control LEDs


The LEDs of the extender indicate its activities and status. You can enable the Night Mode feature to specify a time period during which the LEDs are off.

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.

2. Go to [Settings](#) > [System Tools](#) > [LED Control](#).

➤ To specify a time period when LEDs are off:

1. Select [Night Mode](#).
2. Specify a time period in the [LED Off Time](#) field, and the LEDs will be off during this period.
3. Click [Save](#).

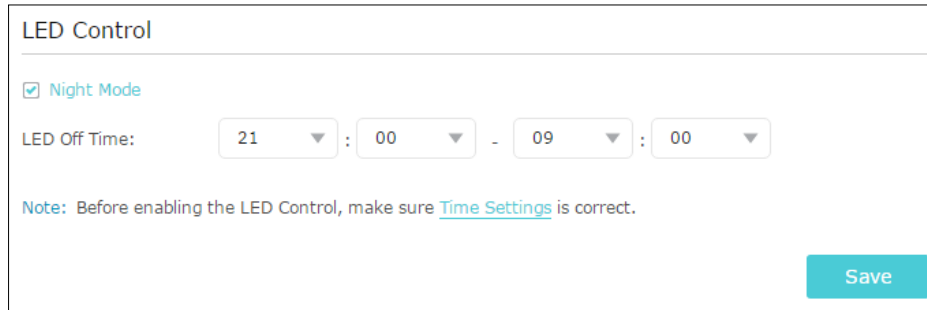

The screenshot shows the 'LED Control' settings page. At the top, there's a title 'LED Control'. Below it, a checkbox labeled 'Night Mode' is checked. Underneath, the 'LED Off Time' is set to 21:00 - 09:00 using dropdown menus. A note at the bottom states: 'Note: Before enabling the LED Control, make sure [Time Settings](#) is correct.' A 'Save' button is located at the bottom right.


6.3. Power Schedule

The Power Schedule feature allows you to specify a time period during which the extender is off.

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
2. Go to [Settings](#) > [Advanced Settings](#) > [Power Schedule](#).

➤ To specify a time period when the extender is off:

1. Select [Enable Power Schedule](#).
2. Specify a time period in the [Power-Off Time](#) field and days in the [Day\(s\)](#) field, and the extender will be off during this period.

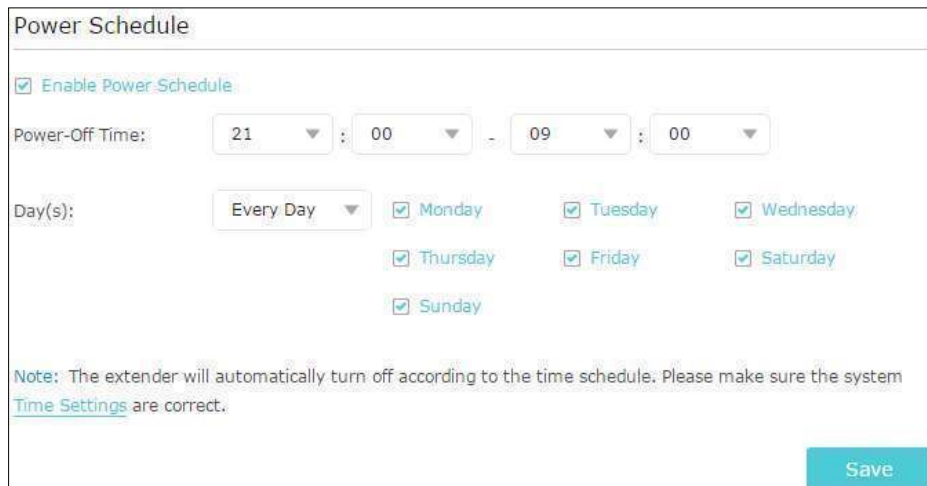

The screenshot shows the 'Power Schedule' settings page. At the top, there's a title 'Power Schedule'. Below it, a checkbox labeled 'Enable Power Schedule' is checked. Underneath, the 'Power-Off Time' is set to 21:00 - 09:00 using dropdown menus. The 'Day(s)' field has a dropdown set to 'Every Day' and checkboxes for all days of the week (Monday through Sunday), all of which are checked. A note at the bottom states: 'Note: The extender will automatically turn off according to the time schedule. Please make sure the system [Time Settings](#) are correct.' A 'Save' button is located at the bottom right.

3. Click [Save](#).

6.4. Upgrade the Firmware

TP-Link is committed to improving product features, giving you a better network experience. You can upgrade the firmware online or download the latest firmware file from the [Support](#) page at our website www.tp-link.com and upgrade the extender to the latest firmware version.

■ **Note:**

1. Make sure the latest firmware file is matched with the hardware version (as shown in the download section of the Support page).
2. Make sure that you have a stable connection between the extender and your computer. It is NOT recommended to upgrade the firmware wirelessly.
3. Backup your extender configuration.
4. Do NOT power off the extender during the firmware upgrade.

➤ **To upgrade the firmware online:**

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
2. Go to [Settings](#) > [System Tools](#) > [Firmware Upgrade](#), and click [Check for upgrade](#) to see whether a new firmware is released.




3. Focus on the [Online Upgrade](#) section, and click [Upgrade](#).



4. Wait a few minutes for the firmware upgrade to complete and the extender to reboot.

➤ **To upgrade the firmware locally:**

1. Download the latest firmware file for the extender from our website www.tp-link.com.
2. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
3. Go to [Settings](#) > [System Tools](#) > [Firmware Upgrade](#).
4. Click [Browse](#) to locate the downloaded new firmware file, and then click [Upgrade](#).

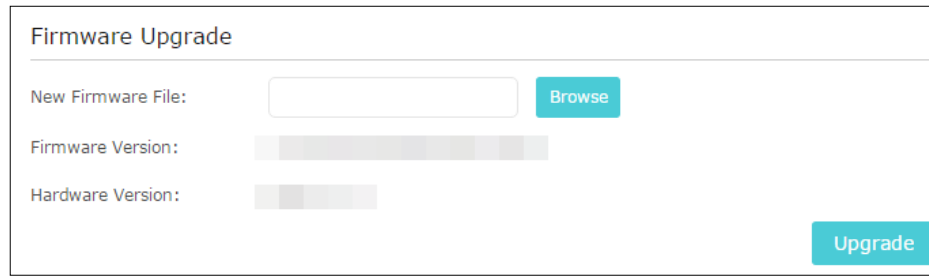The 'Firmware Upgrade' interface features a title bar at the top. Below it, there is a 'New Firmware File:' label followed by a text input field and a 'Browse' button. Underneath, 'Firmware Version:' is shown with a progress bar, and 'Hardware Version:' is shown with a smaller progress bar. An 'Upgrade' button is located in the bottom right corner.

Firmware Upgrade

New Firmware File: [Browse](#)

Firmware Version:

Hardware Version:

[Upgrade](#)

5. Wait a few minutes for the firmware upgrade to complete and the extender to reboot.


6.5. Backup and Restore Configuration Settings

The configuration settings are stored as a configuration file in the extender. You can backup the configuration file and restore the extender to the previous settings from the backup file when needed. Moreover, if necessary, you can erase the current settings and reset the extender to the default factory settings.

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
2. Go to [Settings](#) > [System Tools](#) > [Backup & Restore](#).

➤ **To backup configuration settings:**

Click [Backup](#) to save a copy of the current settings to your local computer. A '.bin' file of the current settings will be stored on your computer.

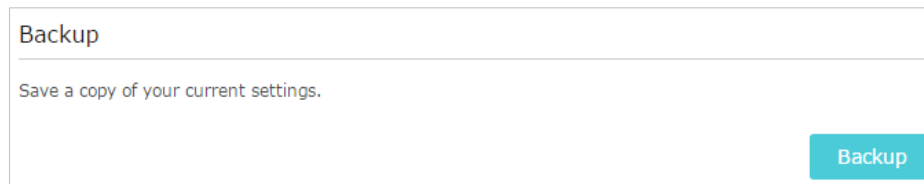The 'Backup' interface has a title bar. Below the title bar, it says 'Save a copy of your current settings.' and a 'Backup' button is in the bottom right corner.


Backup

Save a copy of your current settings.

[Backup](#)

➤ **To restore configuration settings:**

1. Click [Browse](#) to locate the backup configuration file stored on your computer, and click [Restore](#).

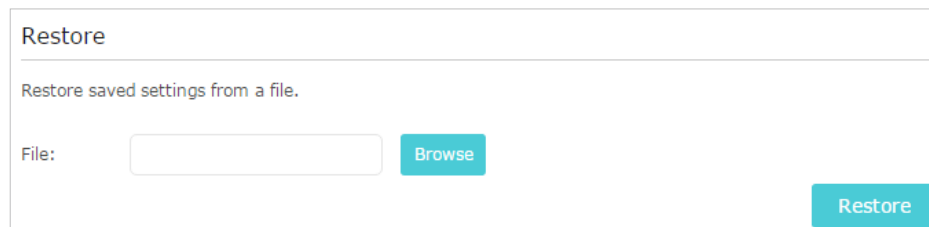The 'Restore' interface features a title bar. Below it, the text 'Restore saved settings from a file.' is displayed. There is a 'File:' label followed by a text input field and a 'Browse' button. An 'Restore' button is located in the bottom right corner.

Restore

Restore saved settings from a file.

File: [Browse](#)

[Restore](#)

2. Wait a few minutes for the restore and reboot.

■ **Note:** During the restore process, do not power off or reset the extender.

➤ **To reset the extender to factory default settings:**

1. Click [Factory Restore](#) to reset the extender.

A screenshot of a web interface titled "Factory Default Restore". Below the title is a horizontal line, and then the text "Revert all settings to factory defaults." is displayed. In the bottom right corner, there is a blue button with the text "Factory Restore" in white.

2. Wait a few minutes for the reset and reboot.


■ **Note:**

1. During the reset process, do not power off or reset the extender.
2. We strongly recommend you backup the current configuration settings before resetting the extender.

6.6. Change Login Password

The account management feature allows you to change your login password of the management webpage.

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
2. Go to [Settings](#) > [System Tools](#) > [Admin Account](#).
3. Enter the old password, then the new password twice (both case-sensitive) and click [Save](#).

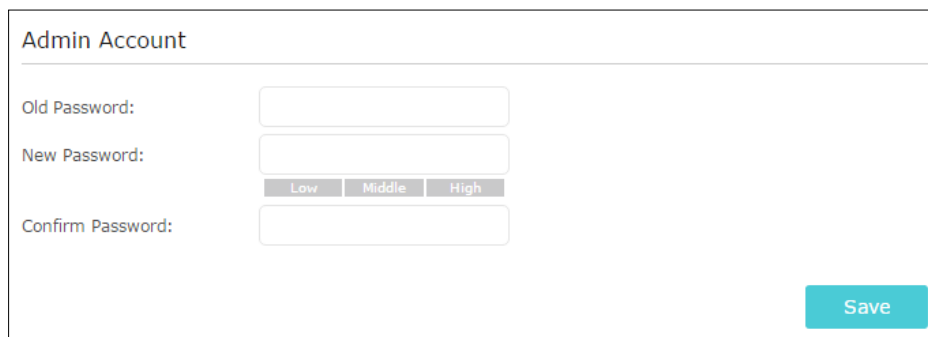A screenshot of a web interface titled "Admin Account". Below the title is a horizontal line. There are three password input fields: "Old Password:", "New Password:", and "Confirm Password:". The "New Password:" field has a strength indicator below it with three buttons: "Low", "Middle", and "High". In the bottom right corner, there is a blue button with the text "Save" in white.

4. Use the new password for future logins.

6.7. System Log

If the extender is not working normally, you can save the system log and send it to our technical support team.

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
2. Go to [Settings](#) > [System Tools](#) > [System Log](#).

➤ **To save the system log locally:**

1. Choose the type and level of the system log as needed.

2. Click [Save Log](#) to save the system logs to a local disk.

System Log

Log Filter: Type = ALL Level = ALL

[Refresh](#) [Delete All](#)

ID	Time	Type	Level	Content
5	0 days 00:10:59	DHCPC	ERROR	DHCP detection failed.
4	0 days 00:10:56	DHCPC	INFO	Sent a detection for DHCP.
3	0 days 00:10:53	DHCPC	INFO	Sent a detection for DHCP.
2	0 days 00:10:50	DHCPC	INFO	Sent a detection for DHCP.
1	0 days 00:10:47	OTHERS	INFO	User cleared up all the logs.

[Save Log](#)

FAQ

Q1. How do I reset the extender to its factory default settings?

- With the extender powered on, use a pin to press the [Reset](#) button until all the LEDs turn on momentarily and then release the button.
- Log in to the extender's web management page. Go to [System Tools](#) > [Restore & Backup](#) and click [Factory Restore](#).

Q2. What should I do if I forget my login password?

Refer to FAQ > Q1 to reset the extender, and create a password to log in.

■ **Note:** The extender must be reconfigured after a reset to access the internet. Please note down your login password for future use.

Q3. What should I do if I forget my wireless password?

The factory default wireless password is printed on the label of the extender.

If the password has been altered, please connect your computer to the extender using an Ethernet cable and follow the steps below:

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
2. Go to [Settings](#) > [Wireless](#) > [Wireless Settings](#) to retrieve or reset your wireless password.

Q4. What should I do if I cannot access the web management page?

This can happen for a variety of reasons. Please try the following to log in again.

- If your computer is wirelessly connected, make sure that you have connected to the extender's SSID.
- If your computer is connected via an Ethernet cable, please make sure that the connection is stable.
- Make sure your computer is set to obtain an IP address and DNS server address automatically.
- Verify that <http://tplinkrepeater.net> or <http://192.168.0.254> is correctly entered in the web browser and press [Enter](#).
- Use the IP address to access the extender. The default IP is [192.168.0.254](#). If the extender is connected to the router, you should go to your router's DHCP client list to obtain the extender's current IP address.
- Reset the extender and try again.

Q5. I have enabled wireless MAC filter, wireless access control, or access control list (ACL) on my router. What should I do before configuring

the extender?

When a device connects through the extender to your router, the MAC address of the device shown on the router is translated to another MAC address. If your router's MAC filter, wireless access control, or ACL is enabled, the devices connected to the extender cannot get an IP address from the extender and cannot access the internet.

To solve this problem, please follow the steps below:

1. Log in to your router and disable the MAC filter, wireless access control or ACL.

■ **Note:** For more information about how to disable your router's MAC filter, wireless access control or ACL, please refer to your router's user guide.

2. Power on your extender, and run the [Quick Setup](#) to configure your extender.
3. Connect all of your devices to the extended network, and make sure the router's Link LED remains lit.
4. On your router, add all the Online Devices' MAC addresses to your router's MAC filter table.
5. Enable the router's MAC filter, wireless access control, or ACL to complete the configuration.

COPYRIGHT & TRADEMARKS

Specifications are subject to change without notice.  tp-link is a registered trademark of TP-Link Technologies Co., Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from TP-Link Technologies Co., Ltd. Copyright © 2018 TP-Link Technologies Co., Ltd. All rights reserved.

FCC compliance information statement



Product Name: AC1200 Wi-Fi Range Extender with AC Pass-through

Model Number: RE365

Responsible Party:

TP-Link USA Corporation, d/b/a TP-Link North America, Inc.

Address: 145 South State College Blvd. Suite 400, Brea, CA 92821

Website: <http://www.tp-link.com/us/>

Tel: +1 626 333 0234

Fax: +1 909 527 6803

E-mail: sales.usa@tp-link.com

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement:

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

"To comply with FCC RF exposure compliance requirements, this grant is applicable to only Mobile Configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter."

This device is restricted in indoor environment only.

We, TP-Link USA Corporation, has determined that the equipment shown as above has been shown to comply with the applicable technical standards, FCC part 15. There is no unauthorized change is made in the equipment and the equipment is properly maintained and operated.

Issue Date: 2018-01-18

CE Mark Warning



This is a class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

OPERATING FREQUENCY (the maximum transmitted power)

2400 MHz -2483.5 MHz (20dBm)

5150 MHz -5250 MHz (23dBm)

5250 MHz -5350 MHz (23dBm)

5470 MHz -5725 MHz (30dBm)

EU Declaration of Conformity

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of directives 2014/53/EU, 2009/125/EC and 2011/65/EU.

The original EU declaration of conformity may be found at <http://www.tp-link.com/en/ce>

RF Exposure Information

This device meets the EU requirements (2014/53/EU Article 3.1a) on the limitation of exposure of the general public to electromagnetic fields by way of health protection.

The device complies with RF specifications when the device is used at 20 cm from your body.

Restricted to indoor use.

Canadian Compliance Statement

This device complies with Industry Canada license-exempt RSSs. Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. l'appareil ne doit pas produire de brouillage;
2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Caution:

1. The device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;

The high-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.

DFS (Dynamic Frequency Selection) products that operate in the bands 5250- 5350 MHz, 5470-5600MHz, and 5650-5725MHz.

Avertissement:

1. Le dispositif fonctionnant dans la bande 5150-5250 MHz est réservé uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux;

En outre, les utilisateurs devraient aussi être avisés que les utilisateurs de radars de haute puissance sont désignés utilisateurs principaux (c.-à-d., qu'ils ont la priorité) pour les bandes 5250-5350 MHz et 5650-5850 MHz et que ces radars pourraient causer du brouillage et/ou des dommages aux dispositifs LAN-EL.

Les produits utilisant la technique d'atténuation DFS (sélection dynamique des fréquences) sur les bandes 5250- 5350 MHz, 5470-5600MHz et 5650-5725MHz.

Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

Industry Canada Statement

CAN ICES-3 (B)/NMB-3(B)

Korea Warning Statements

당해 무선설비는 운용중 전파혼신 가능성이 있음.

NCC Notice & BSMI Notice

注意!

依據 低功率電波輻射性電機管理辦法

第十二條 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性或功能。

第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信規定作業之無線電信。低功率射頻電機需忍受合法通信或工業、科學以及醫療用電波輻射性電機設備之干擾。

於5.25GHz至5.35GHz區域內操作之無線設備的警告聲明
工作頻率5.250~5.350GHz該頻段限於室內使用。

安全諮詢及注意事項

- 請使用原裝電源供應器或只能按照本產品注明的電源類型使用本產品。
- 清潔本產品之前請先拔掉電源線。請勿使用液體、噴霧清潔劑或濕布進行清潔。
- 注意防潮，請勿將水或其他液體潑灑到本產品上。
- 插槽與開口供通風使用，以確保本產品的操作可靠並防止過熱，請勿堵塞或覆蓋開口。
- 請勿將本產品置放於靠近熱源的地方。除非有正常的通風，否則不可放在密閉位置中。
- 請不要私自打開機殼，不要嘗試自行維修本產品，請由授權的專業人士進行此項工作。

限用物質含有情況標示聲明書

產品元件名稱	限用物質及其化學符號					
	鉛 Pb	鎘 Cd	汞 Hg	六價鉻 CrVI	多溴聯苯 PBB	多溴二苯醚 PBDE
PCB	○	○	○	○	○	○
外殼	○	○	○	○	○	○
電源供應板	-	○	○	○	○	○
備考1. "超出0.1 wt %" 及 "超出0.01 wt %" 系指限用物質之百分比含量超出百分比含量基準值。						
備考2. "○"系指該項限用物質之百分比含量未超出百分比含量基準值。						
備考3. " - " 系指該項限用物質為排除項目。						



Продукт сертифіковано згідно с правилами системи УкрСЕПРО на відповідність вимогам нормативних документів та вимогам, що передбачені чинними законодавчими актами України.



Safety Information

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device.
- Do not use the device where wireless devices are not allowed.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.

- For passthrough devices, plug the power strips into the integrated electrical sockets of the devices, but devices of the same or another type not be stacked in normal use. 

Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.

For EU/EFTA, this product can be used in the following countries:

AT	BE	BG	CH	CY	CZ	DE	DK
EE	EL	ES	FI	FR	HR	HU	IE
IS	IT	LI	LT	LU	LV	MT	NL
NO	PL	PT	RO	SE	SI	SK	UK

Explanations of the symbols on the product label

Symbol	Explanation
	AC voltage
	Indoor use only
	RECYCLING This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.
	Protection earth