


LANCOM Transceiver-Module

Montageanleitung

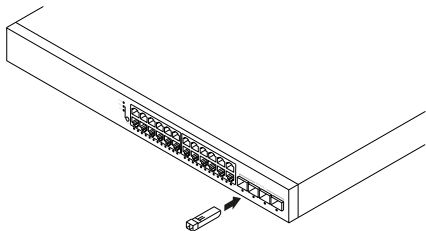

LANCOM Transceiver-Module

Für die bestmögliche Unterstützung wird der Einsatz der jeweils aktuellen Gerätefirmware empfohlen.

Transceiver-Modul einsetzen


- Nehmen Sie das Transceiver-Modul bzw. das Direct Attached Cable vorsichtig aus der Verpackung.
- Schieben Sie das Modul bzw. das Direct Attached Cable mit leichtem Druck in einen freien SFP-Steckplatz des Switches bzw. des Glasfaser-Routers oder der Firewall. In der korrekten Position rastet das Transceiver-Modul mit einem leichten Klicken ein.
- Ziehen Sie die schwarze Schutzkappe aus dem Transceiver-Modul und heben Sie diese für die spätere Verwendung auf.
- Führen Sie das entsprechende Glasfaser- bzw. Kupferkabel in die Buchse des Transceiver-Moduls ein.

Transceiver-Modul entfernen

- Ziehen Sie das Glasfaser- bzw. Kupferkabel aus der Buchse des Transceiver-Moduls.
- Drücken Sie den Sicherungsbügel des Transceiver-Moduls nach unten. Das Transceiver-Modul löst sich so aus der Arretierung.
- Ziehen Sie das Transceiver-Modul aus der Buchse des Switches bzw. des Glasfaser-Routers oder der Firewall, setzen Sie die schwarze Schutzkappe in das Transceiver-Modul ein und verstauen Sie das Modul wieder in der Verpackung.

LANCOM Transceiver Modules

Mounting instructions

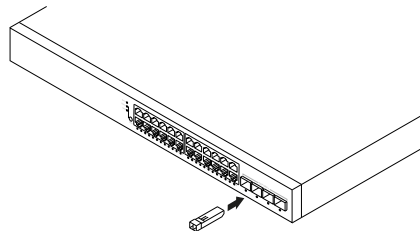

LANCOM Transceiver Modules

For the best possible support it is recommended to use the latest device firmware.

Inserting the transceiver module

- Carefully unpack the transceiver module or the Direct Attached Cable.
- Push the module or the Direct Attached Cable with light pressure into a free SFP slot of the switch, the fiber optic router or firewall. In the correct position, the transceiver module locks into place with a slight click.
- Pull the black protective cap from the transceiver module and store it safely for later use.
- Insert the optical fiber or copper cable into the transceiver module's socket.

Removing the transceiver module

- Pull the optical fiber or copper cable out of the transceiver module's socket.
- Press the retaining clip of the SFP module downwards. This releases the transceiver module from the locking mechanism.
- Pull the transceiver module out of the socket of the switch, the fiber optic router or firewall, insert the black protective cap into the transceiver module and put the module back into the packaging.

LANCOM Systems GmbH | Adenauerstr. 20/B2 | 52146 Wuerselen | Germany | info@lancom.de | www.lancom-systems.com

© 2024 LANCOM, LANCOM Systems, LCOS, LANcommunity und Hyper Integration sind eingetragene Marken. Alle anderen verwendeten Namen und Bezeichnungen können Marken oder eingetragene Marken ihrer jeweiligen Eigentümer sein. Dieses Dokument enthält zukunftsbezogene Aussagen zu Produkten und Produkteigenschaften. LANCOM Systems behält sich vor, diese jederzeit ohne Angaben von Gründen zu ändern. Keine Gewähr für technische Ungenauigkeiten und / oder Auslassungen. © 2024 LANCOM Systems GmbH, Wuerselen (Germany). All rights reserved. LANCOM, LANCOM Systems, LCOS, LANcommunity and Hyper Integration are registered trademarks. All other names or descriptions used may be trademarks or registered trademarks of their owners. This document contains statements relating to future products and their attributes. LANCOM Systems reserves the right to change these without notice. No liability for technical errors and / or omissions. 111728 08/2024



LANCOM
SYSTEMS