Quick guide / User Manual

Vertical Mouse **Evoluent D Wireless**

BAKKER ELKHUIZEN




Evoluent®

Vertical Mouse
Evoluent D Wireless

With a standard mouse, the wrist is fully turned, i.e. the palm faces downwards. This is not a natural posture.

When you place your wrist in the ‘handshake grip’ position, it has assumed a neutral posture.
This is easier to maintain and is, at the same time, more pleasant.
And the more comfortable you are sitting in front of your computer, the more productive you are.

The Evoluent Mouse is the most advanced vertical mouse in the BakkerElkhuizen product portfolio.

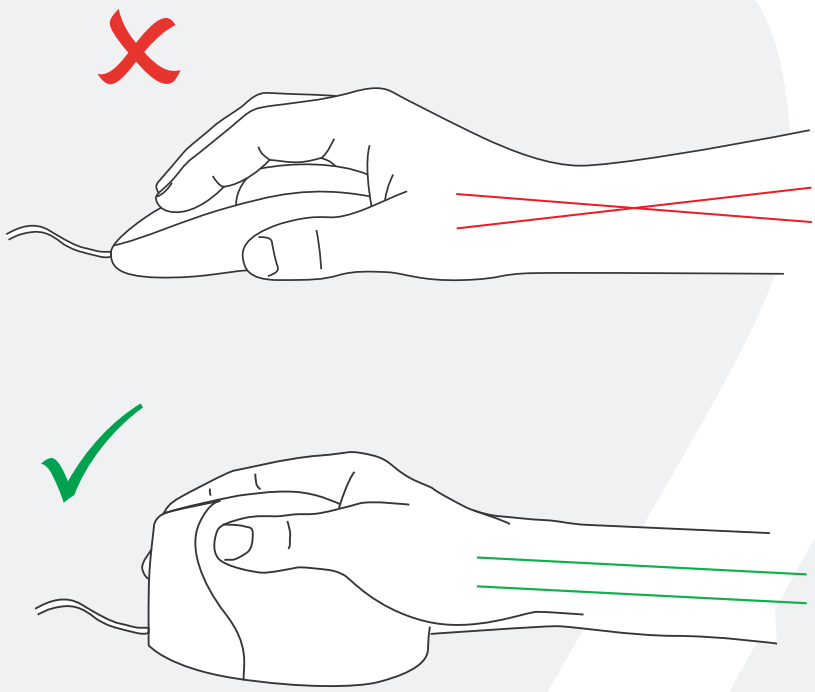

BAKKER ELKHUIZEN

Vertical Mouse
Evoluent D Wireless

Standard button settings

1. Top button - left click
2. Middle button - auto-scroll
3. Bottom button - right click
4. Upper thumb button - back
5. Bottom thumb button - no function without driver



BAKKER ELKHUIZEN

Vertical Mouse
Evoluent D Wireless

Set speed

Press the button on the side of the mouse to set the speed. Current setting can be read from the indicator lights on the top of the mouse.




BAKKER ELKHUIZEN


Vertical Mouse
Evoluent D Wireless

Windows Install

Before connecting Evoluent Mouse, go to Control Panel, Add or Remove Programs and remove any previous Evoluent Mouse Manager and any other mouse software, except touchpad driver. If there is no mouse software listed, skip this step.

- Before connecting the Evoluent Mouse, go to Control Panel, Mouse, and:
  1. Uncheck the box for Swap Primary and Secondary Buttons.
  2. Uncheck the box for Enhance Pointer Precision. This is very important.
  3. In Pointer Options, set the pointer speed slider to the middle position.
- Insert the USB connector into a USB port directly on the computer.

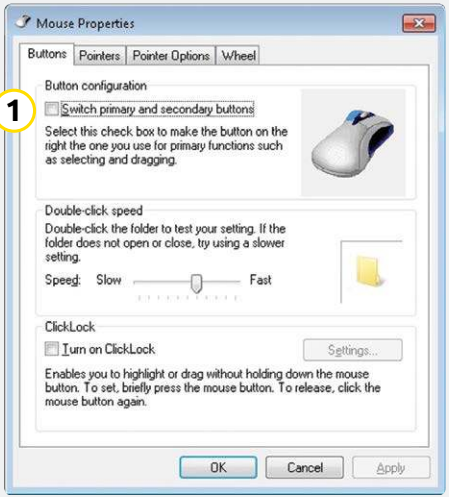

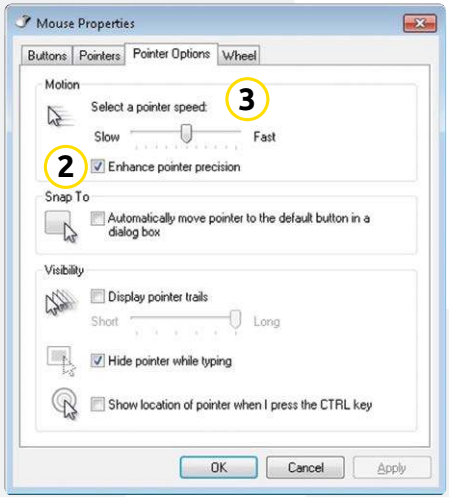

BAKKER ELKHUIZEN

Vertical Mouse
Evoluent D Wireless

Customize your Evoluent mouse

Download the latest MAC or Windows driver for your Evoluent Mouse

https://www.bakkerelkhuizen.com/ergonomic-mice/evoluent-d-wireless/

Driver


Evoluent Mouse Manager (driver) may optionally be installed to program the buttons. Download the most current driver from our website.

After you have completed the installation, you can program the buttons on the Evoluent.

You can even set different functions for each application!

See the list with the optional functions.

- Mouse Manager v5.5 Functions
- Disabled
- Left click
- Right click
- Wheel/middle click
- Alt
- Auto-pan
- Back
- Backspace
- Close
- Copy
- Ctrl
- Cut
- Delete
- Double click
- Drag scroll
- Enter
- Esc
- Explorer
- Eye comfort
- F1 - F12
- Forward
- Horizontal scroll
- Keystroke recording
- Launch application
- Maximize
- Minimize
- Page down
- Page up
- Paste
- Print screen
- Run
- Secondary functions
- Shift
- Show/hide desktop
- Spacebar
- Start
- Switch application
- Tab
- Undo
- Zoom

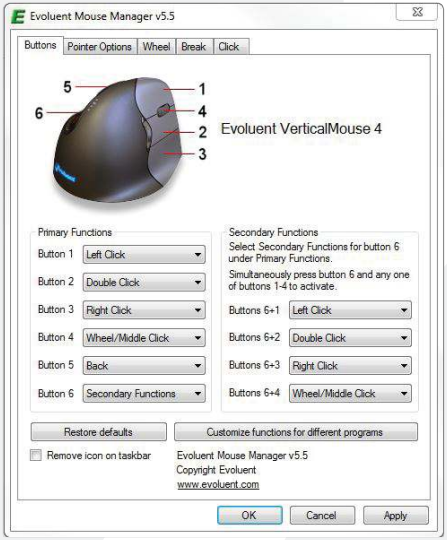



BAKKER ELKHUIZEN

Vertical Mouse
Evoluent D Wireless

Driver

1. Adjust the speed of the scroll wheel.
2. The click lock functions enables you to keep the left mouse button activated. Deactivate with another click.
3. The auto click function creates an automatic click after a set time on a clickable area.

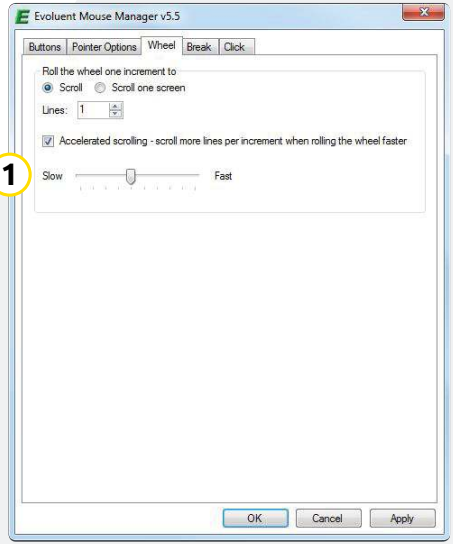


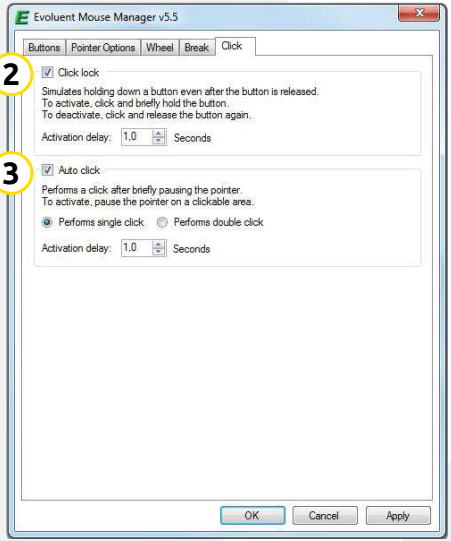

BAKKER ELKHUIZEN

Tip

Combine the Evoluent Mouse with a compact keyboard to reduce arm strain by reaching to the mouse.

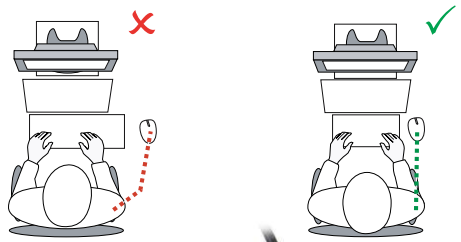



For more information about our ergonomic solutions,
go to our website: **www.bakkerelkhuizen.com**

BAKKER ELKHUIZEN

www.bakkerelkhuizen.com