

ACT Pre-terminated cables: Dismantle Protective Tubes Manual

ACT connectivity

⚠ WARNING: Install the cable before doing steps in the manual

STEP 1

Cut the tip of the protective tube





STEP 2


Cut and remove the heat shrink tube





STEP 3

Remove the tube

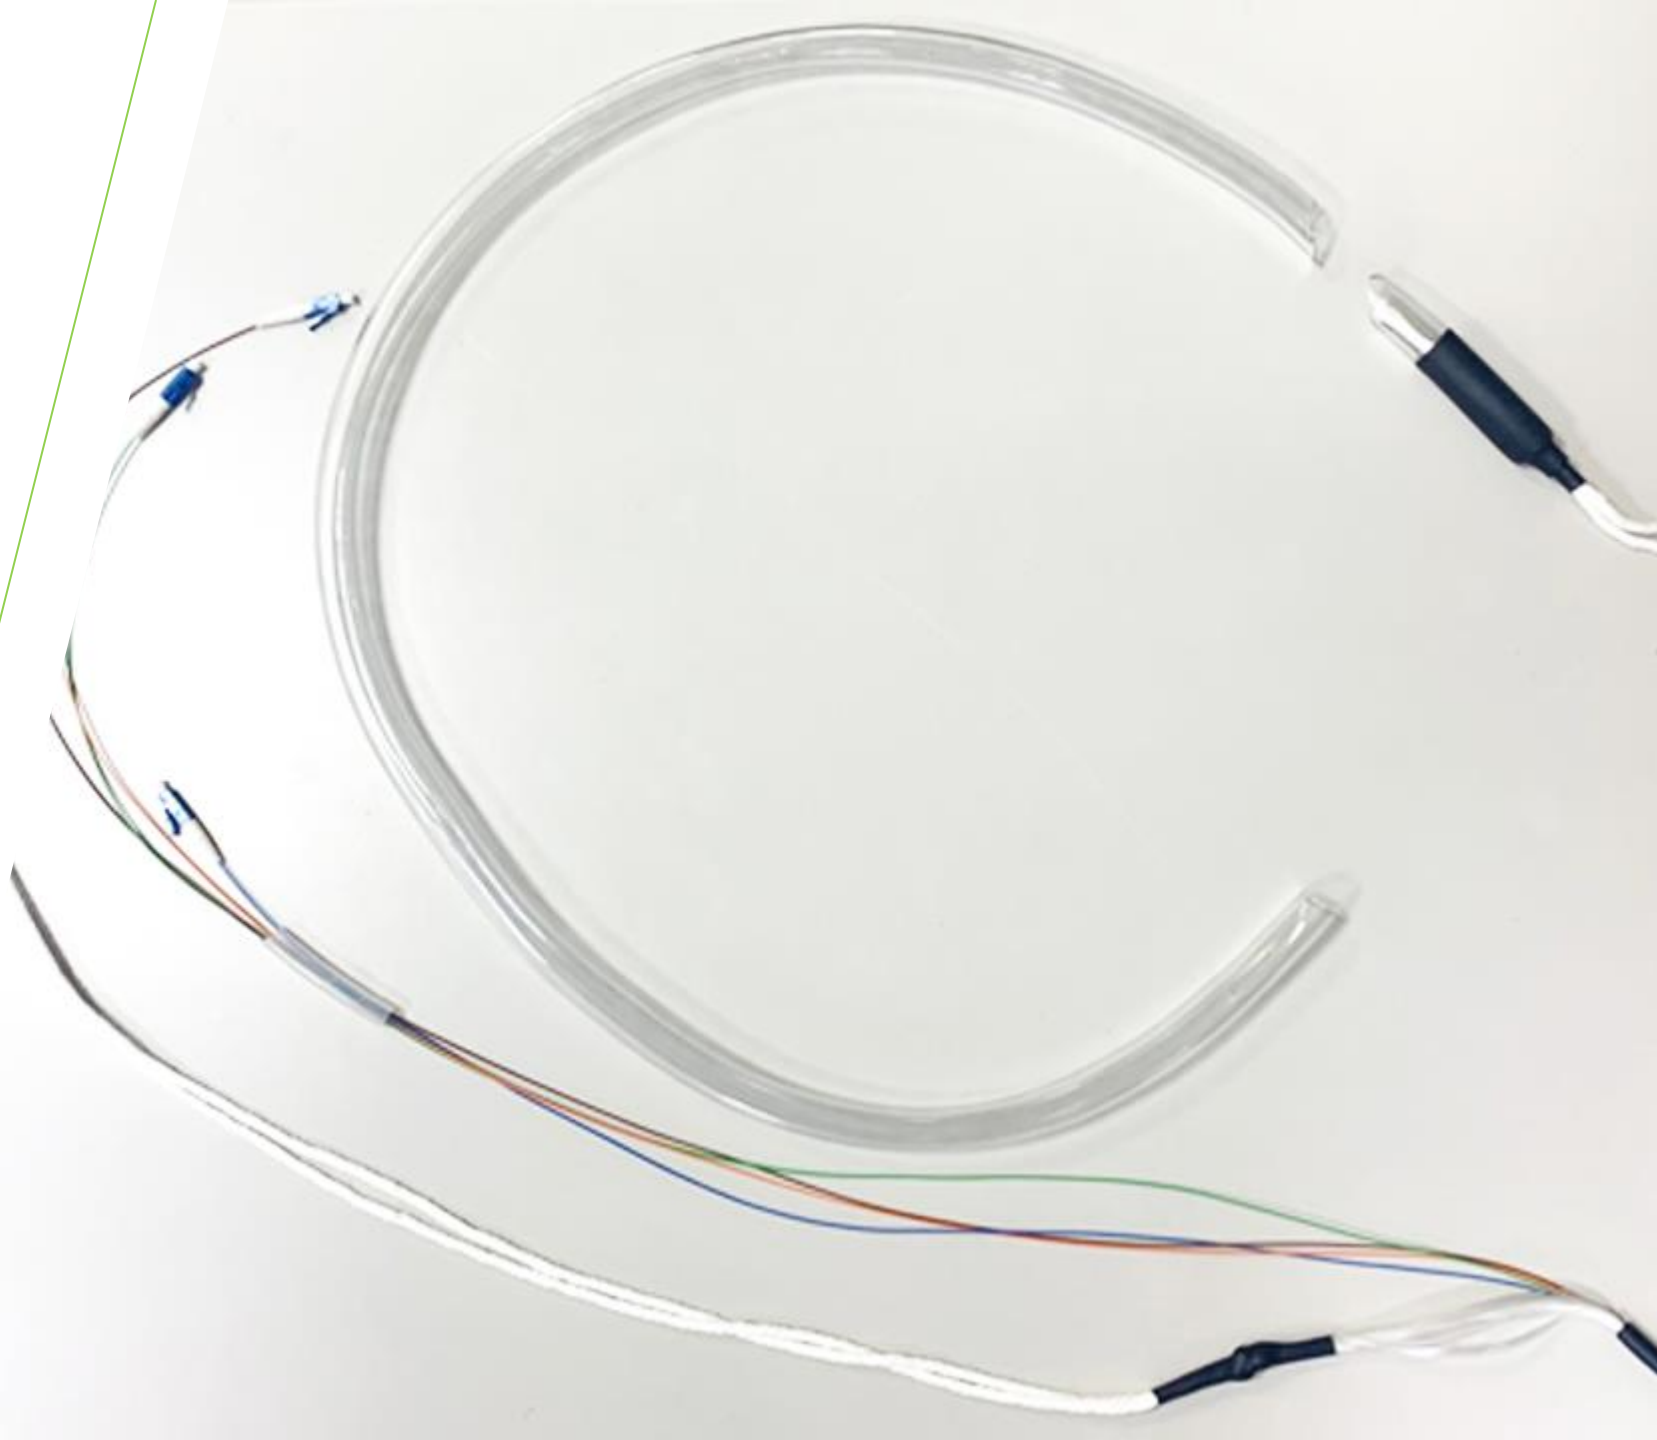

FINISHED

Cut the Kevlar

⚠ Do **NOT** cut off the Fiber Cords

