

Ingenico IPP350 PEDPack

Quick Installation Guide

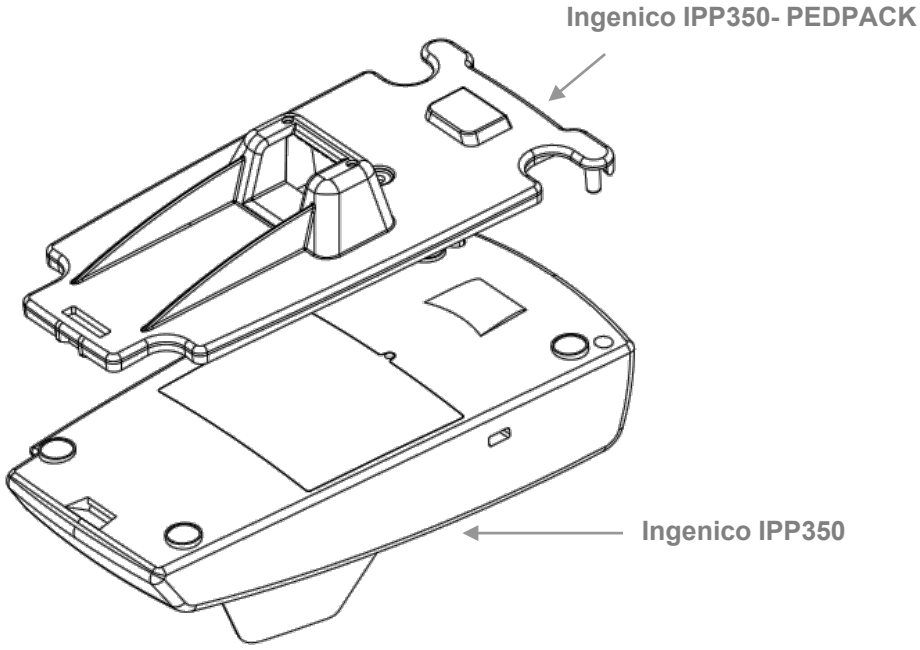

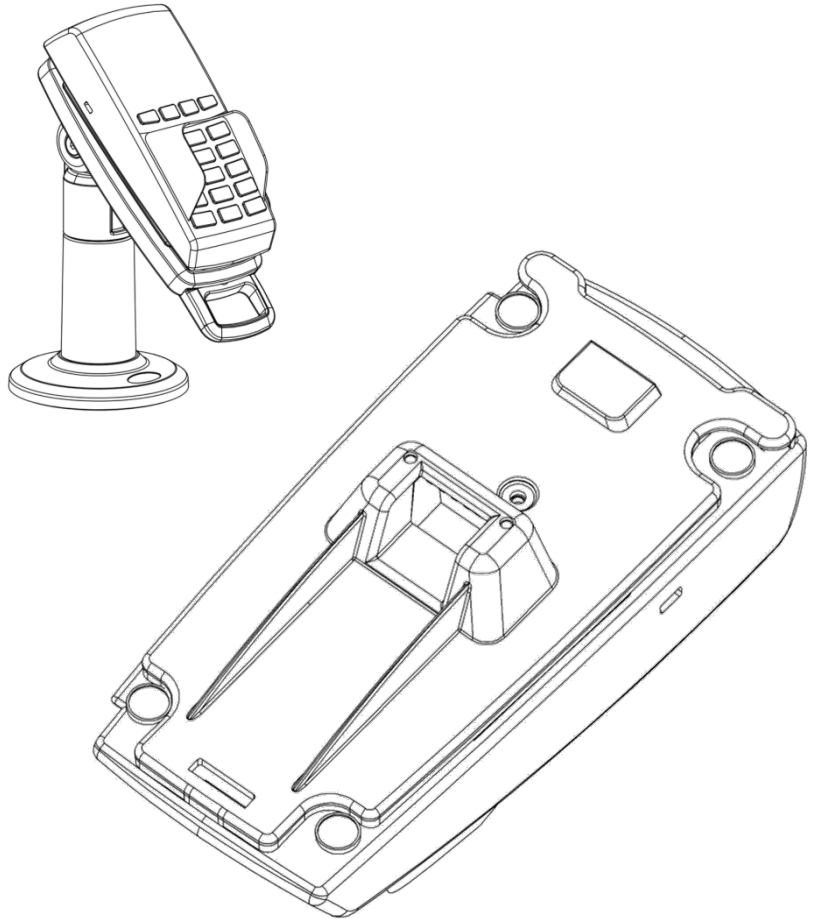

Ingenico IPP350- PEDPack

Quick Installation Guide


TOOLS


RECOMMENDED

Torque setting 40CNm for all screw fixings




PZ

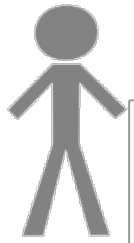

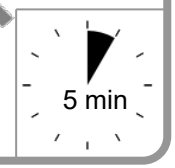


PARTS

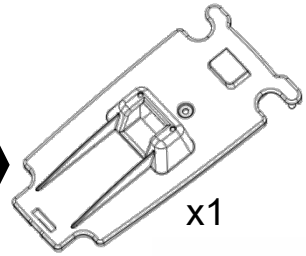





1A

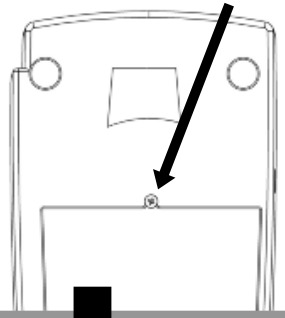


1B

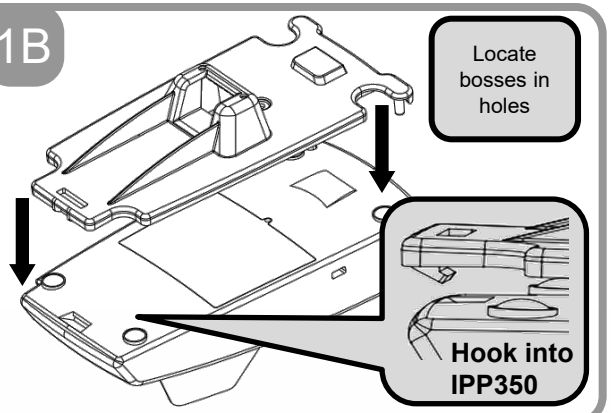


2

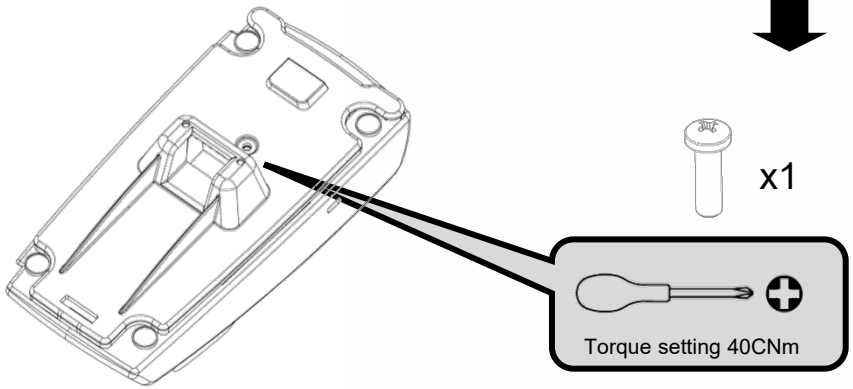

3

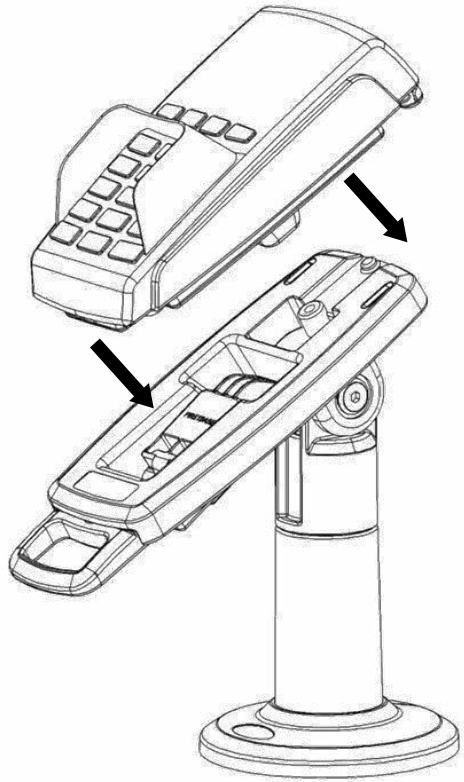

4

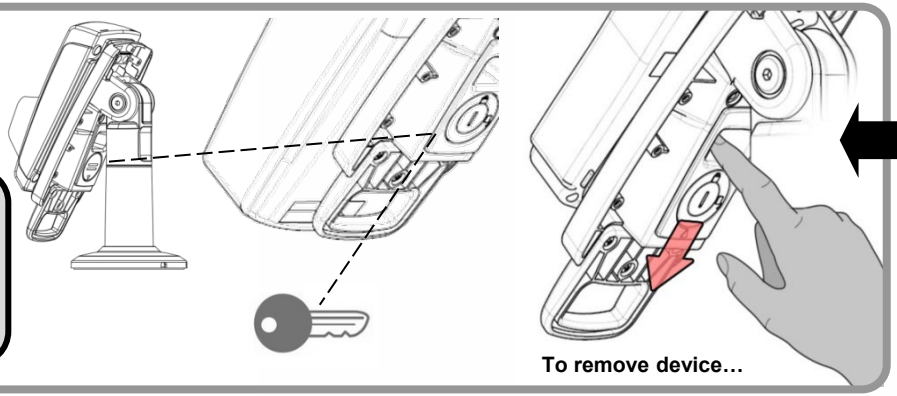

OPTIONAL

If locking device, turn key then remove to secure.

To unlock, first ensure key fitted.