

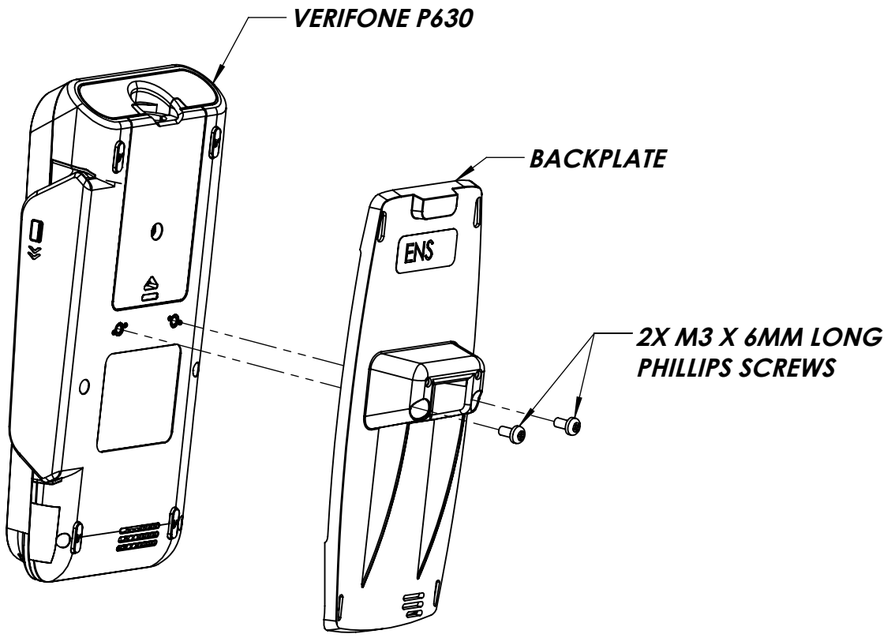


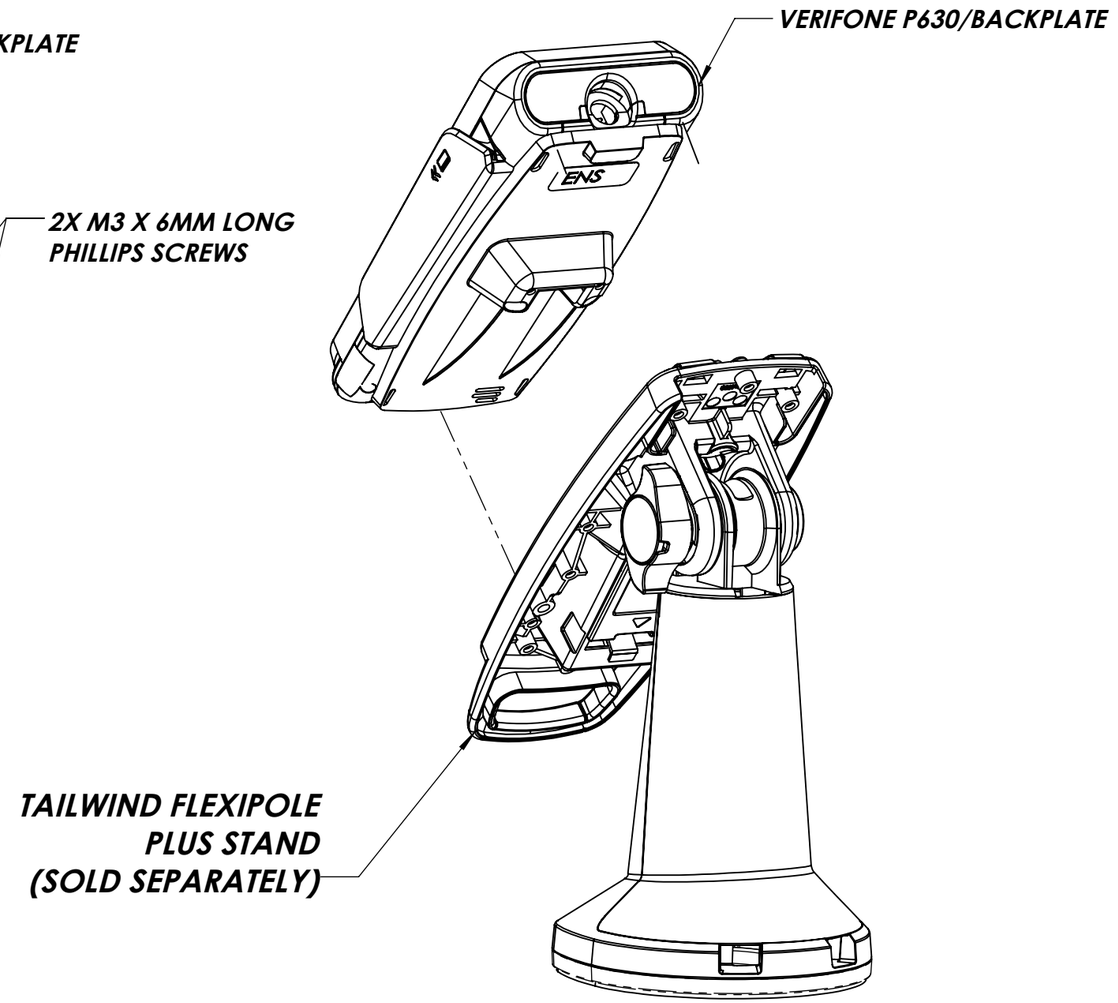

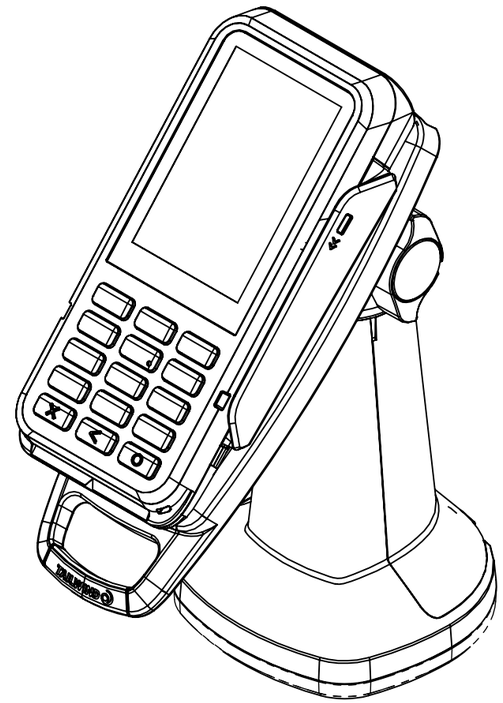

TOOL LIST:

1. #2 PHILLIPS SCREW OR DRILL DRIVER

ASSEMBLY STEPS:

1. CONNECT ***VERIFONE P630*** TO ***BACKPLATE*** AND SECURE USING ***2X M3 X 6MM LONG PHILLIPS SCREWS***.
2. ATTACH THE ***VERIFONE P630/BACKPLATE*** TO THE ***TAILWIND FLEXIPOLE PLUS STAND*** BY SNAPPING IT INTO PLACE AS SHOWN.
3. ROUTE THE ***DEVICE CABLE*** AS DESIRED.

CUSTOMER INSTRUCTIONS

REV.	DESCRIPTION	DATE	BY	CHK'D
A	INITIAL RELEASE	04/14/21	AN	AN

DRAWN A. NORLING
DATE 4/14/2021
CUSTOMER APPROVAL (SIGNATURE REQUIRED):
ALL DIMENSIONS ARE IN INCHES
DATE

HAVIS
14451 Ewing Ave - Burnsville, MN 55306 952-767-1005

TITLE BACKPLATE FOR VERIFONE P630

SIZE B | DWG. NO. CST00189 | REV. A | SHEET 1 OF 1

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF HAVIS AND REPRODUCTION IN PART OR IN WHOLE WITHOUT THE WRITTEN PERMISSION OF HAVIS IS PROHIBITED.