



1


TIGHTEN VESA MOUNTING  
PLATE AT 90°

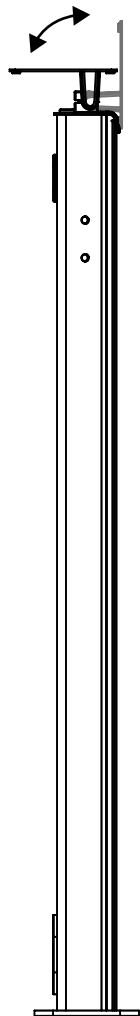

2

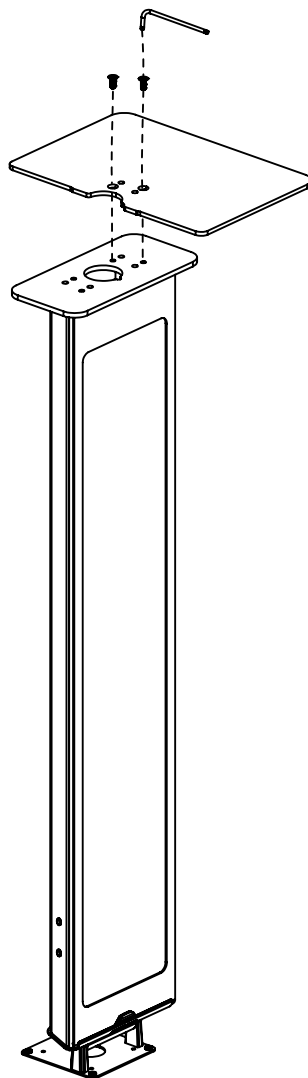


INVERT BRANDME TO STAND ON  
THE VESA MOUNTING PLATE  
AND INSTALL ONE BASE PLATE  
(L to L OR R to R)  
TO THE BOTTOM PLATE  
USING 2 x M6x14mm FLATHEAD  
SCREWS & TIGHTEN USING  
T-30 TORX SCREWDRIVER  
(SUPLLED WITH BRANDME STAND)

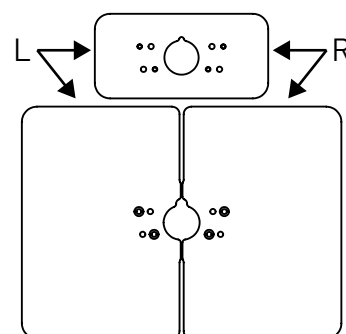

BRANDME BOTTOM VIEW


3

LAY BRANDME ON THE FLOOR/FLAT SURFACE  
AND INSTALL THE SECOND BASE PLATE  
(L to L OR R to R) USING 2 x M6x14mm  
FLATHEAD SCREWS & TIGHTEN USING T-30 TORX SCREWDRIVER  
(SUPLLED WITH BRANDME STAND)

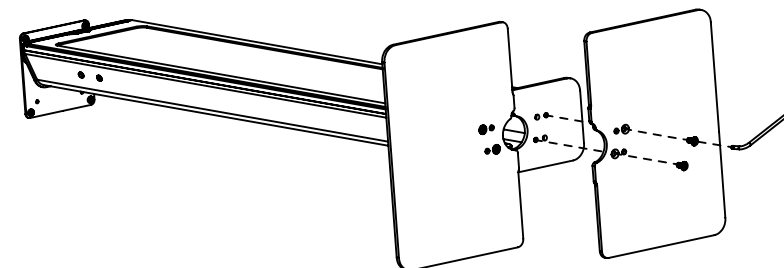


4


RETURN BRANDME TO  
UPRIGHT AND READJUST  
VESA MOUNTING PLATE

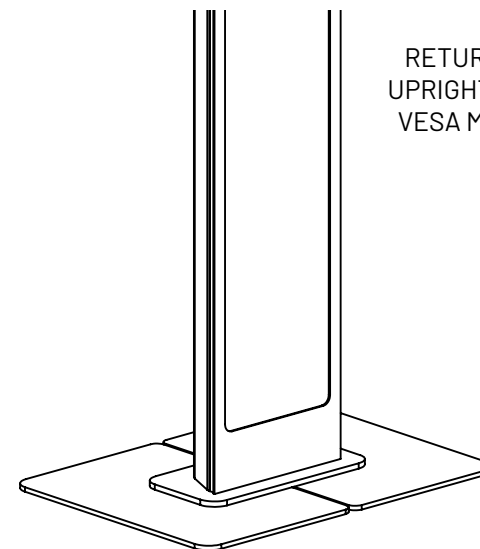

In The Box



Left Base Plate



Right Base Plate