

C6Amodul / C6Amodul K

AWG 26/1 - 22/1, AWG 26/7 - 22/7

A897/899426

- (de) Montagehinweis für den Installateur
- (en) Mounting note for the installer
- (fr) Notice d'installation pour l'installateur


Modul 270°

130B12-E



Modul 90°

130B13-E

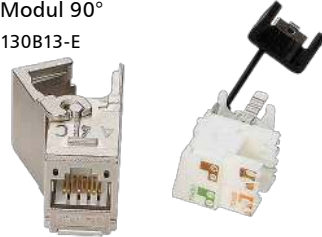


Keystone 270°

130B22-E



Keystone 90°

130B23-E

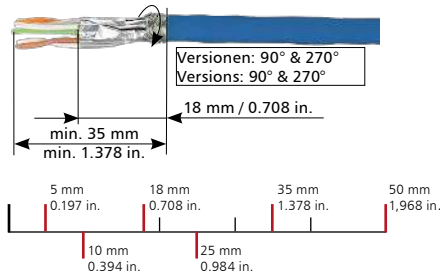


HINWEIS / NOTE / NOTICE

- (de) **Kabel AWG 26!**
Schirmgeflecht 5 mm über den Kabelmantel aufbringen.
- (en) **Cable AWG 26!**
Wrap the braided shield 5 mm over the cable sheath.
- (fr) **Câble AWG 26 !**
Enrouler le blindage tressé 5 mm autour du gainage.


Anschlussbelegung / PIN assignments Affectation des brins

PIN Nr. / No.	T568A	T568B
1	WH-GN	WH-OG
2	GN	OG
3	WH-OG	WH-GN
4	BU	BU
5	WH-BU	WH-BU
6	OG	GN
7	WH-BN	WH-BN
8	BN	BN


130B12-E / 130B22-E 270°

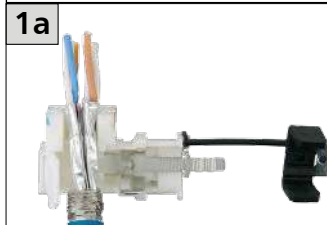


130B13-E / 130B23-E 90°

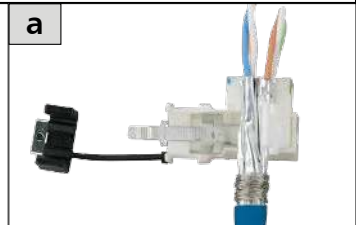

Installation d'un câble Module/Keystone 270°

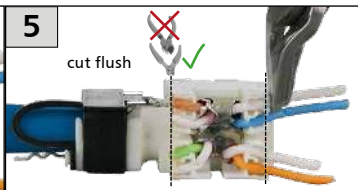


(fr) Installation d'un câble Module/Keystone 90°

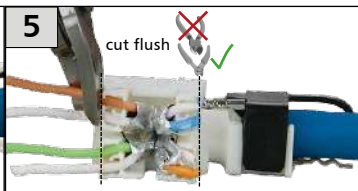

Nicht schräg einstecken! - Do not plug diagonally! - Ne pas insérer en diagonal !



Demontage / Disassembly / Démontage

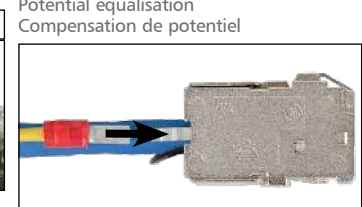

Compensation de potentiel

Compensation de potentiel optionnelle par
lanquette à 2,8 mm