


Neomounts®

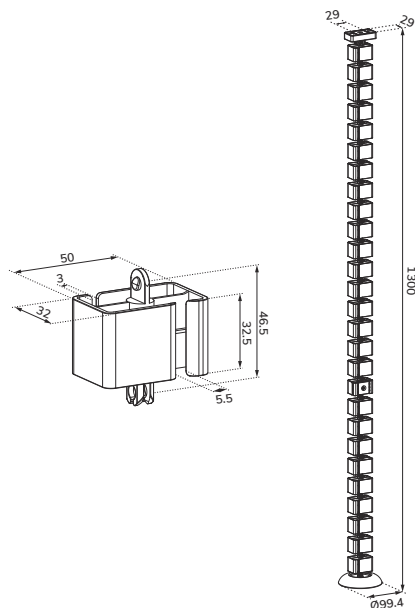

Measuring unit: mm

ADS06-132BL

EN Cable spine

NL Kabelmanagement

DE Kabelmanagement

FR Gestion des câbles

IT Gestione dei cavi

ES Gestión de los cables

PT Gestão de cabos

DK Kabelstyling

NO Kabelsamlar

SE Kabelsamlare

FI Kaapeleiden hallinta

PL Zarządzania kablami

CS Systém na uspořádání kabelů

SK Organizátor káblov

RO Managementul cablurilor




Tool




130 cm

ADS06-132BL


PARTS



A. (x3)



B. (x1)



C. (x2)



D. (x1)




E. (x1)



F. M5x20
(x1)




G. M5
(x1)




H. 8 mm
(x1)


STEP 1

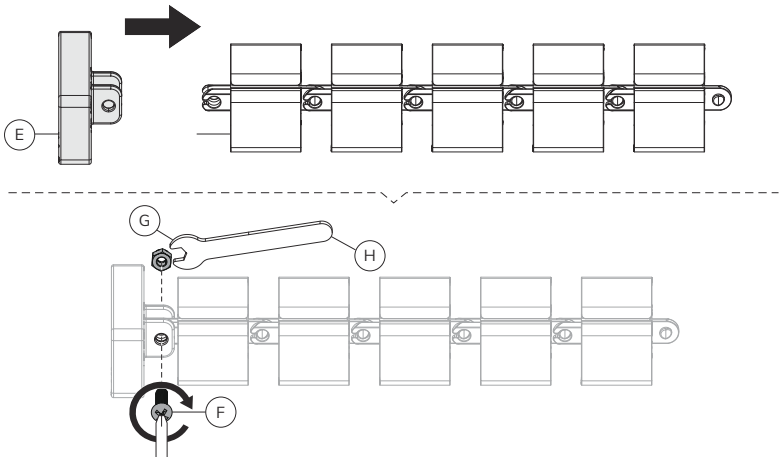


STEP 2

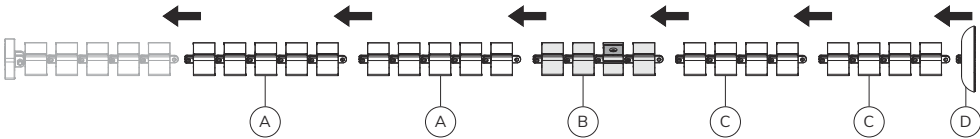

Note: When joining the spine parts, ensure the same channels on the same side.

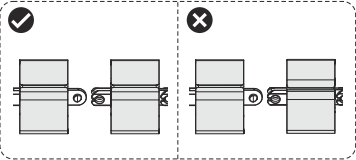

STEP 3

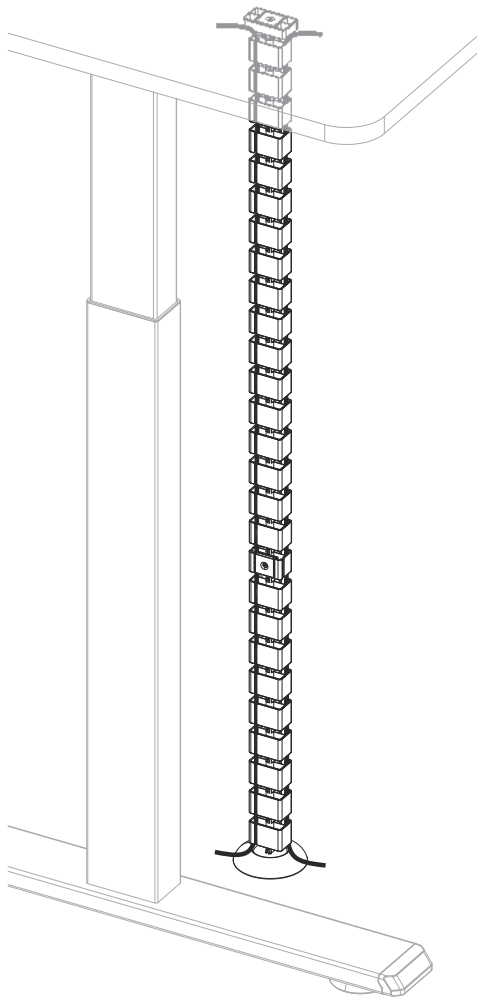

Choose the desired location for attaching the magnets to the desk frame.

NOTE: Magnets will only attach to metal areas of the desk frame.

