



1


TIGHTEN VESA MOUNTING
PLATE AT 90°

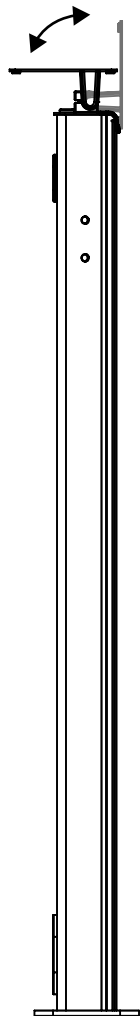

2

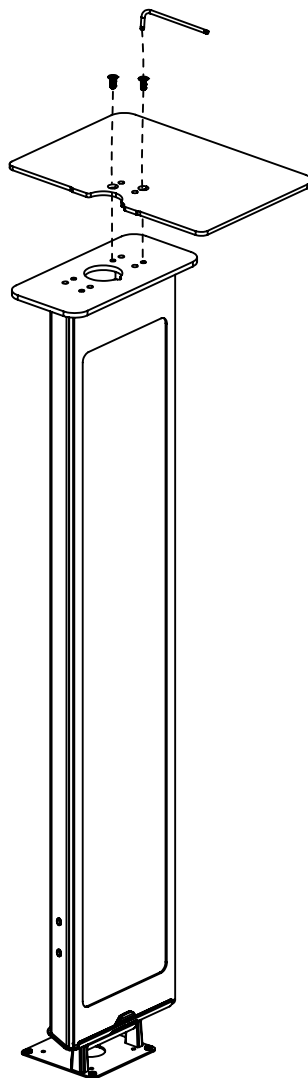


INVERT BRANDME TO STAND ON
THE VESA MOUNTING PLATE
AND INSTALL ONE BASE PLATE
(L to L OR R to R)
TO THE BOTTOM PLATE
USING 2 x M6x14mm FLATHEAD
SCREWS & TIGHTEN USING
T-30 TORX SCREWDRIVER
(SUPLLED WITH BRANDME STAND)

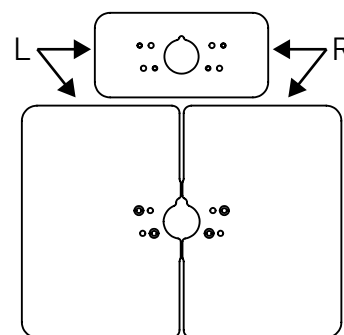

BRANDME BOTTOM VIEW


3

LAY BRANDME ON THE FLOOR/FLAT SURFACE
AND INSTALL THE SECOND BASE PLATE
(L to L OR R to R) USING 2 x M6x14mm
FLATHEAD SCREWS & TIGHTEN USING T-30 TORX SCREWDRIVER
(SUPLLED WITH BRANDME STAND)

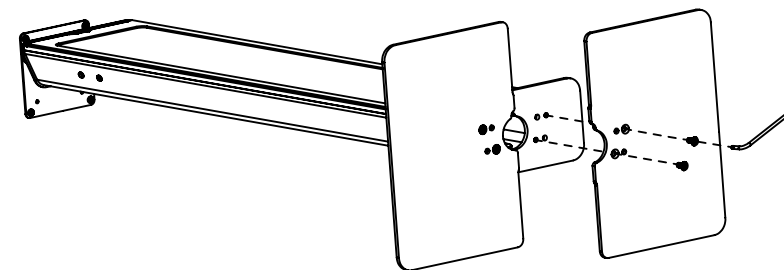


4


RETURN BRANDME TO
UPRIGHT AND READJUST
VESA MOUNTING PLATE

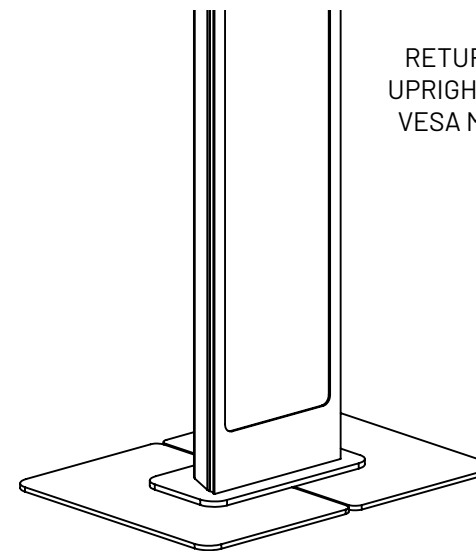

In The Box



Left Base Plate



Right Base Plate