
# Flat Pack Double Section Wallmount Cabinet Assembly Guide

## Package Contents

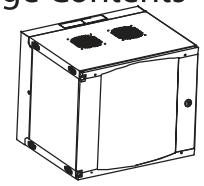

**Max. 30kg**

## Item list of Accessories Package

| E | F | G | H | J | K | L | M |
|---|---|---|---|---|---|---|---|
| 1x Usage Instruction | 10x M6x12mm screw & nuts (20pcs for over 12U) | 18x M5x10mm screw | 1x Guide piece 1x M4x10mm screw | 4x M5 nut | 2x M5x14mm screw | 2x Key | 1x Label |

## Required for Installation



Drill

∅ 12 Drill Bits




Screwdriver




M8 bolt

## a

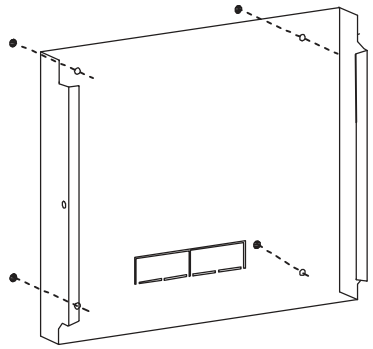

∅ 12


## b

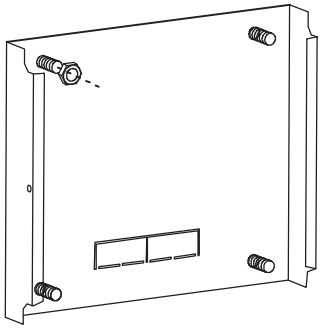

4x




## c

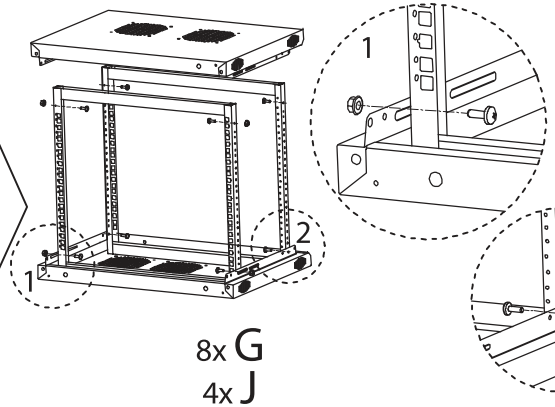



8x G
4x J


## d

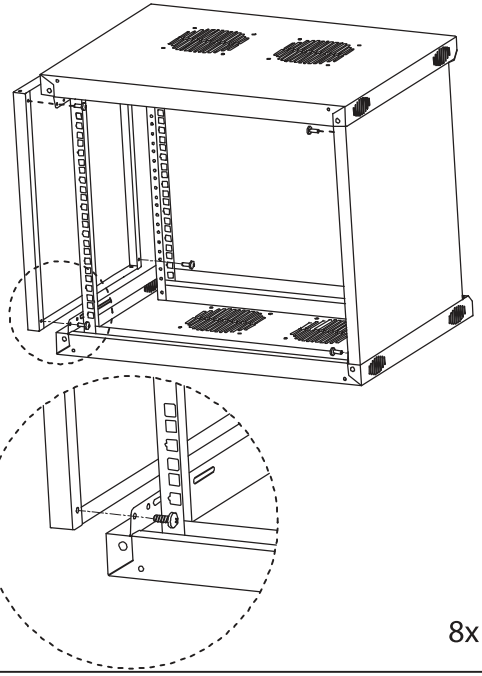


8x G

## e

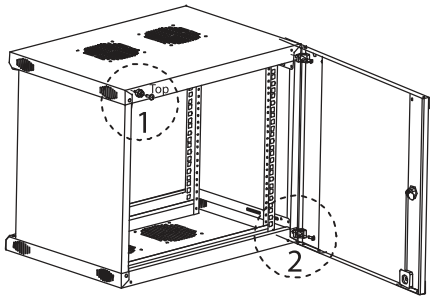

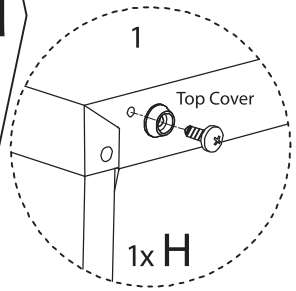



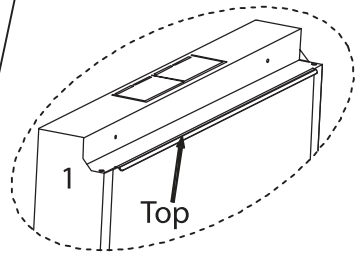

1x H

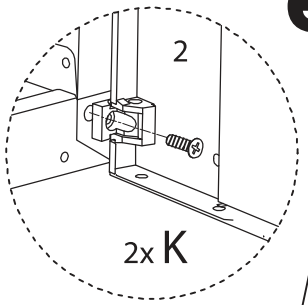



2x K


## f

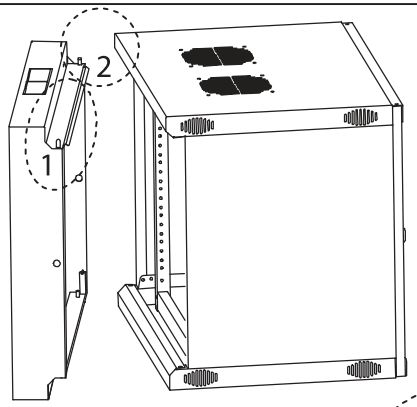

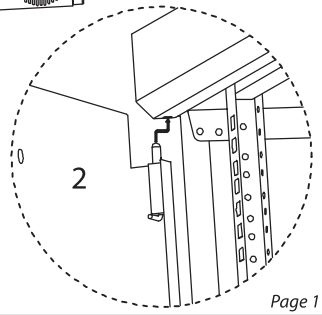



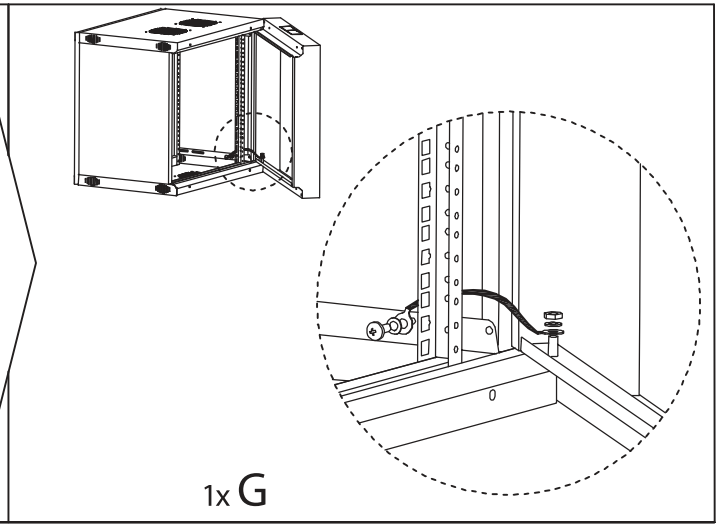



# Flat Pack Double Section Wallmount Cabinet Assembly Guide

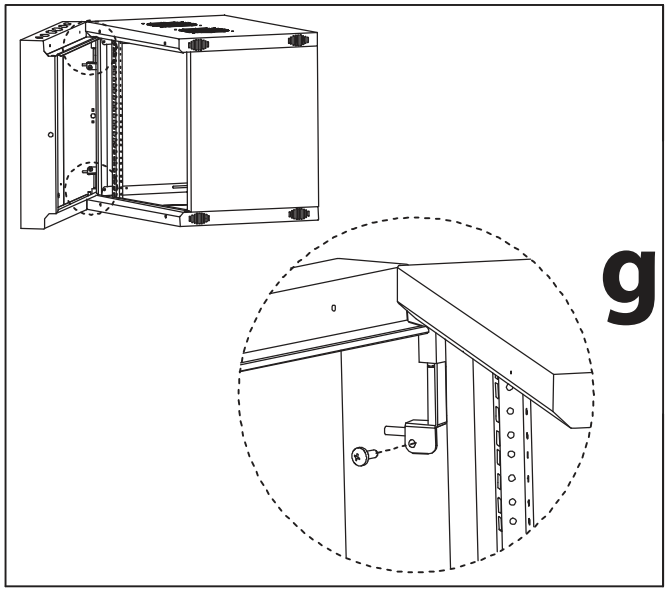



## Ground / Earthing Installation

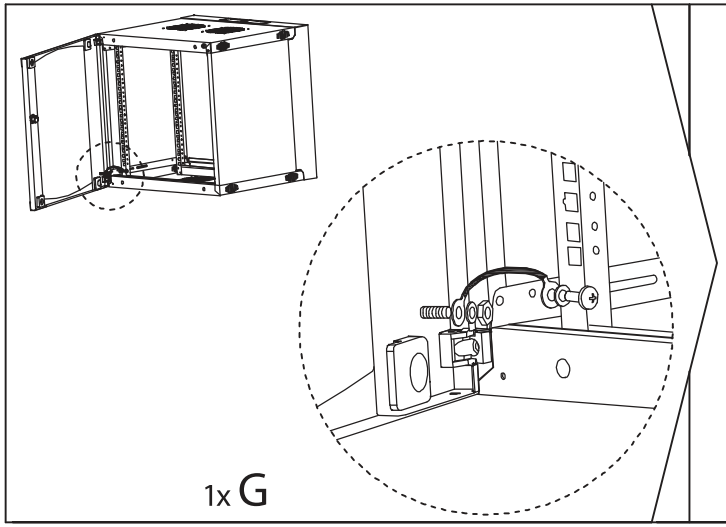




## How to Convert Rear Door Opening Direction

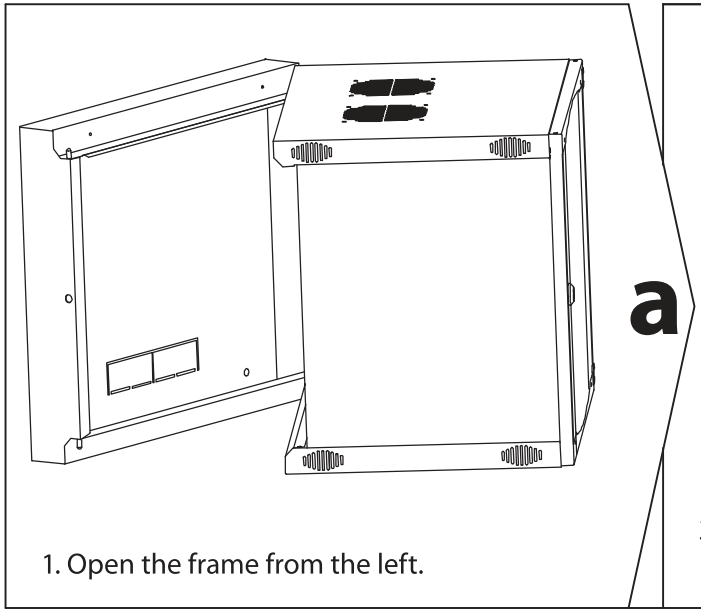


1. Open the frame from the left.

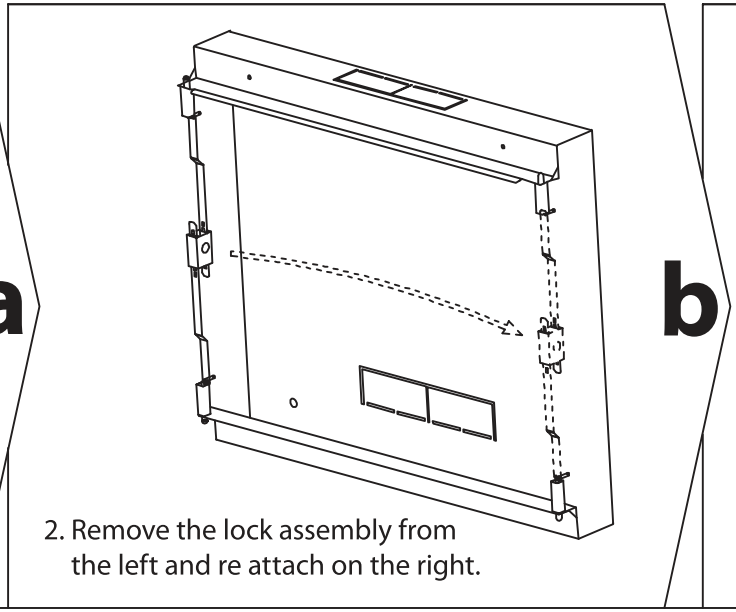


2. Remove the lock assembly from the left and re attach on the right.

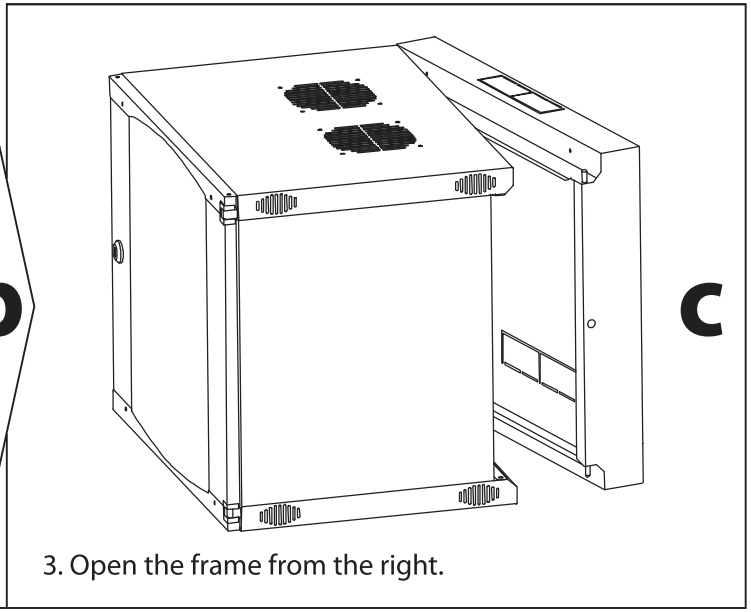


3. Open the frame from the right.

**For more information, visit: intellinetnetwork.com**

*© IC Intracom. All rights reserved. Intellinet Network Solutions is a trademark of IC Intracom, registered in the U.S. and other countries. For specifications, go to intellinet-network.com. For warranty information, go to intellinetnetwork.com/warranty.*