


# 19" FLAT PACK RACK CABINET ASSEMBLY INSTRUCTIONS

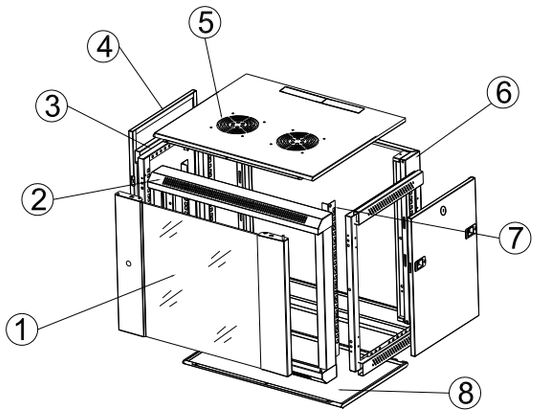



**1** Front door
**2** Front frame
**3** Side frame x2
**4** Side panel x2
**5** Top
**6** Back frame
**7** Mounting rail x2
**8** Bottom

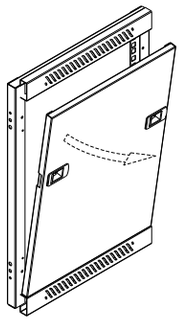


**1** Remove the side panels (**4**) from the side frames (**3**) and set them aside.

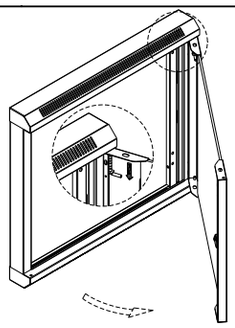


**2** Use the included key to pull open the door (**1**) and remove it from the front frame (**2**) by pushing down on the latch.

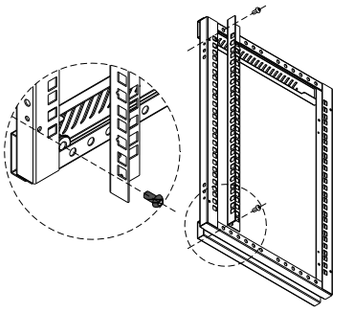


**3** Use the 4 included M5 screws to attach a mounting rail (**7**) to each side frame (**3**).

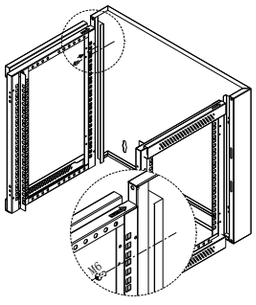


**4** Use 4 of the included M6 screws (use 6 for larger units) to attach each of the 2 side frames (**3**) to the back frame (**6**).

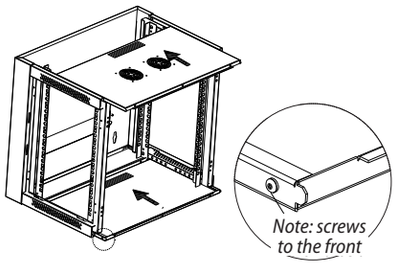



**5** Slide the top (**5**) and the bottom (**8**) into place.

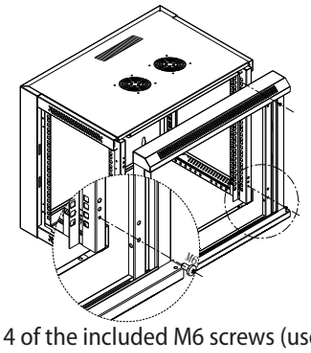

**6** Use 4 of the included M6 screws (use 6 for larger units) to attach the front frame (**2**) to the assembly.

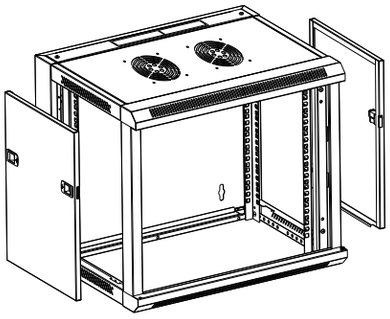

**7** Install the 2 side panels (**4**).

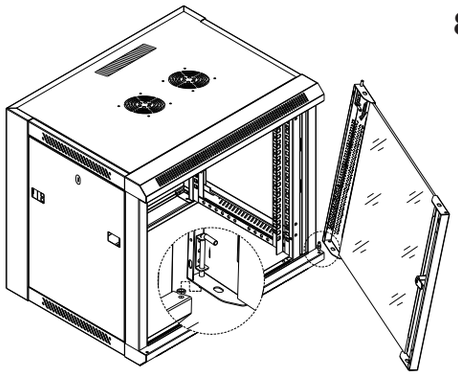

**8** Reverse Step 2 by inserting the lower door latch into the frame and then pushing down on the upper door latch to install the front door (**1**). Note: Once the unit is assembled, check that all corners are square to ensure that the door opens and closes properly.


**North & South America**
IC Intracom Americas
550 Commerce Blvd.
Oldsmar, FL 34677
USA


**Asia & Africa**
IC Intracom Asia
4-F, No. 77, Sec. 1, Xintai 5th Rd.
Xizhi Dist., New Taipei City 221
Taiwan

**Europe**
IC Intracom Europe
Löhbacher Str. 7
D-58553 Halver
Germany



INTELLINET®
NETWORK SOLUTIONS

© IC Intracom. All rights reserved. Intellinet is a trademark of IC Intracom, registered in the U.S. and other countries. For specifications, go to intellinet-network.com. For warranty information, go to intellinet-network.com/warranty.


# 19" FLAT PACK WANDVERTEILER MONTAGE-ANLEITUNG

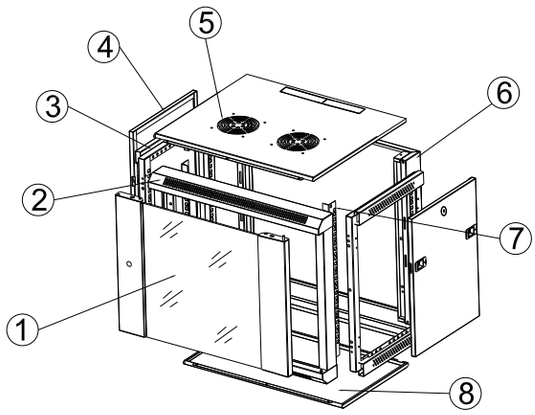



**1** Fronttür
**2** Frontrahmen
**3** Seitenrahmen x2
**4** Seitenwand x2
**5** Oberseite
**6** Rückseitiger Rahmen
**7** Montageschienen x2
**8** Bodenplatte

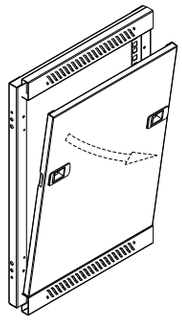


**1** Nehmen Sie die Seitenwände (**4**) vom Seitenrahmen (**3**) ab und legen Sie sie zur Seite.

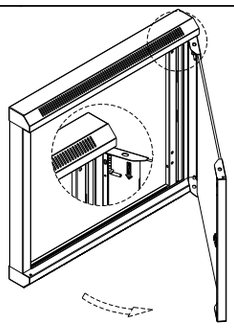


**2** Öffnen Sie die Tür (**1**) mit dem beiliegenden Schlüssel und nehmen Sie sie vom Frontrahmen (**2**) ab, indem Sie den Scharnierstift nach unten drücken.

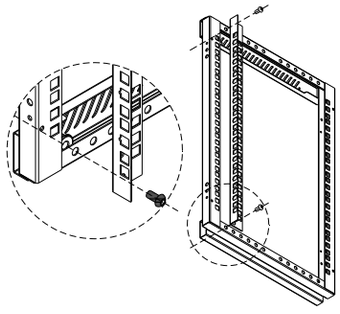


**3** Verwenden Sie 4 beiliegende M5-Schrauben, um eine Montageschiene (**7**) an jedem Seitenrahmen (**3**) zu befestigen.

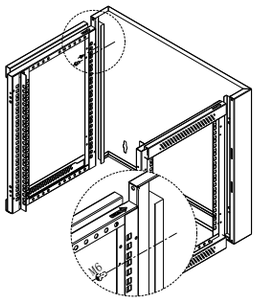


**4** Verwenden Sie 4 beiliegende M6-Schrauben (6 für größere Schränke), um die beiden Seitenrahmen (**3**) jeweils am rückseitigen Rahmen (**6**) zu befestigen.

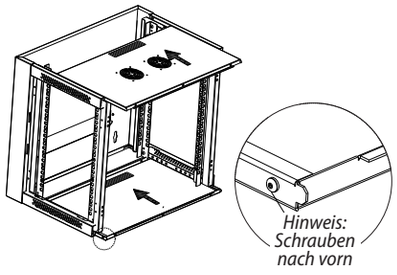



**5** Schieben Sie die Oberseite (**5**) und die Bodenplatte (**8**) in Position.

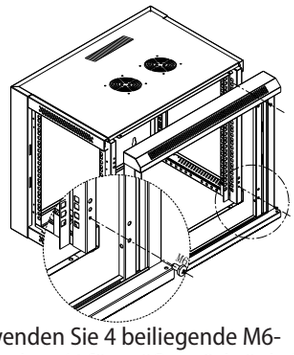

**6** Verwenden Sie 4 beiliegende M6-Schrauben (6 für größere Schränke), um den Frontrahmen (**2**) an der Konstruktion zu befestigen.

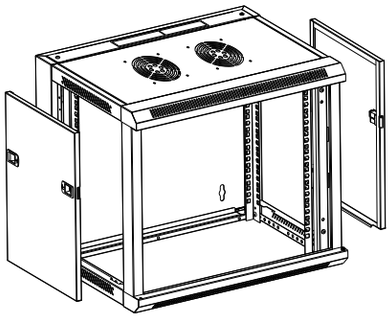

**7** Montieren Sie die 2 Seitenwände (**4**).

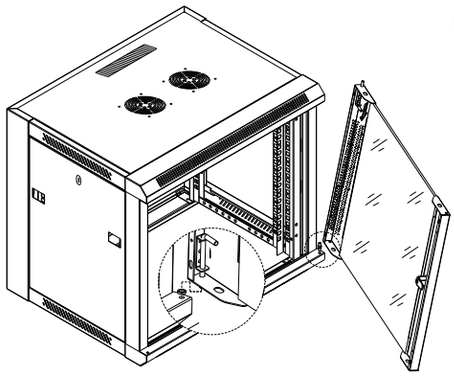

**8** Setzen Sie die Tür (**1**) aus Schritt 2 wieder ein, indem Sie den unteren Scharnierstift unten im Rahmen platzieren und den oberen an der Oberseite einsetzen. Hinweis: Sobald der Schrank montiert ist, prüfen Sie, dass alle Ecken genau rechtwinklig verbaut sind, damit die Tür ordnungsgemäß geöffnet und geschlossen werden kann.

INTELLINET®
NETWORK SOLUTIONS

Die Spezifikationen finden Sie auf intellinet-network.com.. Garantieinformationen finden Sie hier unter intellinet-network.com/warranty.