

WALL MOUNT PATCH PANEL QUICK START GUIDE


Thank you for purchasing this INTELLINET NETWORK SOLUTIONS™ Wall Mount Patch Panel.

Follow the steps on this quick start guide for easy installation and use of either the Cat5e or Cat6 version of this product.




12-port
Cat5e
UTP
model
shown

IDC (3 options)



3 6 5 4 3 6 5 4

1 2 7 8 1 2 7 8



110D
type



3 6 5 4 3 6 5 4

1 2 7 8 1 2 7 8



Krone
type





3 6 5 4 3 6 5 4

1 2 7 8 1 2 7 8



110D & Krone
IDC compatible

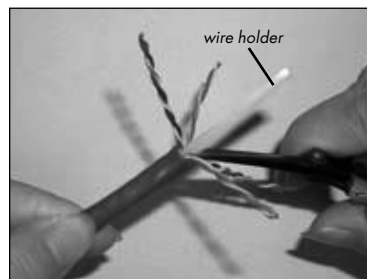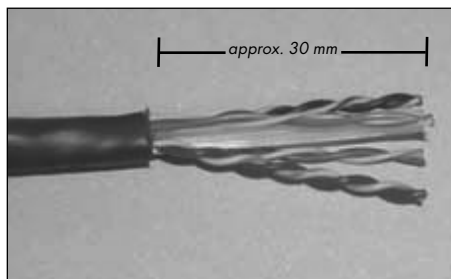

1. Carefully strip away approximately 30 mm of the cable jacket(s) (above left) to be connected to the Patch Panel, separating the wires into four pairs. Using a wire cutter, cut the wire holder (above right) flush with the cable jacket.

T568A

PIN 5 WHITE/BLUE
PIN 4 BLUE
PIN 1 WHITE/GREEN
PIN 2 GREEN
PIN 3 WHITE/ORANGE
PIN 6 ORANGE
PIN 7 WHITE/BROWN
PIN 8 BROWN

T568B

PIN 5 WHITE/BLUE
PIN 4 BLUE
PIN 1 WHITE/ORANGE
PIN 2 ORANGE
PIN 3 WHITE/GREEN
PIN 6 GREEN
PIN 7 WHITE/BROWN
PIN 8 BROWN



2. Follow the IDC color-code chart above to position the wires, then use a Krone punch-down tool to crimp and connect them.



www.intellinet-network.com

Are you completely satisfied with this product?
Please contact your
INTELLINET NETWORK SOLUTIONS™
dealer with comments or questions.

Copyright © INTELLINET NETWORK SOLUTIONS
All products mentioned are trademarks or registered trademarks
of their respective owners.