LANVIEW
PROFESSIONAL NETWORK SOLUTIONS

REVISIONS				
ZONE	REV	DESCRIPTION	DATE	DRAWN
	A	EG13078拉轉單	12/31'13	Tyron Wang

Instruction Sheet

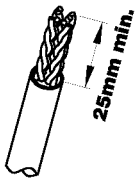

Step 1:
Strip off at least 25mm of jacket from end of cable.
NOTE: IDC is suitable for 22~24 AWG wires.

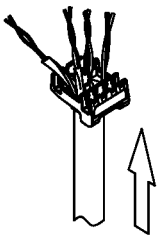

Step 2:
Insert the wires into the cap through the holes.



Step 3:
Lay the wires to the correct positions based on the color code. (T568A/T568B)

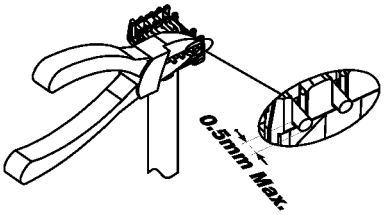

Step 4:
Cut the excess wires off. The tips of the wires should protrude no more than 0.5mm.

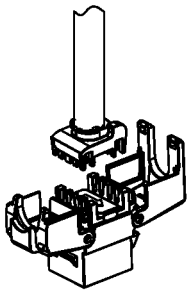

Step 5:
Put the cap on the IDC tower. The arrows on the jack and the cap should face the same direction. Put the cap into postion.

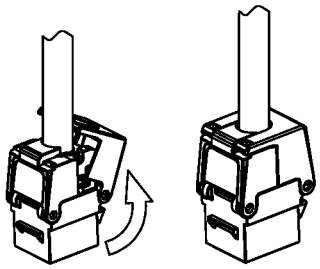

Step 6:
Close the jaws until hearing the click.

Disassembly Instruction:

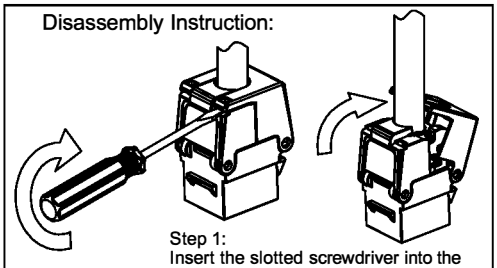

Step 1:
Insert the slotted screwdriver into the slot and rotate to open the jaws.

180.00

120.00

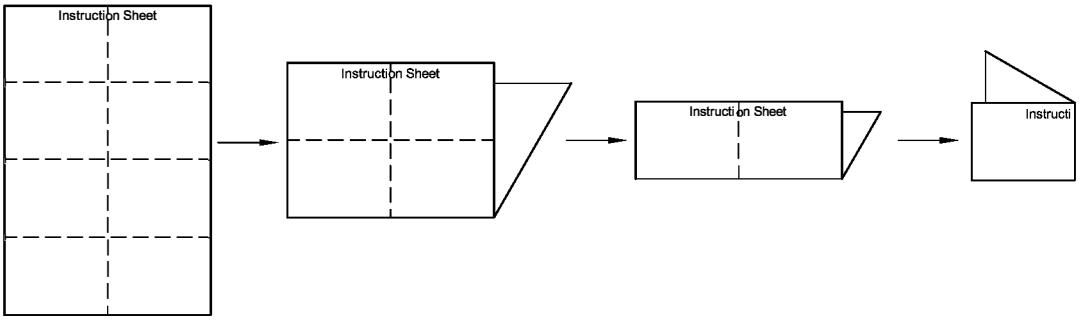

UNLESS OTHERWISE SPECIFIED: TOLERANCES			PROJECT ID		
INCH	MM	ANGULAR			
.X ± .016 .XX ± .008 .XXX ± .004	.X ± 0.2 .XX ± 0.1	X ± 1° .X ± .5°	FILE	DATE	
MATERIAL			DRAWN Tyron Wang	08/27'13	說明書
SURFACE			CHECK		
FINISH			APPROVED		

SIZE	DRAWING NUMBER	PART NUMBER	REV
A4			A
SCALE 1 : 1	UNIT mm	SHEET 1 OF 1	