

UltraStand Universal

Step-by-step guide: is my laptop suitable?



Is your laptop completely flat at the bottom and does your laptop have no cutouts? The UltraStand Universal fits if your laptop is at least 287 mm wide and 208 mm deep.

**Does your laptop have feet or other protruding elements?
Please follow the next steps:**

1. Print out the following page, full size and landscape

Cut out the UltraStand Universal.

Note: It is sufficient to cut out the outer lines.

The dotted lines represent the openings of the UltraStand Universal.

2. Lay the laptop with its bottom side up and its front side facing you.

3. Make sure the UltraStand Universal has the teeth facing you.

4. Position the UltraStand Universal as follows:

4a. Align the front of the UltraStand with the front of the laptop.

4b. Centre the UltraStand Universal horizontally.

Note: if the front of your laptop is sloped, align the front of the UltraStand with the sloped area.

5. Check if the UltraStand Universal fits your laptop.

5a. The UltraStand Universal fits if it falls within your notebook's feet or other protrusions and does not completely cover the cooler. The dotted boxes on the next page are actual openings in the UltraStand Universal for your cooling needs.

5b. If the UltraStand Universal falls on a base (strip) or other protrusion and/or the cooling system is (for the most part) covered by dense surfaces, the padding material supplied can be used to the height of these protrusions and to create extra space for ventilation.




Remove



Instructions video
without the supplied
padding material




Instructions video
with the supplied
padding material

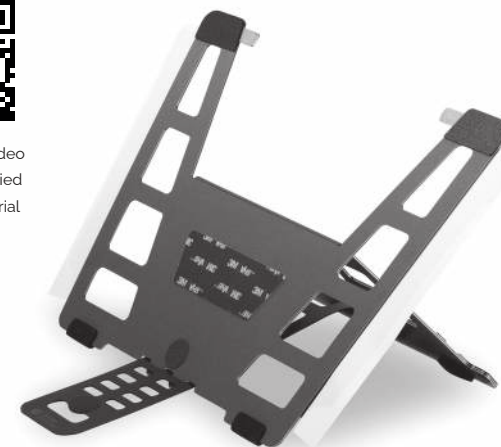

Lynton House
7 - 12 Tavistock Square
London WC1HgLT
United Kingdom
tel. +44 203 6083569
email. info@bakkerelkhuisen.com

All rights reserved. All trade names are registered trademarks of the respective manufacturers. All specifications are subject to change without notice.

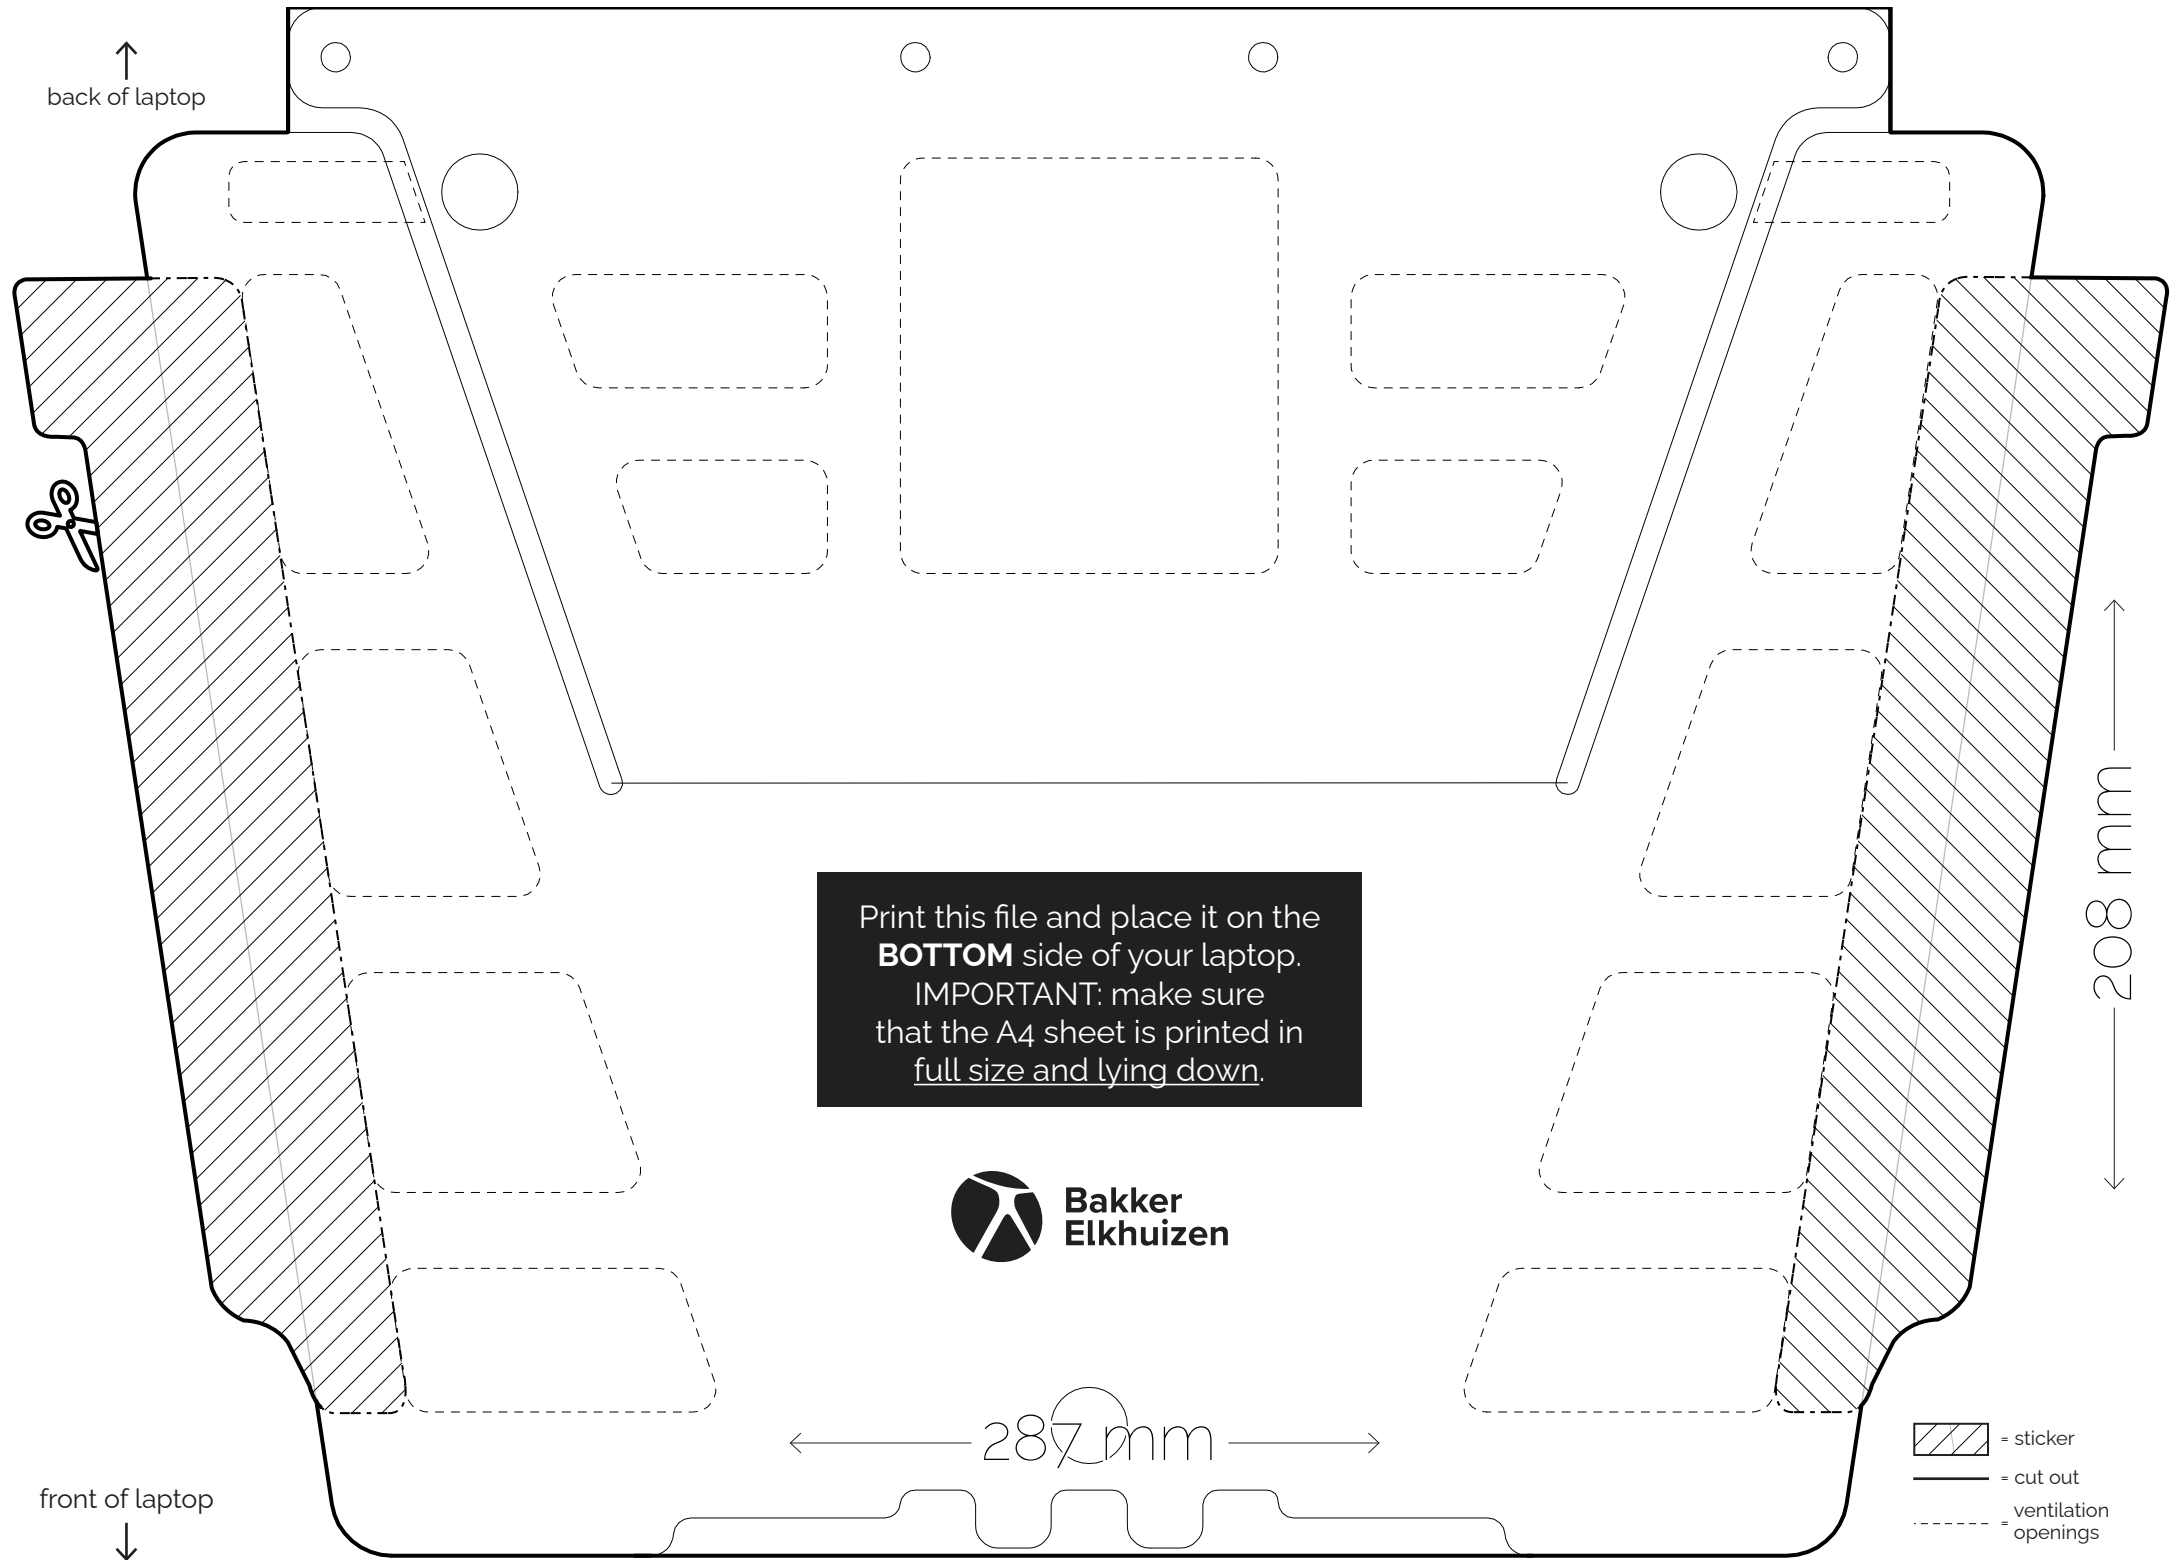

↑
back of laptop



front of laptop
↓

Print this file and place it on the
BOTTOM side of your laptop.
IMPORTANT: make sure
that the A4 sheet is printed in
full size and lying down.



**Bakker
Elkhuizen**

← 287 mm →

↑ 208 mm ↓

-  = sticker
-  = cut out
-  = ventilation openings