



1

FIX ADHESIVE PADS TO BRACKET
USING SCREWS PROVIDED

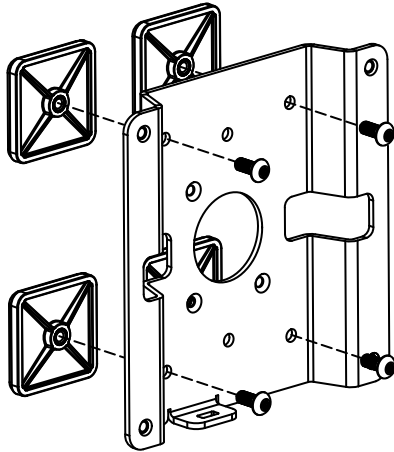


2

ALIGN STICKERS WITH BRACKET

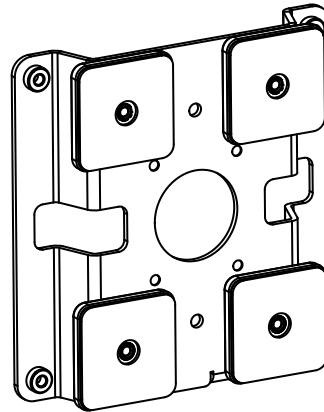


3

CLEAN MOUNTING AREA
WITH ALCOHOL WIPES PROVIDED

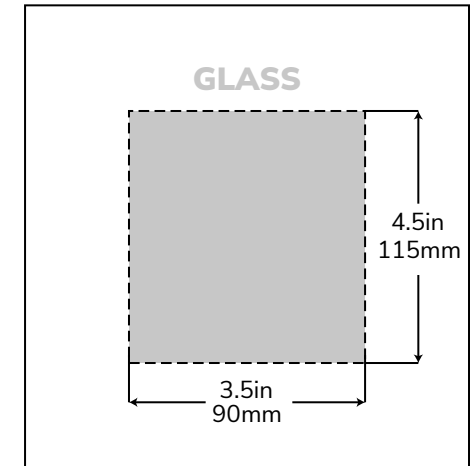


4

REMOVE STICKER COVERS

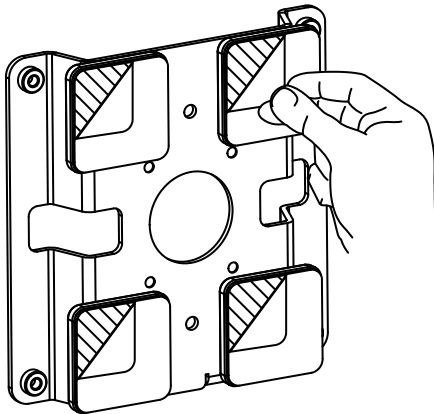


5

ACHIEVES FULL STRENGTH
AFTER 12 HOURS

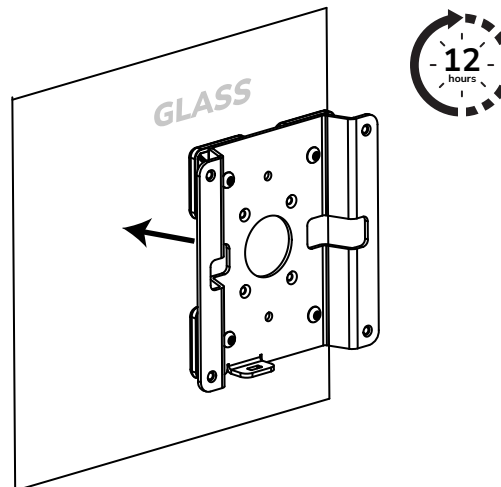



6

TIGHTEN SCREWS

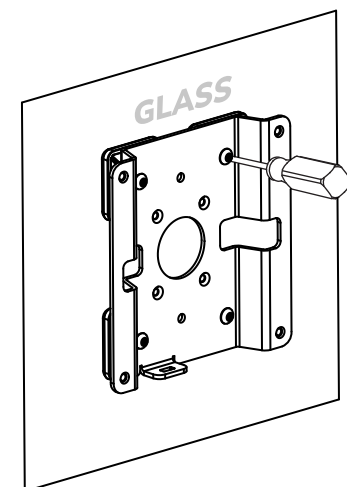


7

FIX TABLET/IPAD MOUNT (SOLD SEPARATELY) TO BRACKET WITH SCREWS PROVIDED

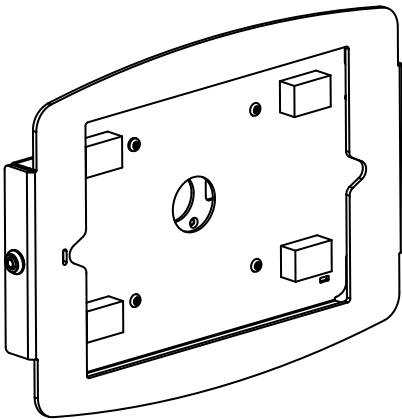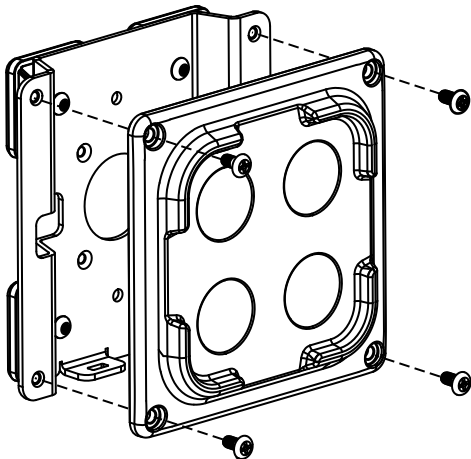


Space Enclosure

OR

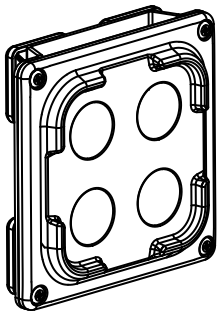

Magnetix

OR

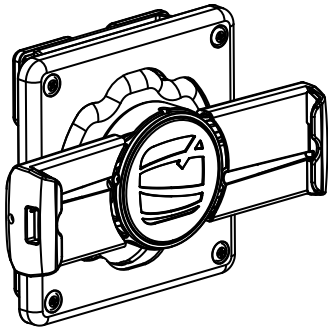


Cling

IN THE BOX




X8

Screws



X4

Stickers

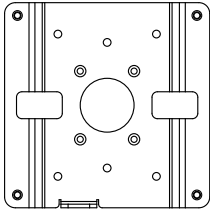

Bracket



Alcohol Wipes