WALL MOUNT PATCH PANEL QUICK START GUIDE


Thank you for purchasing this INTELLINET NETWORK SOLUTIONS™ Wall Mount Patch Panel.

Follow the steps on this quick start guide for easy installation and use of either the Cat5e or Cat6 version of this product.





12-port Cat5e UTP model shown

IDC (3 options)

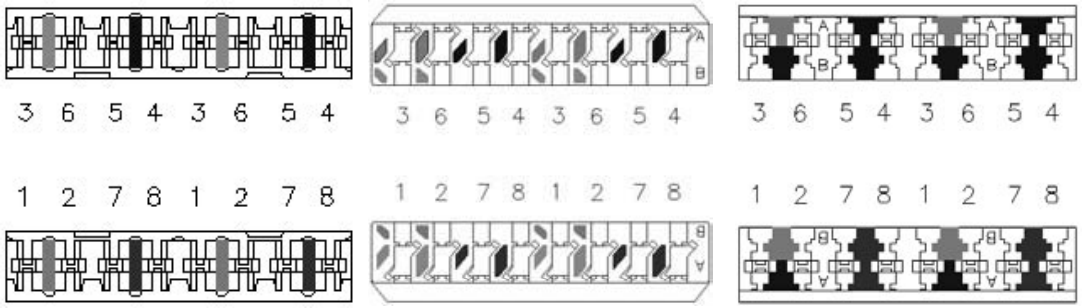

110D type | *Krone type* | *110D & Krone IDC compatible*

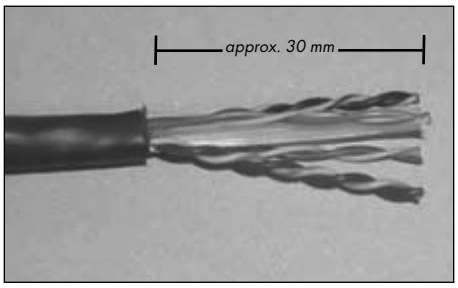


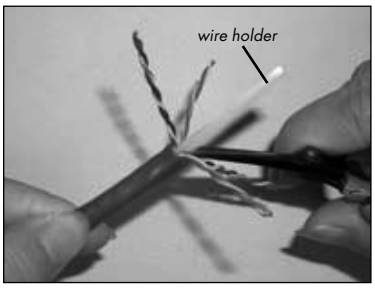

1. Carefully strip away approximately 30 mm of the cable jacket(s) (above left) to be connected to the Patch Panel, separating the wires into four pairs. Using a wire cutter, cut the wire holder (above right) flush with the cable jacket.

T568A
- Pin 5 White/Blue
- Pin 4 Blue
- Pin 1 White/Green
- Pin 2 Green
- Pin 3 White/Orange
- Pin 6 Orange
- Pin 7 White/Brown
- Pin 8 Brown

T568B
- Pin 5 White/Blue
- Pin 4 Blue
- Pin 1 White/Orange
- Pin 2 Orange
- Pin 3 White/Green
- Pin 6 Green
- Pin 7 White/Brown
- Pin 8 Brown

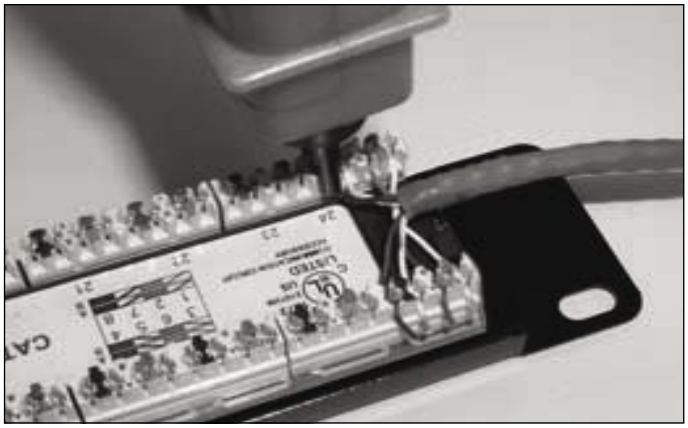

2. Follow the IDC color-code chart above to position the wires, then use a Krone punch-down tool to crimp and connect them.

INTELLINET NETWORK SOLUTIONS

Bringing Networks To Life

www.intellinet-network.com

Are you completely satisfied with this product? Please contact your INTELLINET NETWORK SOLUTIONS™ dealer with comments or questions.

Copyright © INTELLINET NETWORK SOLUTIONS
All products mentioned are trademarks or registered trademarks of their respective owners.