



FORZA 85 ESSENTIAL

SINGLE TOWER AIR COOLER


SPECIFICATIONS 产品规格, 產品規格

Product Name 产品名称, 產品名稱	FORZA 85 ESSENTIAL
CPU Socket 支援 CPU 插座类型, 支援 CPU 插座類型	Intel Socket LGA 115X / 1366 / 1200 / 1700 / 2011 / 2066 (Core i3 / i5 / i7 / i9 CPU) AMD AM5 / AM4 / FM2 / FM1 / AM3+ / AM3 / AM2+ / AM2 CPU
Heatsink 散热器, 散熱器	
CPU touched base CPU 散热底座, CPU 散熱底座	Copper base with nickel plated 镀镍铜底板导热技术, 鍍鎳銅底板導熱技術
Heat pipe diameter 热导管尺寸, 熱導管尺寸	6 mm
Heat pipe number 热导管数量, 熱導管數量	6 units 6 根, 6 根
Heat pipe finish 热导管表面, 熱導管表面	Copper with nickel plated 铜镀镍, 銅鍍鎳
Craftsmanship 制作工艺 (热导管与散热鳍片) 製作工藝 (熱導管與散熱鳍片)	Reflow 回流焊, 回流焊
Dimension (WxDxH) 尺寸 (宽x深x高), 尺寸 (寬x深x高)	85 x 135 x 160mm
Weight 重量 (不含风扇), 重量 (不含風扇)	926 g
Weight Incl. Fan 重量 (含风扇), 重量 (含風扇)	1128g
Fans 风扇, 風扇	
Fan Model 风扇型号, 風扇型號	NHP120
Dimensions (WxDxH) 尺寸 (宽x深x高), 尺寸 (寬x深x高)	120 x 120 x 25 mm
Fan Speed 风扇转速, 風扇轉速	600-2000 RPM±200RPM
Air Flow 风量, 風量	82.48 CFM / 143.53 m3/h (± 10%)
Air Pressure 风压, 風壓	4.24 mm H2O±10%
Acoustic Noise 风扇噪音, 風扇噪音	34.5dB(A) (Max.)
Rated Voltage 额定电压, 額定電壓	12 VDC
Rated Current 额定电流, 額定電流	0.28 A
Power Consumption 功耗, 功耗	3.36 W ± 10%
Bearing Type 轴承型式, 軸承型式	Hydraulic Bearing 液压轴承, 液壓軸承
Cable Length 电源线长度, 電源線長度	200 mm
Connector & Control 控制连接类型, 控制連接類型	4 Pin PWM


ACCESSORY KIT

零件包, 零件包


A CPU Cooler
CPU散热器
CPU散熱器

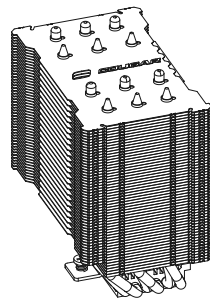


B FAN x 1
风扇 x 1
風扇 x 1

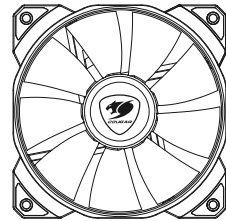


C Backplate (for INTEL)
背板 (INTEL专用)
背板 (INTEL專用)

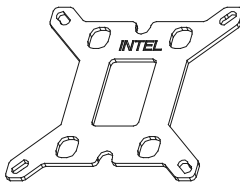


D Backplate Screw x 4
(LGA115X / 1200 / 1366)
背板螺丝 x 4 (LGA115X / 1200 / 1366)
背板螺絲 x 4 (LGA115X / 1200 / 1366)

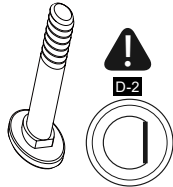


E Backplate Screw x 4
(LGA1700)
背板螺丝 x 4 (LGA1700)
背板螺絲 x 4 (LGA1700)

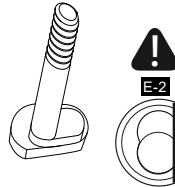


F Screw for INTEL LGA2011 x 4
INTEL LGA2011专用螺丝 x 4
INTEL LGA2011專用螺絲 x 4

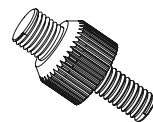

G Plastic Stand-off x 4
(For Both INTEL / AMD)
塑胶柱 x 4 (INTEL / AMD共用)
塑膠柱 x 4 (INTEL / AMD共用)



H Plastic Spacer x 4
塑胶垫片 x 4
塑膠墊片 x 4

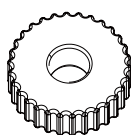


I Screw x 4
螺丝 x 4
螺絲 x 4




J Thumb Screw x 4
手动螺丝 x 4
手動螺絲 x 4



K Intel Bracket
INTEL 支架
INTEL 支架

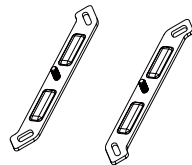


L AMD Bracket
AMD 支架
AMD 支架

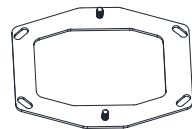


M Fan Clips x 4 (2 set)
风扇扣具 x 4 (两组)
風扇扣具 x 4 (兩組)



N Thermal Paste
散热膏
散熱膏

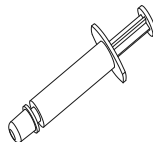


O Screwdriver
螺丝起子
螺絲起子




Intel

LGA1700 / 1200 / 115X / 1366

Step 1

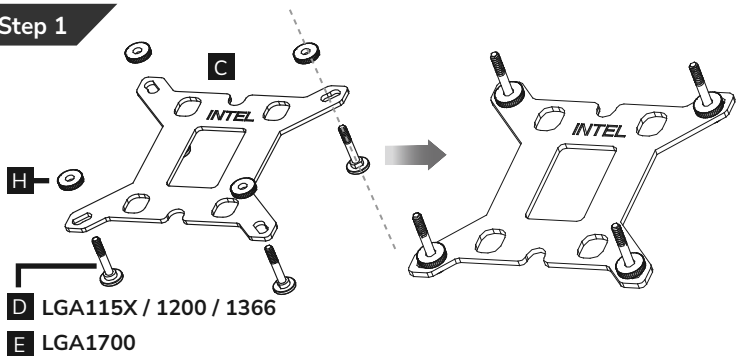


Step 2

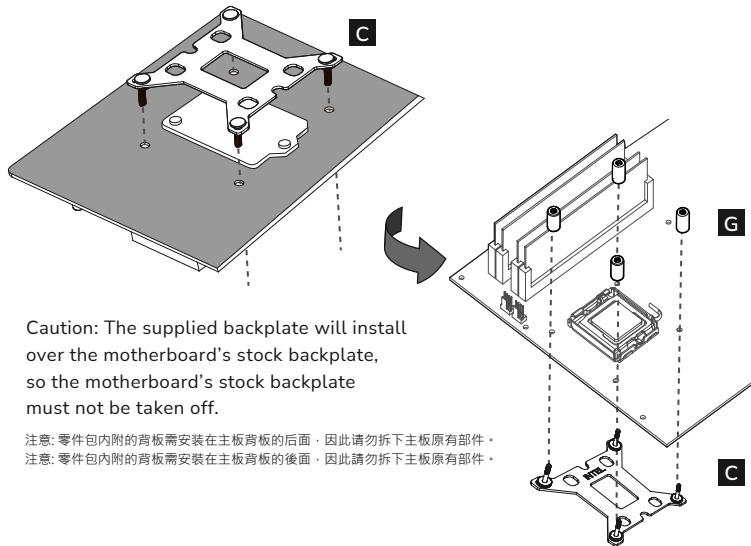

Caution: The supplied backplate will install over the motherboard's stock backplate, so the motherboard's stock backplate must not be taken off.


注意: 零件包内附的背板需安装在主板背板的后面, 因此请勿拆下主板原有部件。
注意: 零件包内附的背板需安装在主板背板的后面, 因此请勿拆下主板原有部件。

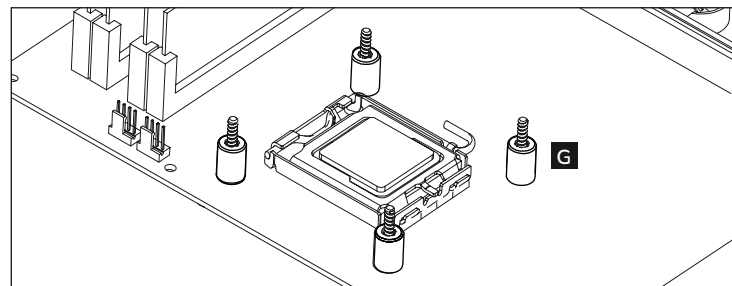

Intel


LGA1700 / 1200 / 115X / 1366

Step 3

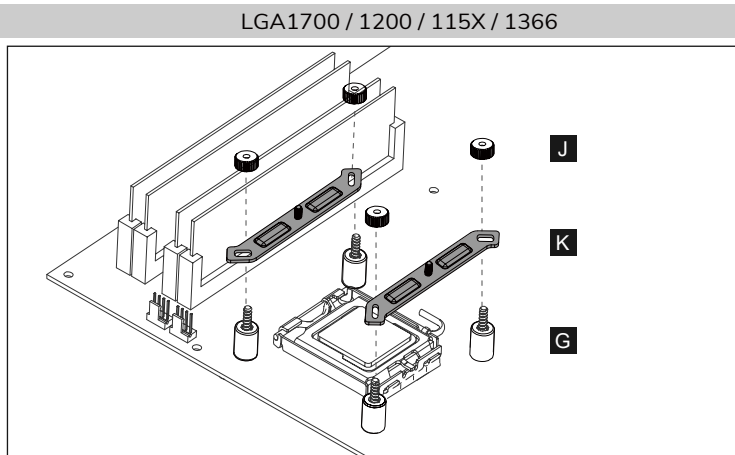

Intel

LGA2011

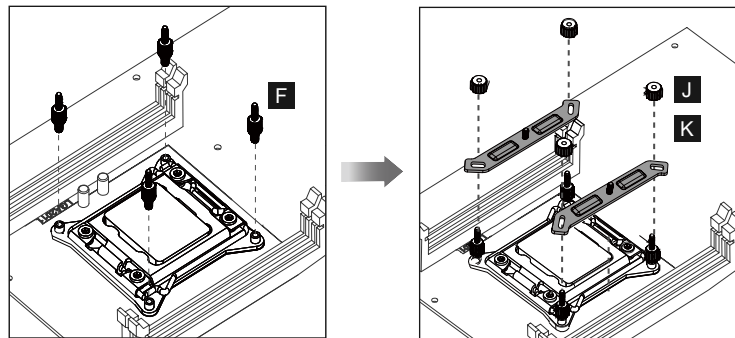



For LGA2011, screw the "Screw F" on the motherboard directly without the "Backplate C"

安装LGA2011时, 请使用「F-螺丝」直接锁固在主板上, 不需要搭配「C-背板」安装。
安装LGA2011時, 請使用「F-螺絲」直接鎖固在主板上, 不需要搭配「C-背板」安装。

Step 4




Please remove the protect tape before installing
安装前请先撕下保护膜。
安装前请先撕下保護膜。

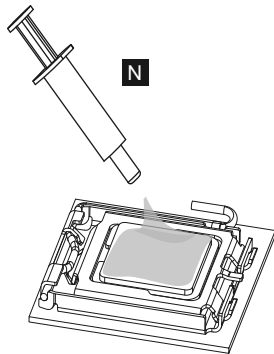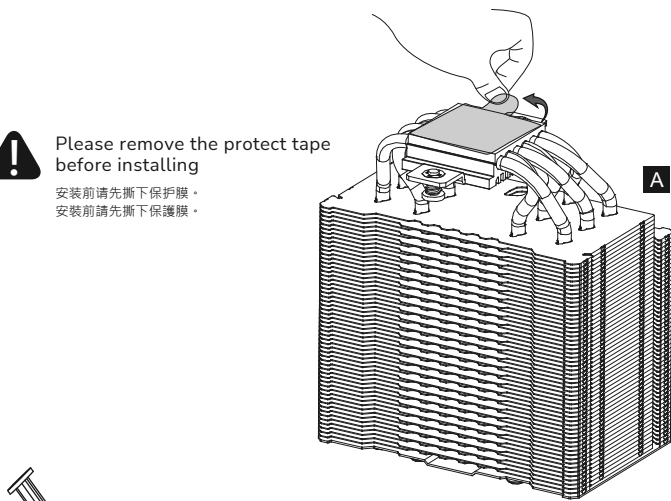


Caution: Applying too much thermal paste will lower heat conductivity and cooling performance!

注意: 散热膏涂抹过多会降低热传导性能与散热效能。
注意: 散热膏塗抹過多會降低熱導性能與散熱效能。


Step 5

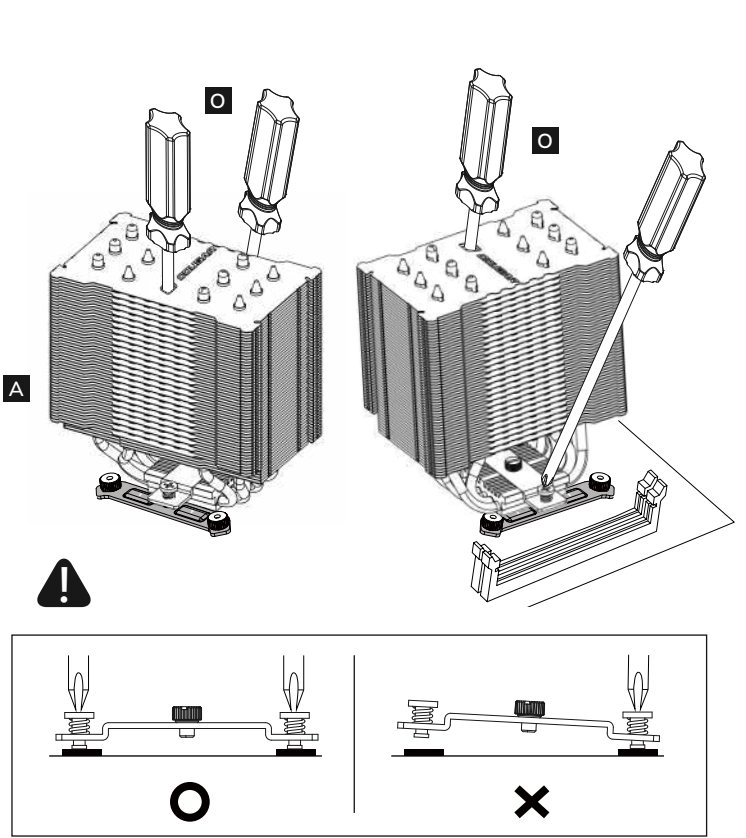


Step 6

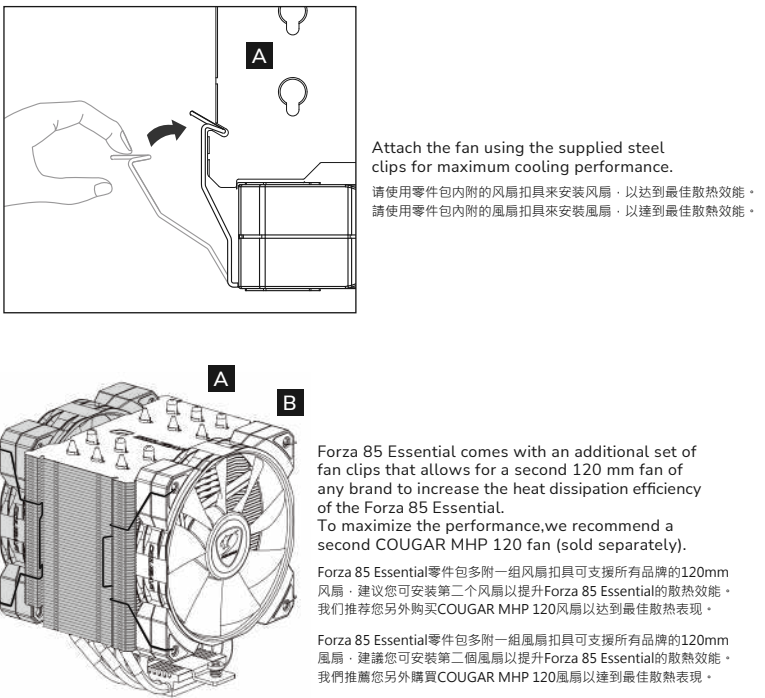


Step 7

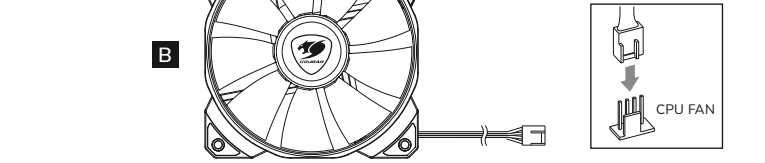


Step 1

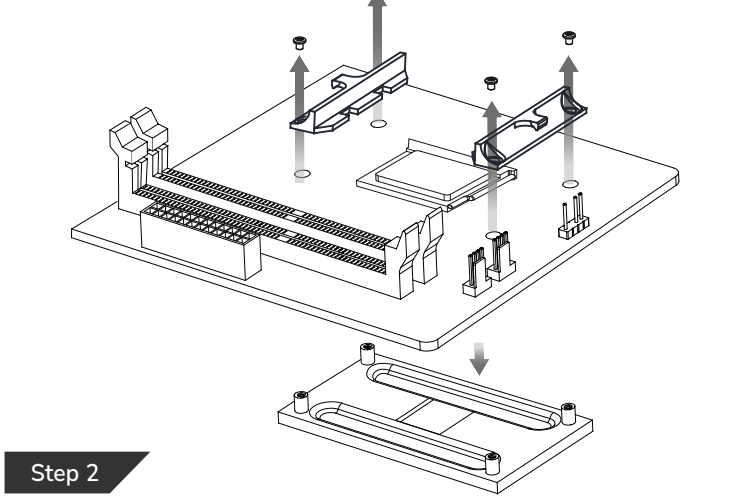


Step 2

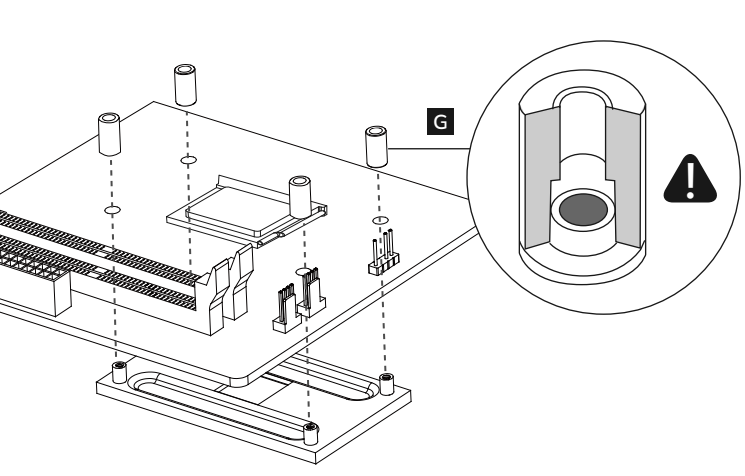


Step 3

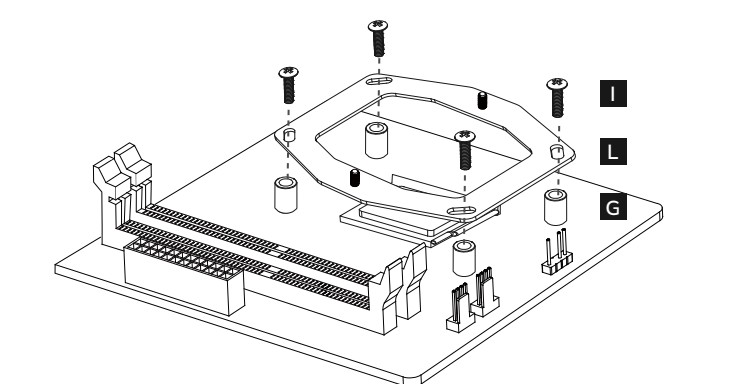


Step 4

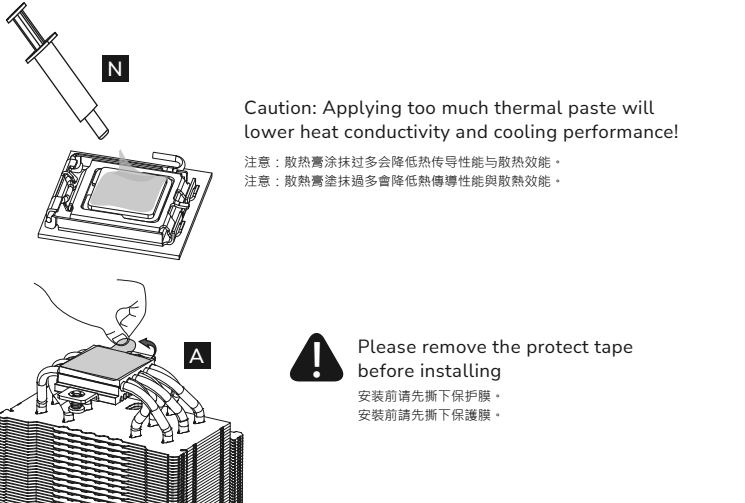


Step 5

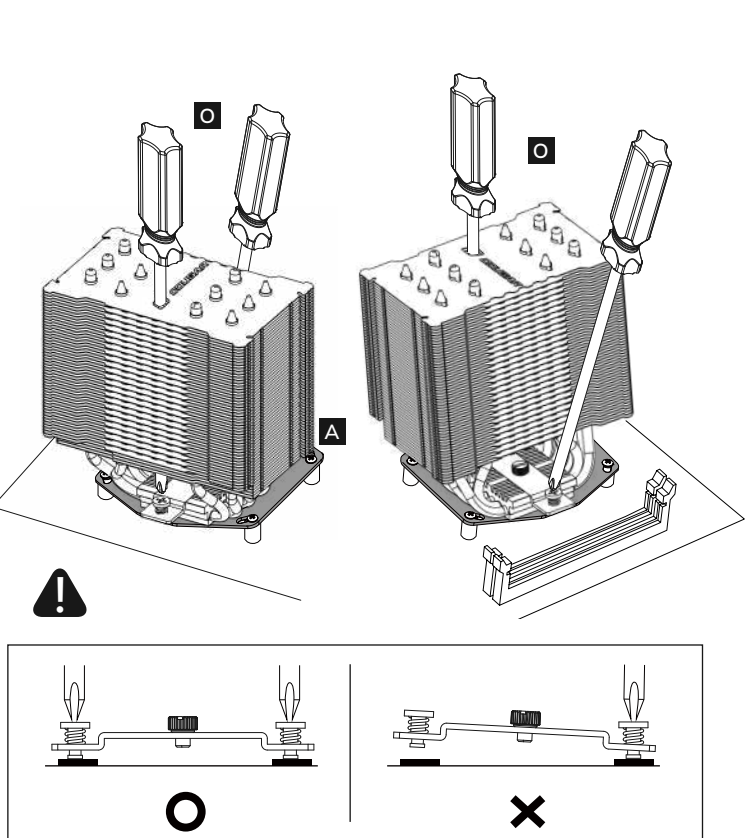

Step 6

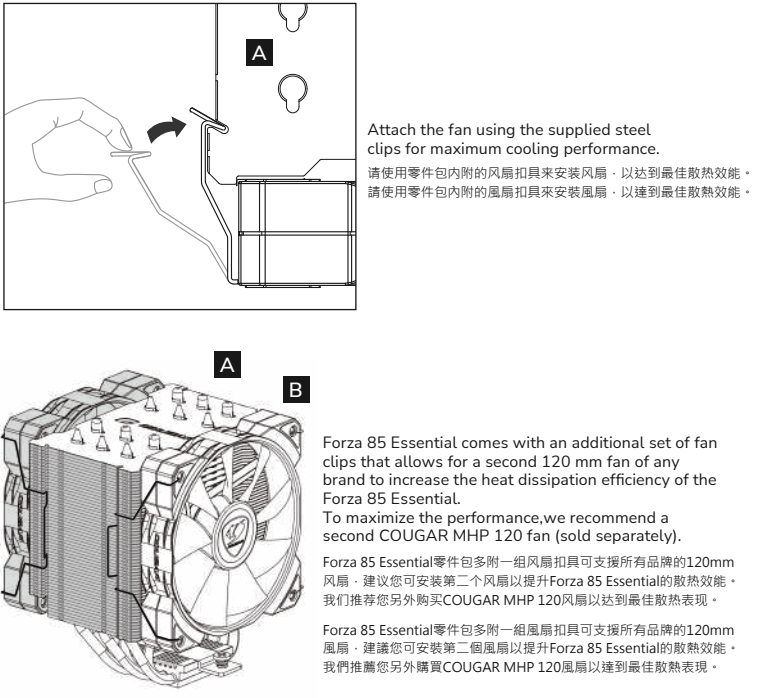

Step 7

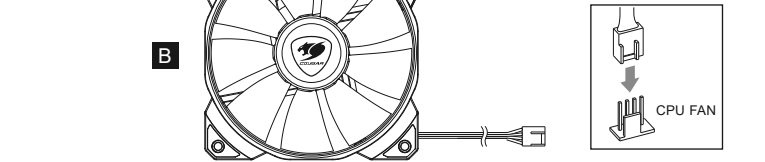

GLOBAL WARRANTY POLICY 全球保固条款，全球保固條款

WARRANTY PERIODS OF COUGAR GAMING DEVICES

Product : COUGAR Forza 85 Essential single tower air cooler

Warranty : 2 Years

This warranty gives you specific legal rights. You may also have other rights granted under local law. These rights may vary.

COUGAR电竞产品保固期，COUGAR電競產品保固期

产品名称，產品名稱：COUGAR Forza 85 Essential 單塔散热器，COUGAR Forza 85 Essential 單塔散热器

保固期，保固期：2年，2年

本保固条款赋予您特定的合法权利，而您所在的地区可能也会赋予您其他权利。

本保固條款賦予您特定的合法權利，而您所在的地區可能也會賦予您其他權利。

WARRANTY AGREEMENT

- If the product has defects in material or manufacture, COUGAR will provide product repair and replacement service within the warranty period.
- Our warranty service is based on the date of the invoice or warranty card (must be affixed with the store stamp).
- If you lose the aforementioned evidence, we will apply the original shipping date of the product as the beginning date of warranty period. The shipping date will be identified by the product serial number(S/N).

CONDITIONS WHERE FREE MAINTENANCE IS NOT PROVIDED

- Any fault or damage caused by natural disasters (including storm, fire, flood, thunder, earthquake, etc).
- Any fault or damage caused by accidental factors and man-made reasons (including hit, scrape, crash, moving, compression, stain, corrosion, use of incurred on unsuitable voltage, computer virus, riot, misuse, malicious damage, etc).
- Use in an improper operating environment (including high temperature, high humidity, water inflow, etc).
- Inability to provide the product warranty card, purchase receipt or invoice to prove the product is still within the warranty period and the shipping date of the product is out of warranty.
- The warranty card or product serial number has been altered or its number is hard to identify.
- The warranty period has expired.
- Any fault or damage caused by non-compliance with regulations stated on the user manual or improper, rough and careless treatment.
- Any fault or damage caused by use of parts not certified by COUGAR original manufacturer.
- The problem is caused by improper repair or adjustment by the buyer or any manufacturer without authorization from COUGAR.
- The product is not acquired from an authorized distributor of the company or is acquired from illicit sources.
- Paper carton, instruction and other accessories are not warranted.

DISCLAIMERS

- COUGAR product is not authorized for use as critical components in life support device or for incorrect application software or malfunction of the product.
- COUGAR is not liable for the death or damage of person or loss of property when product is using as, including but not limited to, medical equipment, military equipment, traffic equipment and disaster prevention system.
- COUGAR is not liable for any damages, expenses, lost data, lost revenues, lost savings, lost profits, or any incidental or consequential damages due to using defect product of COUGAR.

LEGAL NOTICES

This manual was created by Compucase Enterprise and may not be completely or partially copied, passed on, distributed or stored without written consent by Compucase Enterprise.
COUGAR® is a registered brand of Compucase Enterprise Other product and company names mentioned in this documentation may be brands or trademarks of their respective owners.
Compucase Enterprise reserves the right to make changes concerning the contents of the manual and the technical data of the product without previous announcement.

ДАТА ИЗГОТОВЛЕНИЯ ПРОДУКЦИИ

год и месяц изготовления продукции указаны в серийном номере продукта.
(существует 2 способа определения даты изготовления, оба способа описаны ниже)

A После S/N: первые две цифры означают год, вторые две – месяц изготовления. Например, S/N: H2202000001 означает, что товар был произведен в феврале 2022 года.

B После S/N: если указаны буквы, то две буквы представляют цифры из таблицы ниже, и означают год, последующие две цифры – месяц изготовления.

Например, S/N: DBB02REVI000001 означает, что товар был произведен в феврале 2022 года.

A	B	C	D	E	F	G	H	I	J
1	2	3	4	5	6	7	8	9	0

• Например, BB = 22 = 2022 год

• يجب تركيب كل قطعة بحذر و بمكانها المناسب.

• من يقوم بعملية التركيب الشخص المختص فقط.

• تعليمات التركيب و الأمان:

• عند التركيب أو التفكيك يجب التأكد من أن جميع الأسلاك مفعولة عن الكهرباء.

• يجب اتخاذ الاحترازاات اللازمة لمنع الصعق الكهربائي.

• يجب إرتداء الملابس المناسبة أثناء تركيب/ جميع الكمبيوتر.

MANUFACTURER CONTACT

制造商联系方式，製造商聯繫方式



www.cougargaming.com

COUGAR USA Technical Service

Tel: (833) 256-3778

Mail:rma@compucaseusa.com

Compucase Enterprise Co.,Ltd.

All rights reserved.



详细保固条件
请扫描二维码



Official website



Made in China