

Universal Ceiling Projector Mount



Actual product may vary from photos

User Manual

SKU#: PROJCEILMNT2

For the latest information and specifications visit
www.startech.com/PROJCEILMNT2

Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols

This manual may make reference to trademarks, registered trademarks, and other protected names and/or symbols of third-party companies not related in any way to StarTech.com. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by StarTech.com, or an endorsement of the product(s) to which this manual applies by the third-party company in question. Regardless of any direct acknowledgement elsewhere in the body of this document, StarTech.com hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and/or symbols contained in this manual and related documents are the property of their respective holders.

Safety Statements

Safety Measures

- Cables (including power and charging cables) should be placed and routed to avoid creating electric, tripping or safety hazards.

Mesures de sécurité

- Les câbles (y compris les câbles d'alimentation et de chargement) doivent être placés et acheminés de façon à éviter tout risque électrique, de chute ou de sécurité

安全対策

- ケーブル(電源ケーブルと充電ケーブルを含む)は、適切な配置と引き回しを行い、電気障害やつまづきの危険性など、安全上のリスクを回避するようにしてください。

Misure di sicurezza

- I cavi (inclusi i cavi di alimentazione e di ricarica) devono essere posizionati e stesi in modo da evitare pericoli di inciampo, rischi di scosse elettriche o pericoli per la sicurezza.

Säkerhetsåtgärder

- Kablar (inklusive elkablar och laddningskablar) ska dras och placeras på så sätt att risk för snubblingsolyckor och andra olyckor kan undvikas.

Warning Statements

- Do not exceed the weight capacity of this product. Overloading this product might result in injury or property damage. This product can support the following weight: 33.1 lb. (15 kg).
- Make sure to assemble this product according to the instructions. Failure to do so might result in personal injury or property damage.
- Never operate this product if parts are missing or damaged.
- Ceiling structures vary, and it's important to make sure that the type of ceiling structure and mounting hardware that you're using will properly support the mounted equipment. Failure to do so may result in personal injury and/or equipment damage. The ceiling structure should be capable of supporting at least four times the weight of the mounted equipment.
- The mounting hardware included with this product might not be adequate for some ceiling structures. If you lack the necessary expertise to attach this product to the ceiling structure that you're using, contact a construction professional to install the ceiling mount or to provide specific mounting instructions for your ceiling structure.

Mensagens de Aviso

- Certifique-se de que monta este produto de acordo com as instruções. O incumprimento pode resultar em ferimentos pessoais ou danos de propriedade.
- Certifique-se de que o peso do monitor não excede a capacidade de peso deste produto. Se exceder a capacidade de peso, pode sofrer ferimentos pessoais ou danos no equipamento. Este produto pode suportar o seguinte peso: 15 kg.
- Nunca opere este produto se faltarem peças ou estas estiverem danificadas.
- As estruturas de parede variam e é importante certificar-se de que o tipo de estrutura de parede e hardware de montagem que está a usar irá suportar devidamente o equipamento montado. O incumprimento pode resultar em ferimentos pessoais e/ou danos no equipamento. A estrutura de parede deve ser capaz de suportar pelo menos quatro vezes o peso do equipamento montado.
- O hardware de montagem incluído com este produto pode não ser adequado para algumas estruturas de parede. Se não tiver o conhecimento necessário para fixar este produto à estrutura de parede que está a usar, contacte um profissional de construção para fazer

a instalação em parede ou para fornecer instruções de montagem específicas para a sua estrutura de parede.

Varningsmeddelanden

- Se till att du monterar produkten i enlighet med instruktionerna. Om du inte gör det kan skada på person eller egendom uppstå.
- Se till att skärmens vikt inte överstiger produktens viktkapacitet. Om viktkapaciteten överstigs kan skada på person eller utrustning uppstå. Denna produkt har stöd för följande vikter: 15 kg.
- Använd aldrig produkten om delar saknas eller är skadade.
- Eftersom väggstrukturer varierar är det viktigt att kontrollera att väggstrukturen och monteringsutrustningen som du använder klarar av den monterade utrustningen. Om du inte gör det kan skada på person och/eller utrustning uppstå. Väggstrukturen ska kunna klara av minst fyra gånger vikten av den monterade utrustningen.
- Monteringsutrustningen som medföljer produkten kanske inte är lämplig för vissa väggstrukturer. Om du saknar nödvändiga kunskaper för att fästa denna produkt på väggstrukturen som du använder, kontakta en professionell konstruktör för att installera väggmonteringen eller för att ge specifika monteringsinstruktioner för din väggstruktur.

Advertencias de Uso

- Asegúrese de ensamblar este producto según las instrucciones. De lo contrario, pueden producirse lesiones personales o daños en la propiedad.
- Asegúrese de que el peso del monitor no exceda la capacidad de carga de este producto. Si se excede dicha capacidad se podrían producirse lesiones personales o daños al equipo. Este producto tiene la siguiente capacidad de carga: 15 kilogramos.
- Nunca opere o ponga en funcionamiento este producto si faltan piezas o hay daños en las mismas.
- Las estructuras de las paredes pueden variar y, por tanto, es importante determinar con certeza que el tipo de estructura de la pared y el hardware de montaje que se va a utilizar puedan soportar debidamente el equipo. De lo contrario, se pueden producir lesiones personales o daños en el mismo. La estructura de la pared debe ser capaz de soportar al menos cuatro veces el peso del componente instalado.
- El hardware de montaje incluido con este producto puede no ser adecuado para algunas estructuras de pared. Si no tiene la

experiencia suficiente para fijar este producto a la estructura de la pared correspondiente, póngase en contacto con un profesional de la construcción para instalar el soporte de pared o para que le proporcione las instrucciones específicas de montaje para su estructura de pared.

Avertissements

- Assemblez ce produit conformément aux instructions. Si vous ne respectez pas ces instructions, vous risquez de vous blesser ou d'endommager l'équipement.
- Vérifiez que le poids du moniteur ne dépasse pas la capacité pondérale du produit. Si vous dépassez la capacité pondérale, vous risquez des blessures corporelles ou des dommages matériels. Ce produit peut supporter de 15 kg.
- N'utilisez pas ce produit si des pièces sont endommagées ou manquantes.
- Les structures des murs varient. Vous devez impérativement vérifier que le type de mur et le matériel de fixation que vous utilisez permettent de soutenir correctement l'équipement. Dans le cas contraire, vous risquez des blessures corporelles ou des dommages matériels. La structure du mur doit pouvoir supporter au moins quatre fois le poids de l'équipement monté.
- Le matériel de fixation inclus avec ce produit n'est pas forcément approprié pour toutes les structures de murs. Si vous ne disposez pas des compétences nécessaires pour installer ce produit au mur, contactez un professionnel afin qu'il installe le support mural ou qu'il vous fournisse les instructions de montage spécifiques à votre structure de mur.

Waarschuwingen

- Zorg dat dit product volgens de instructies in elkaar wordt gezet. Indien dit niet goed gebeurt kan lichamelijk letsel of materiële schade ontstaan.
- Zorg dat het gewicht van het scherm de maximale capaciteit van dit product niet overschrijdt. Als u de gewichtscapaciteit overschrijdt, kan persoonlijk letsel of schade aan de apparatuur ontstaan. Dit product ondersteunt het volgende gewicht: 15 kg.
- Gebruik dit product nooit als er onderdelen ontbreken of beschadigd zijn.
- Omdat wanden verschillen, is het belangrijk dat u ervoor zorgt dat

het type wandstructuur en de montagemiddelen die u gebruikt de gemonteerde apparatuur goed ondersteunen. Indien u dit niet doet kan lichamelijk letsel en/of schade aan de apparatuur ontstaan. De wandstructuur moet voldoende zijn om ten minste vier keer het gewicht van de gemonteerde apparatuur te ondersteunen.

- De bij dit product geleverde montagemiddelen kunnen niet geschikt zijn voor sommige wandstructuren. Als u onvoldoende kennis hebt om dit product aan de door u gebruikte wandstructuur te bevestigen, neem dan contact op met een bouwkundige om de steun aan de muur te installeren of specifieke montage-instructies voor uw wandstructuur te geven.

Warnhinweise

- Montieren Sie dieses Produkt gemäß den Anweisungen. Anderenfalls kann dies zu Verletzungen von Personen oder Schäden an Eigentum führen.
- Das Gewicht des TVs darf die zulässige Traglast des Produkts nicht übersteigen. Wenn die Traglast überschritten wird, kann dies zu Verletzungen von Personen oder Schäden an Geräten führen. Dieses Produkt ist für folgendes Gewicht geeignet: 15 kg.
- Das Produkt darf nicht bedient werden, wenn Teile fehlen oder beschädigt sind.
- Wandstrukturen unterscheiden sich, und es muss sichergestellt werden, dass die Wand und das verwendete Montagematerial das montierte Gerät halten kann. Anderenfalls kann dies zu Verletzungen von Personen und/oder Schäden an Geräten führen. Die Wand muss mindestens das Vierfache des Gewichts des montierten Geräts halten können.
- Das mitgelieferte Montagematerial ist möglicherweise nicht für jede Wand geeignet. Wenn Ihnen die nötigen Fachkenntnisse zum Anbringen dieses Produkts an einer Wand fehlen, lassen Sie einen Fachmann den Wandhalter anbringen, oder lassen Sie sich von einem Fachmann Montageanweisungen für Ihre Wand erteilen.

注意

- 必ず取扱説明書に従って本製品の組み立てを行って下さい。取り扱いを誤った場合に、傷害を負う恐れや物的損害が発生する恐れがあります。
- 取り付けモニターの重量が、本製品で定められた最大積載重量を超えないようにして下さい。最大積載重量をオーバーした場合、傷害を負う恐れやモニターや本製品に損害が発生する恐れがあります。本製品は、最大15kg

- までのモニター重量に対応しています。
- 本製品で使用している部品の一部が紛失していたり損傷している状態で使用するのには絶対に止めて下さい。
 - 壁の構造はお客様の環境ごとに異なります。ご使用になる壁の構造タイプと取付け金具が、取り付けモニターを確実に支持することを確認して下さい。確認を怠った場合、傷害を負う恐れや物的損害が発生する恐れがあります。壁の構造が、取り付けるモニター重量の最低4倍まで支持できるだけの強度を持っていないかもしれません。
 - 本製品に同梱されている取付け金具は、ご使用になる壁の構造に対して十分ではない場合があります。本製品を壁面に取り付ける時、十分な専門知識が不足していると判断された場合、専門業者に連絡を取って、本製品の取り付けを行ってもらうか、お客様の壁の構造に適した取り付け方法を教えてもらってから取り付けを行って下さい。


Dichiarazioni di avvertenza

- Assemblare il prodotto rispettando le istruzioni. Il mancato rispetto delle istruzioni potrebbe causare danni a persone o proprietà.
- Verificare che il peso del monitor non superi la capacità di supporto del prodotto. In caso di superamento della capacità di supporto potrebbero verificarsi danni a persone o apparecchiature. Il prodotto è in grado di supportare i seguenti pesi: 15 kg.
- Non utilizzare il prodotto in presenza di parti mancanti o danneggiate.
- Le caratteristiche dei muri sono variabili ed è importante verificare che la struttura muraria e l'hardware di montaggio in uso siano in grado di supportare adeguatamente le apparecchiature montate. Il mancato rispetto delle istruzioni potrebbe causare danni a persone o proprietà. La struttura muraria deve essere in grado di supportare un peso almeno quattro volte superiore a quello dell'apparecchiatura montata.
- L'hardware di montaggio incluso con il prodotto potrebbe non essere adeguato ad alcune strutture murarie. Se l'utente non dispone delle competenze necessarie per agganciare il prodotto alla struttura muraria in uso, dovrà contattare un professionista edile per installare il supporto a parete o ottenere istruzioni di montaggio per la struttura muraria in uso.

Table of Contents

Safety Statements	2
Warning Statements	3
Product Diagram	9
Product Dimensions	10
Flush Installation	10
Extended Installation Min.	10
Extended Installation Max.	11
Product Rotation	12
Mounting Pattern.....	12
Product Information	13
Package Contents	13
Technical Specifications.....	17
Requirements.....	18
Mounting the Projector Mount (using Extensions)	19
Mounting the Projector Mount (Flush).....	28
Adjusting the Projector Mount	35
Adjusting the Torque	36


Product Diagram

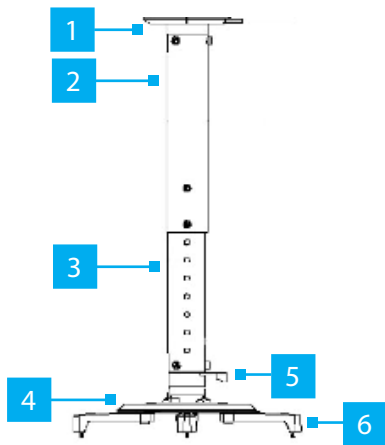


1	<i>Ceiling Bracket</i>
2	<i>Upper Pole</i>
3	<i>Lower Pole</i>
4	<i>Projector Plate</i>
5	<i>Lock Switch</i>
6	<i>Mounting Arms (x 4)</i>

Product Dimensions


Flush Installation

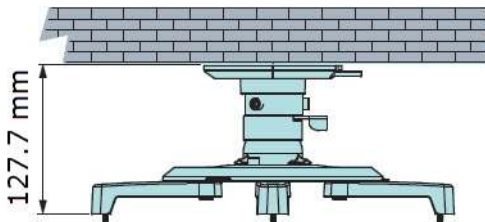

Extended Installation Min.

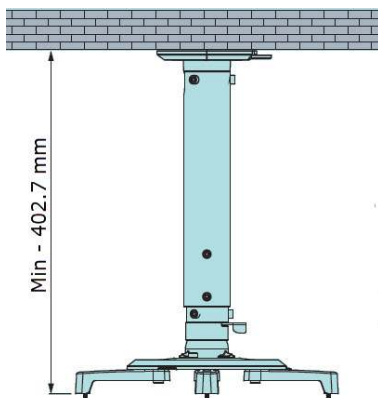


Extended Installation Max.

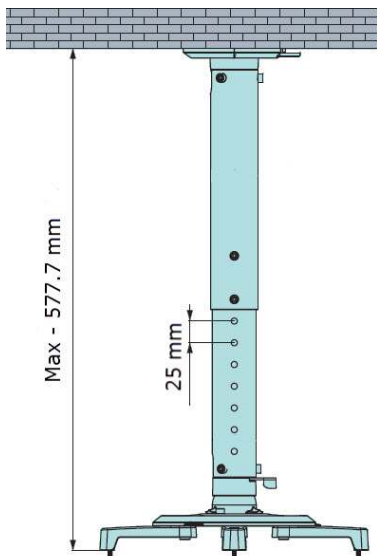


To view manuals, videos, drivers, downloads, technical drawings, and more visit www.startech.com/support

Product Rotation

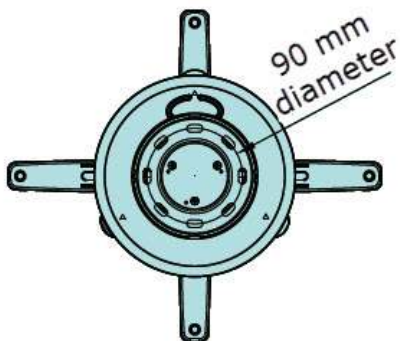

Mounting Pattern

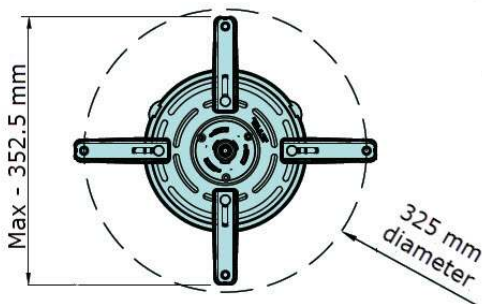

Product Information

Package Contents



Ceiling Bracket

Qty: 1



Projector Plate

Qty: 1



Projector Plate Cover

Qty: 1



Upper Pole

Qty: 1



Lower Pole

Qty: 1



Ball-Joint Mechanism

Qty: 1



Mounting Arms

Qty: 4



Mounting Arm Covers

Qty: 4



M6 x 12 mm Screws

Qty: 7



5 mm Hex Key

Qty: 1



Wall Anchors

Qty: 4



Mounting Screws

Qty: 4




Washers

Qty: 4




Nuts

Qty: 6

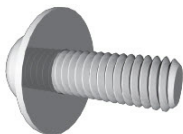


M3 x 24 mm Screws

Qty: 4

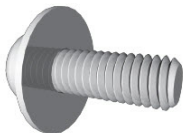


M4 x 24 mm Screws

Qty: 4

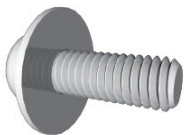

M5 x 24 mm Screws

Qty: 4

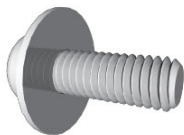

M6 x 24 mm Screws

Qty: 4



M6 x 65 mm Screws

Qty: 2

Technical Specifications

 Total Weight	33.1 lb. (15 kg)
 Tilt	- 25° to + 25°
 Swivel	360°

Requirements

- 8 mm Wrench x 1
- 10 mm Wrench x 1
- Socket Wrench x 1
- 8 mm Socket x 1
- Phillips Head Screwdriver x 1

Mounting the Projector Mount (using Extensions)

Warning! Product mounting should be completed by a certified professional as per the local safety and building code guidelines. Ceiling structures vary, and it is important to make sure that the type of structure and mounting hardware that you are using will properly support the mounted equipment. Failure to do so may result in personal injury and/or equipment damage.

1. Before mounting the **Ceiling Bracket**, remove the **Ceiling Bracket Cover** to reveal the **Mounting Holes**. The **Ceiling Bracket Cover** comes apart in two pieces, by pulling each sides of the **Ceiling Bracket Cover** away from the **Ceiling Bracket**.



Removing the Ceiling Plate Cover

2. Mount the **Ceiling Bracket** to the **Ceiling** using the **Mounting Screws** (x 4) included or the appropriate hardware.


3. When the **Ceiling Plate** is installed in a ceiling, slide both pieces of the **Ceiling Plate Cover** back over-top of the **Ceiling Plate**, snapping them together.
4. Align the **Mounting Arms** with the **Mounting Holes** on the top of the **Projector**.
5. Select the appropriate **Installation Screws** (M3 x 24 mm, M4 x 24mm, M5 x 24 mm, or M6 x 24 mm).
6. Insert the selected **Installation Screws** (x 4), through the **Mounting Holes** in the **Mounting Arms** and into the **Mounting Holes** on the **Projector**.



Installing the Mounting Arms


7. Using a **Phillips Head Screwdriver**, tighten the **Installation Screws**. Be careful not to over-tighten.

- Place the **Mounting Arm Covers** over-top of the **Mounting Arms**, aligning them so that the **Screw** on the **Mounting Arm** is protruding through the **Slot** in the **Mounting Arm Cover**.

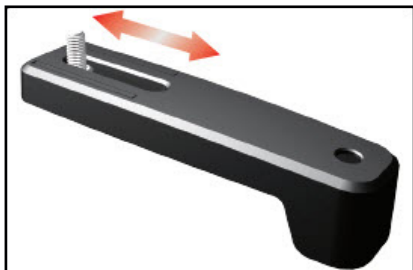

Installing the Mounting Arm Covers

- Align the **Screws** on the **Mounting Arms** with the appropriate **Cut-Outs** on the **Projector Plate**.
- Insert the **Screws** on the **Mounting Arms** through the **Cut-Outs** in the **Projector Plate**.
- Place the **Washers** (x 4) and **Nuts** (x 4) onto the **Screws** (x 4) on the **Mounting Arms** and use an **8 mm Wrench** to tighten the **Nuts**.

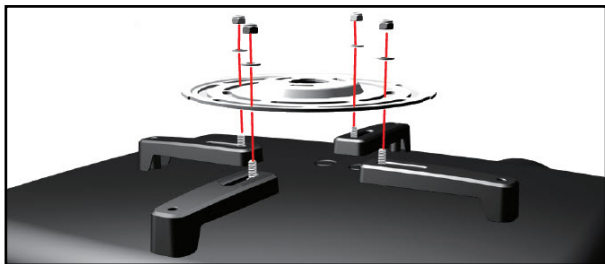


Installing the Projector Plate

12. Place the **Projector Plate Cover** over the **Projector Plate**.
13. Align the **Protrusions** on the bottom of the **Ball-Joint Mechanism** with the **Slots** in the top of the **Projector Plate Cover**.




Installing the Ball-Joint Mechanism

14. Insert the **Protrusions** into the **Slots** and rotate the **Ball-Joint Mechanism** clockwise until it locks into place.

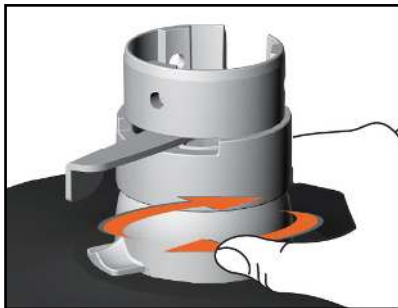

Rotating the Ball-Joint Mechanism

15. Insert one of the **M6 x 12 mm Screws** into the **Lock Screw Hole** on the **Projector Plate Cover** and tighten it using the **5 mm Hex Key** (included).

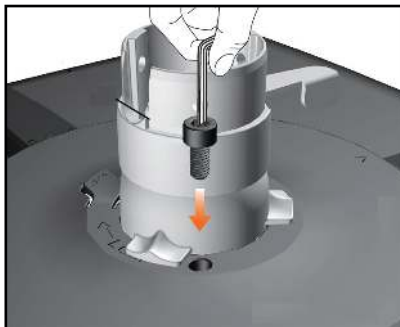

Inserting an M6 x 12 mm Screw

16. Route the **Cables** connected to the **Projector** (e.g. **Power Cable**, etc.), through the bottom end of the **Lower Pole** with **Cable Notch** and out through the top.




Routing the Projector Power Cable

17. Attach the bottom of the **Lower Pole** (with **Cable Notch**) to the top of the **Ball-Joint Mechanism**. Make sure that the **Mounting Holes** on the **Lower Pole** are aligned with the **Mounting Holes** on the **Ball-Joint Mechanism**.


Note: Route the **Projector's Power Cable** through the **Cable Notch** in the **Lower Pole** before inserting the **M6 x 12 mm Screws**.

18. Insert a **M6 x 12 mm Screw** (x 3) through each of the **Mounting Holes** on the **Lower Pole** and into the **Mounting Holes** on the **Ball-Joint Mechanism**.
19. Using the **5 mm Hex Key** tighten the **M6 x 12 mm Screws**.

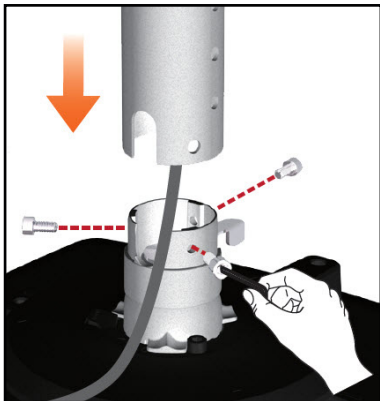

Attaching the Lower Pole to the Ball-Joint Mechanism


20. Feed the **Projector Cables** through the **Upper Pole** and slide the **Upper Pole** (with the two screw holes facing down) down over-top of the **Lower Pole**.
21. Insert the **M6 x 65 mm Screws** (x2) through the **Screw Holes** on the **Upper Pole** and the **Adjustment Holes Lower Poles** (at the appropriate height) and into a **Nut** on the opposite side.
22. Using the **10 mm Wrench** hold the **Nut** on the end of the **M6 x 65 mm Screw**, use the **5 mm Hex Key** to tighten the **M6 x 65 mm Screws**.

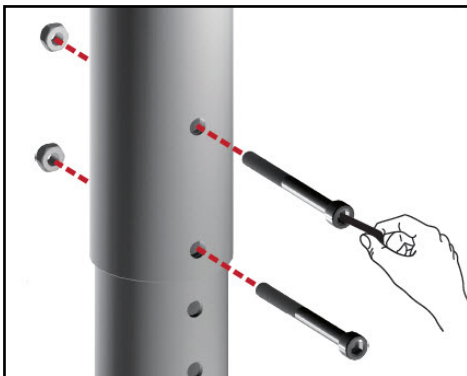

Attaching the Upper and Lower Poles


23. While supporting the weight of the **Projector** and **Projector Mount**, slide the **Upper Pole** onto the **Ceiling Plate**. Making sure that you align the **Cable Notch** in the **Upper Pole** with the **Cable Notch** in the **Ceiling Bracket**.

Note: Make sure that all **Cables** are aligned with the **Ceiling Bracket** so that they come out the side of the **Cable Notch**.

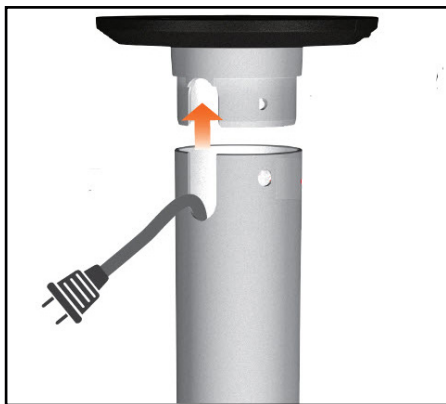

Attaching the Upper Pole to the Ceiling Mount

24. Align the **Mounting Holes** on the **Upper Pole** with the **Mounting Holes** on the **Ceiling Bracket**.
25. Insert a **M6 x 12 mm Screw** (x 3) through the **Mounting Holes** (x 3) in the **Upper Pole** and into the **Mounting Holes** (x 3) on the **Ceiling Bracket**.
26. Using the **5 mm Hex Key**, tighten the **M6 x 12 mm Screws**.

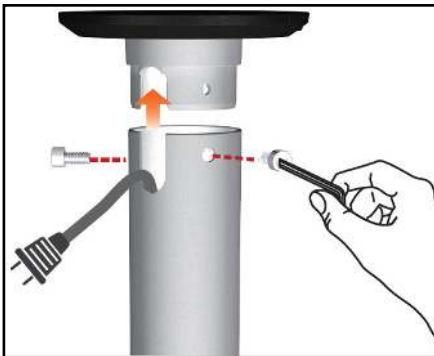

Securing the Upper Pole

Mounting the Projector Mount (Flush)


Warning! Product mounting should be completed by a certified professional as per the local safety and building code guidelines. Ceiling structures vary, and it is important to make sure that the type of structure and mounting hardware that you are using will properly support the mounted equipment. Failure to do so may result in personal injury and/or equipment damage.

1. Before mounting the **Ceiling Bracket** remove the **Ceiling Bracket Cover** to reveal the **Mounting Holes**. The **Ceiling Bracket Cover** comes apart in two pieces, by pulling each side of the **Ceiling Bracket Cover** away from the **Ceiling Bracket**.



Removing the Ceiling Plate Cover


2. Mount the **Ceiling Bracket** to the ceiling using the **Mounting Screw** (x 4) included or the appropriate hardware.
3. When the **Ceiling Plate** is installed in a ceiling, slide both pieces of the **Ceiling Plate Cover** back over-top of the **Ceiling Plate**, snapping them together.
4. Align the **Mounting Arms** with the **Mounting Holes** on the top of the **Projector**.
5. Select the appropriate **Installation Screws** (M3 x 24 mm, M4 x 24mm, M5 x 24 mm, or M6 x 24 mm).
6. Insert the selected **Installation Screw** (x 4), through the **Mounting Holes** in the **Mounting Arms** and into the **Mounting Holes** on the **Projector**.

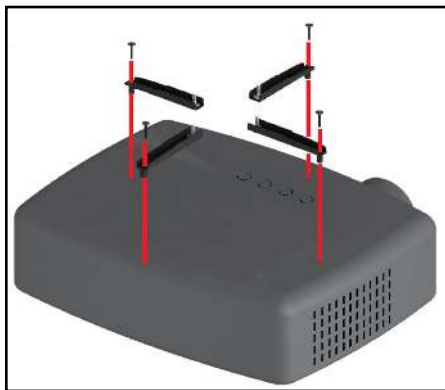

Installing the Mounting Arms


7. Using a **Phillips Head Screwdriver**, tighten the **Installation Screws**. Be careful not to over-tighten.

8. Place the **Mounting Arm Covers** over-top of the **Mounting Arms**, aligning them so that the **Screw** on the **Mounting Arm** is protruding through the **Slot** in the **Mounting Arm Cover**.

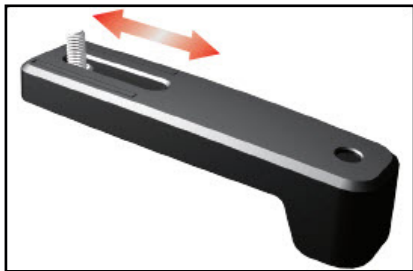

Installing the Mounting Arm Covers

9. Align the **Screws** on the **Mounting Arms** with the appropriate **Cut Outs** on the **Projector Plate**.
10. Insert the **Screws** on the **Mounting Arms** through the **Cut-Outs** in the **Projector Plate**.
11. Place the **Washers** (x 4) and **Nuts** (x 4) onto the **Screws** (x 4) on the **Mounting Arms** and use an **8 mm Wrench** to tighten the **Nuts**.

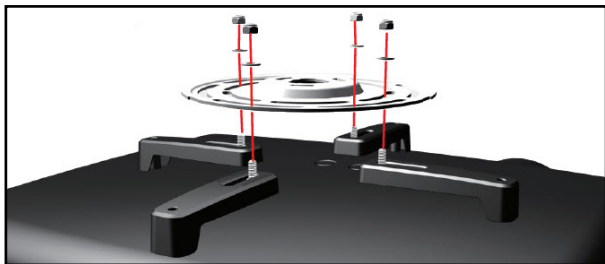


Installing the Projector Plate

12. Place the **Projector Plate Cover** over the **Projector Plate**.
13. Align the **Protrusions** on the bottom of the **Ball-Joint Mechanism** with the **Slots** in the top of the **Projector Plate Cover**.




Installing the Ball-Joint Mechanism

14. Insert the **Protrusions** into the **Slots** and rotate the **Ball-Joint Mechanism** clockwise until it locks into place.

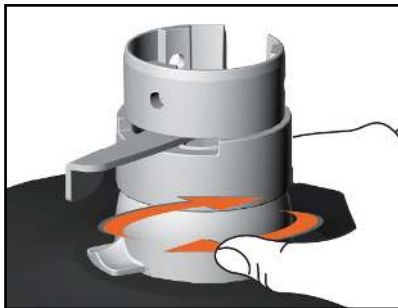


Rotating the Ball-Joint Mechanism

15. Insert one of the **M6 x 12 mm Screws** into the **Lock Screw Hole** on the **Projector Plate Cover** and tighten it using the **5 mm Hex Key** (included).

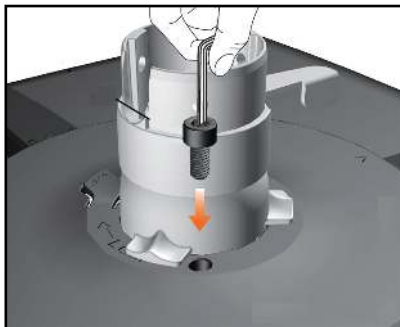

Inserting an M6 x 12 mm Screw


16. Align the **Mounting Holes** on the **Ball-Joint Mechanism** with the **Mounting Holes** on the **Ceiling Plate**.
17. Insert an **M6 x 12 mm Screw** (x 2) through the **Mounting Holes** (x 2) in the **Ball-Joint Mechanism** and into the **Mounting Holes** (x 2) on the **Ceiling Plate**.
18. Using the **5 mm Hex Key**, tighten the **M6 x 12 mm Screws**.

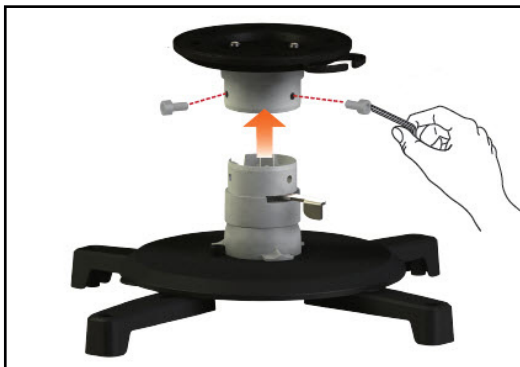

Installing the Ball-Joint Mechanism to the Ceiling Plate

Adjusting the Projector Mount

1. Move the **Lock Switch** on the **Ball-Joint Mechanism** into the **Unlock** position.

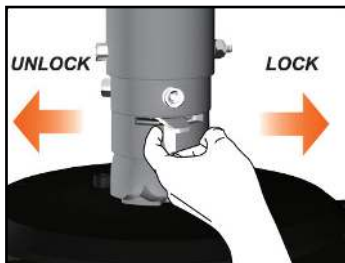


Unlocking the Projector Mount

2. Rotate the **Projector Mount** in order to adjust the direction the **Projector** is pointing.



Rotate the Projector Mount

3. Tilt the **Projector Mount** up or down to adjust the tilt of the **Projector Mount**.

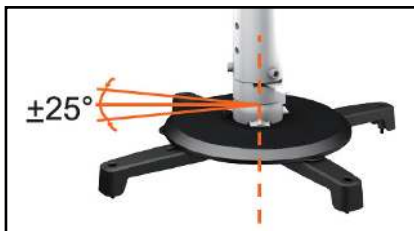


Adjusting the Tilt

4. When you have the **Projector Mount** in the desired position, move the **Lock Switch** on the **Ball-Joint Mechanism** back into the locked position, securing the **Projector** in place.

Adjusting the Torque

1. Using the **5 mm Hex Key**, remove the **M6 x 12 mm Screws** from the **Ball-Joint Mechanism** from either the **Lower Pole** or the **Ceiling Bracket**, depending on your installation method.
2. Using a **Socket Wrench** and **8 mm Socket**, loosen or tighten the **Nut** located in the center of the **Ball-Joint Mechanism**.

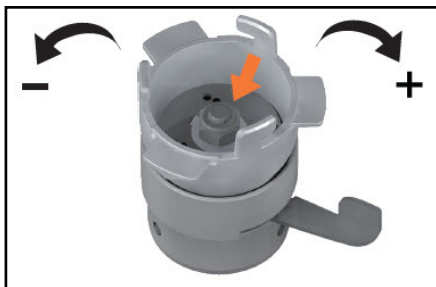

Adjusting the Torque

3. When you have adjusted the torque accordingly, replace the **Ball-Joint Mechanism**. Using the **5 mm Hex Key** tighten the **M6 x 12 mm Screws**, securing the **Ball-Joint Mechanism** back in place.

Warranty Information

This product is backed by a two-year warranty.

For further information on product warranty terms and conditions, please refer to www.startech.com/warranty.

Limitation of Liability

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their officers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of profits, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product.

Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.

Hard-to-find made easy. At StarTech.com, that isn't a slogan. It's a promise.

StarTech.com is your one-stop source for every connectivity part you need. From the latest technology to legacy products — and all the parts that bridge the old and new — we can help you find the parts that connect your solutions.

We make it easy to locate the parts, and we quickly deliver them wherever they need to go. Just talk to one of our tech advisors or visit our website. You'll be connected to the products you need in no time.

Visit www.startech.com for complete information on all StarTech.com products and to access exclusive resources and time-saving tools.

StarTech.com is an ISO 9001 Registered manufacturer of connectivity and technology parts. StarTech.com was founded in 1985 and has operations in the United States, Canada, the United Kingdom and Taiwan servicing a worldwide market.

Reviews

Share your experiences using StarTech.com products, including product applications and setup, what you love about the products, and areas for improvement.

StarTech.com Ltd.

45 Artisans Cres.
London, Ontario
N5V 5E9
Canada

StarTech.com LLP

2500 Creekside Pkwy.
Lockbourne, Ohio
43137
U.S.A.

StarTech.com Ltd.

Unit B, Pinnacle
15 Gowerton Rd.,
Brackmills
Northampton
NN4 7BW
United Kingdom

FR: startech.com/fr

DE: startech.com/de

ES: startech.com/es

NL: startech.com/nl

IT: startech.com/it

JP: startech.com/jp